

Trainings ▾

Preparatory Steps


⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

Drain the lubricating oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/56/56-007-037-tr.html>).

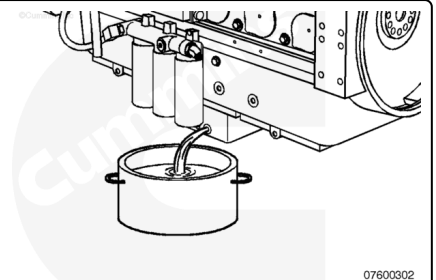


Inspect for Reuse

Remove one of the pipe plugs on either side of the oil pan.


Use a reference gauge of known accuracy, with a minimum temperature capacity of 150°C [300°F].

Install the gauge into the oil pan to verify the reading of the suspect gauge.

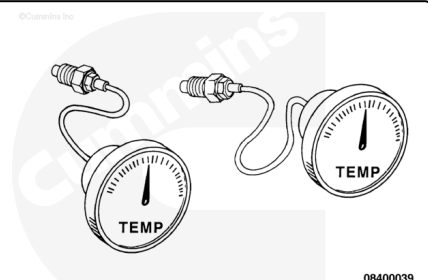

Fill the engine with clean engine oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/56/56-007-037-tr.html>).

Operate the engine.

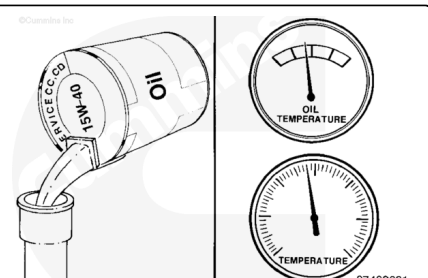


Compare the temperature reading of the master gauge to the suspect gauge.


If the suspect gauge does **not** read the same temperature as the reference gauge, check the following for defects:

- Electrical wiring
- Sending unit.

Replace all defective parts.

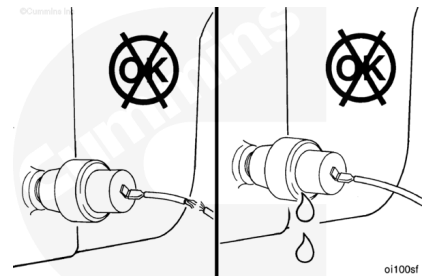


Drain the lubricating oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/56/56-007-037-tr.html>).

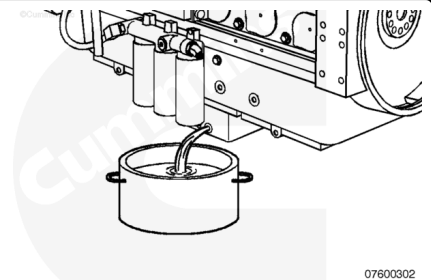

Remove the reference gauge.


Install and tighten the oil pan plug.

Torque Value: 47 n•m [35 ft-lb]

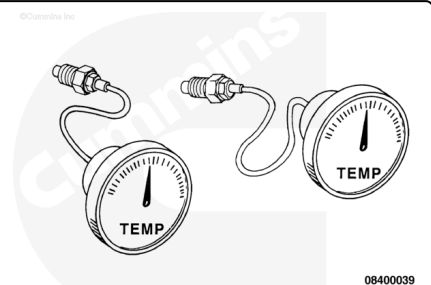


Finishing Steps

Fill the engine with clean engine oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/56/56-007-037-tr.html>).

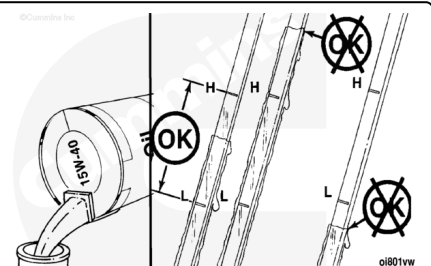

Operate the engine to normal operating temperature.

Check for leaks.

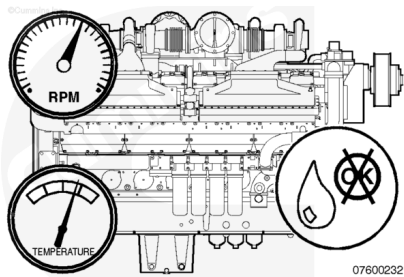

Last Modified: 21-Jul-2005
