


Trainings ▾

Remove

The following explains the removal of the "High Volume" PRELUB™ pump.


Remove the post timer relay wire (1) and the ground wire (2) from the PRELUB™ pump.

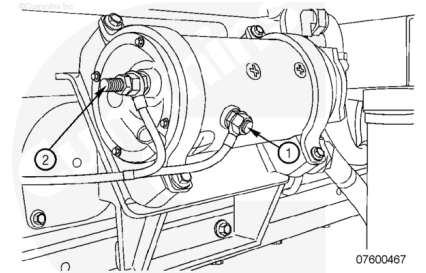


Disconnect the suction hose from the PRELUB™ pump.

Disconnect the other end of the suction hose from the elbow located on the oil pan.

Remove the oil pan capscrew, p-clip, and suction hose.

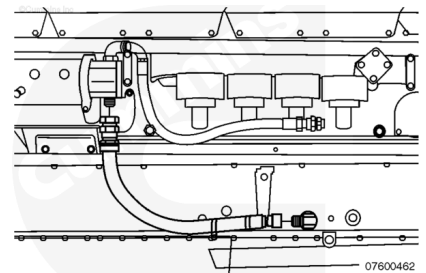


Remove the suction hose elbow.

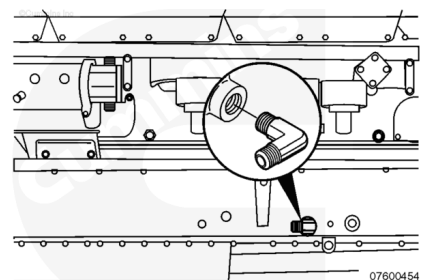

Disconnect the supply hose from the PRELUB™ pump.


Disconnect the supply hose from the male adapter in the filter head.

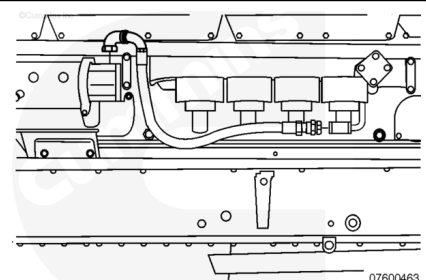


Remove the upper U-shaped pump bracket capscrews.

Loosen the lower U-shaped pump bracket capscrews until the PRELUB™ pump can be removed.

Remove the capscrews and U-shaped pump brackets.

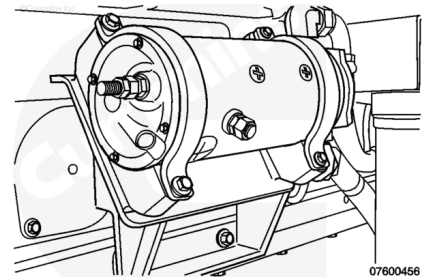


Remove the PRELUB™ pump bracket mounting capscrews and remove the bracket.

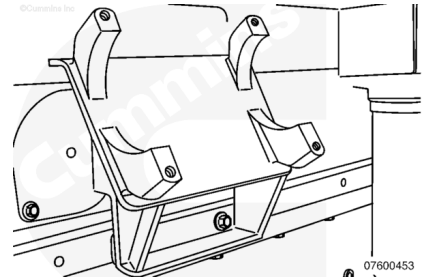

The following steps explain the removal of the "Compact" PRELUB™ pump.


The compact PRELUB™ pump can be fitted with alternative brackets and clamps, depending on the specific application. The location of the pump on the engine may also vary, but the same procedures can be applied. Two of the most common installations are shown in the illustration.

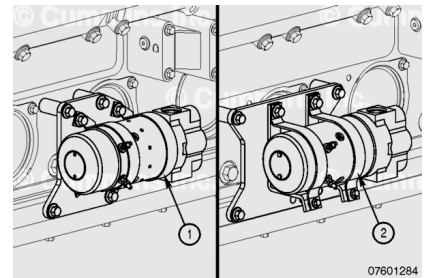

1. Single piece 'loop' clamp
2. 2 piece 'U shaped' clamp


Remove the positive wire (1) and the ground wire (2) from the PRELUB™ pump.

Note : The orientation of the pump may vary. The end of the positive connection stud is marked with red paint when new. If this is no longer visible, it is essential to identify which connection is the positive connection, and mark it accordingly to allow for correct assembly.

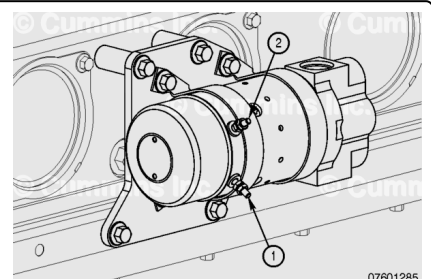


Disconnect the suction hose from the PRELUB™ pump.

Remove any hose clips fitted and disconnect the other end of the suction hose from the fitting located in the oil pan.

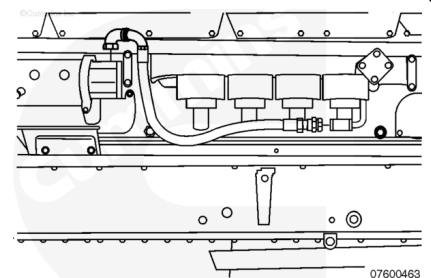


Remove the suction hose elbow.

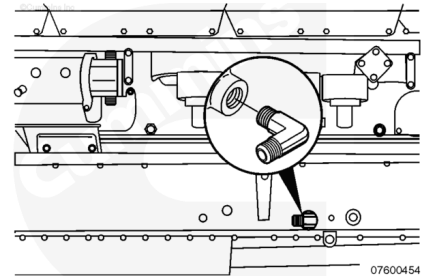


Disconnect the supply hose from the PRELUB™ pump.

Remove any hose clips fitted and disconnect the other end of the suction hose from the fitting located in the oil pan.

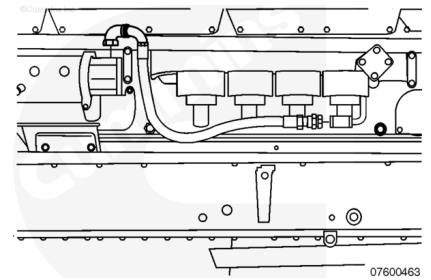

Loosen the clamping capscrews (1) and remove the pump from the engine.

Remove the clamping straps from the mounting bracket.

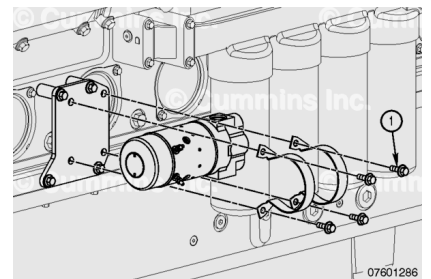

Remove the capscrews that retain the mounting bracket to the engine block.

Remove the mounting bracket.

