


Trainings ▾

Install

Stand-alone

For installation instructions refer to Procedure 007-011
(</qs3/pubsys2/xml/en/procedures/56/56-007-011-tr.html>),
Lubricating Oil Dipstick Tube.

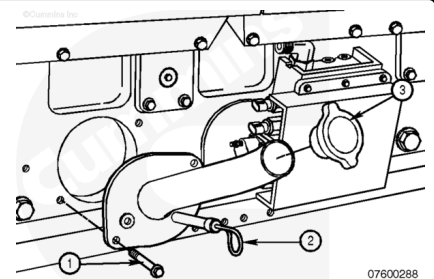


Integral Crankcase Breather

Slide the filler tube over the hand hole cover tube.

Slide the sleeve (2) onto the filler tube (1).


Tighten all hose clamps.

Torque Value: 6 n•m [53 in-lb]

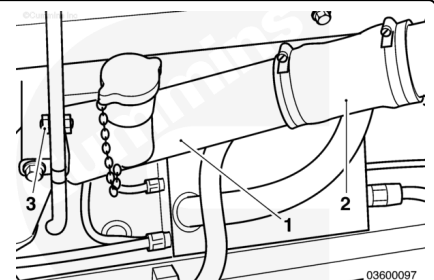

with Electronically Actuated Injector


Install the two hoses and four clamps on the oil fill tube.

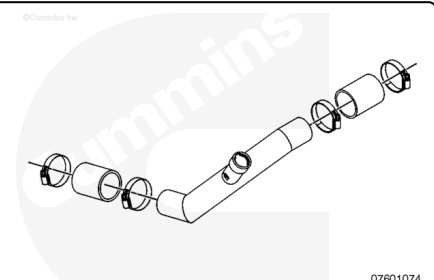

Install the oil fill tube and tighten the hose clamps.

Hose Clamps	8 n.m	[71 in-lb]
-------------	-------	------------

Operate the engine and check for leaks.

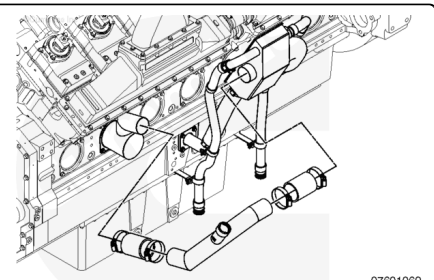

Last Modified: 02-Jan-2006