


Trainings ▾

Install

Single-piece Bracket

⚠ CAUTION ⚠

The Eliminator™ filter can be installed on either side of the engine. Check to be sure the lubricating oil transfer tube has been installed correctly. The filter must be on the opposite bank from the oil transfer tube. If the Eliminator™ filter is installed on the wrong bank, the engine will be severely damaged because of the lack of lubrication.

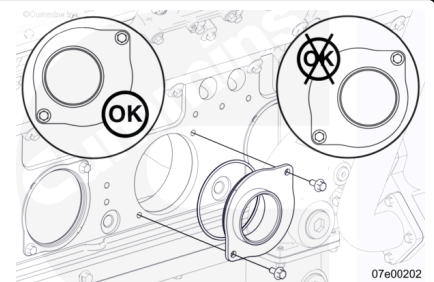

Note : It is recommended that you install the eliminator with the three-piece bracket, where applicable.

Install the Eliminator™ filter handhole cover with the handhole cover o-ring.


Make sure the handhole cover is in correct position on engine.

Tighten the handhole cover capscrews.

Torque Value: 45 n•m [33 ft-lb]

Lubricate the new o-ring seals with vegetable oil and install on both ends of the connection tube.


Install the connection tube into the filter housing.

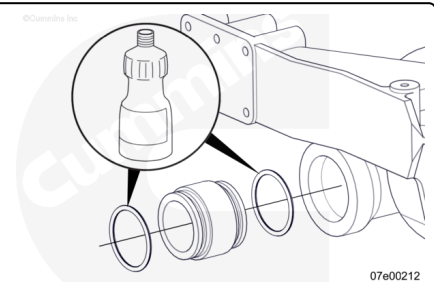

Install four guide studs to the engine in the locations shown.

Note : Do not use threaded guide studs. This will aid in guide stud removal once the Eliminator™ filter is installed.

Install new gaskets over the guide studs.

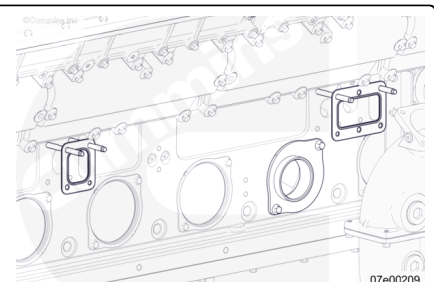


Make sure the six mounting holes are visible through each gasket.

Note : The gasket part number must face away from the cylinder block.

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

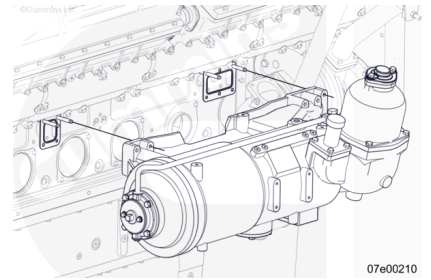

Install the filter over the guide studs while guiding the connection tube into the handhole cover.


Install six capscrews and washers and hand-tighten.

Remove the guide studs and install the remaining capscrews and washers, and hand-tighten.

Tighten the capscrews in sequence illustrated.

Torque Value: 45 n•m [33 ft-lb]

Note : Due to the difficulty in accessing the lower capscrews, the use of a 3/8 drive socket and torque wrench is recommended to gain access to achieve the correct torque value on these capscrews.

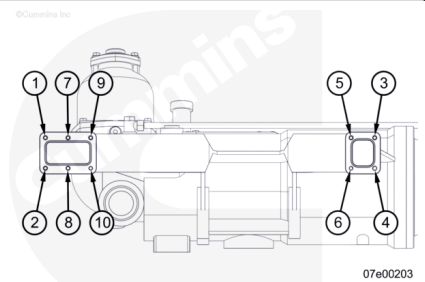

Install the support bracket to the engine and Eliminator™. Hand-tighten all of the capscrews to align the bracket with the block and the Eliminator™ filter.


Tighten the capscrews.

Torque Value:

Pan Rail (1) 80 n•m [59 ft-lb]

Torque Value:

Eliminator™ Filter (2) 68 n•m [50 ft-lb]

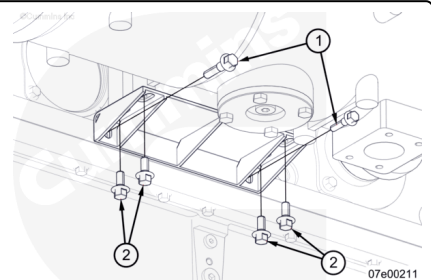


Three-piece Bracket

⚠ CAUTION ⚠

The Eliminator™ filter can be installed on either side of the engine. Check to be sure the lubricating oil transfer tube has been installed correctly. The filter must be on the opposite

bank from the oil transfer tube. If the Eliminator™ filter is installed on the wrong bank, the engine will be severely damaged because of the lack of lubrication.

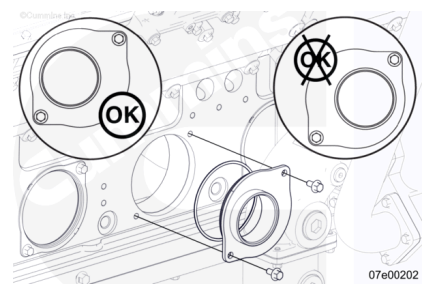

Install the Eliminator™ filter handhole cover with a new gasket.


Make sure handhole cover is in correct position on engine.

Tighten the capscrews in handhole cover.

Torque Value: 45 n•m [33 ft-lb]

Lubricate the new o-ring seals with vegetable oil and install on both ends of the connection) tube.

Install the connection tube into the filter housing.

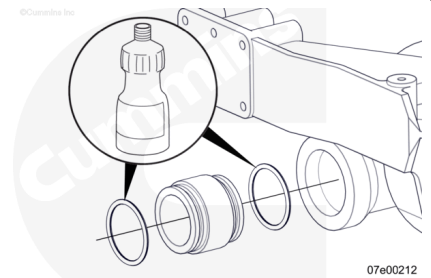


Install four guide studs to the engine in locations illustrated.

Note : Do not use threaded guide studs. This will aid in guide stud removal once the Eliminator™ filter is installed.

Install new gaskets over the guide studs.

Make sure the six mounting holes are visible through each gasket.


Note : The gasket part number must face away from the cylinder block.

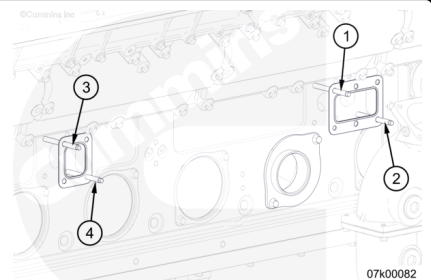

Use the mounting capscrews to install the rear bracket (1) to the oil pan.


Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

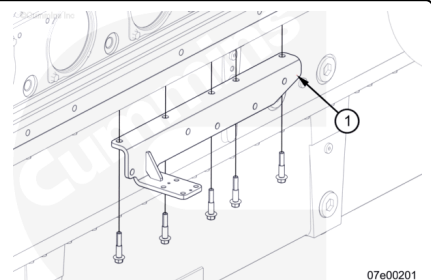


Use the bracket mounting capscrews to install the middle bracket (1). Tighten the capscrews.


Torque Value: 80 n•m [59 ft-lb]

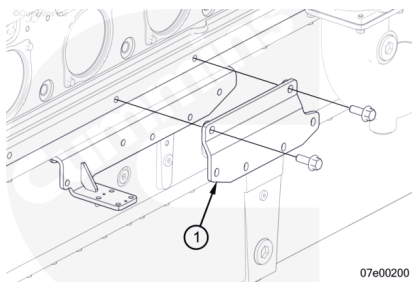

Use the bracket capscrews and nuts to install the front bracket (1).

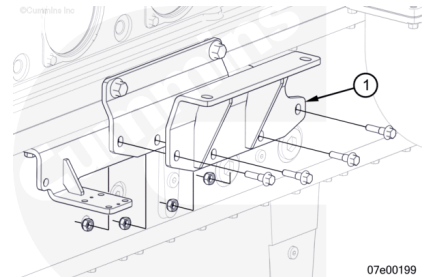


The capscrews should go through all three brackets.
Do **not** tighten the capscrews and nuts.

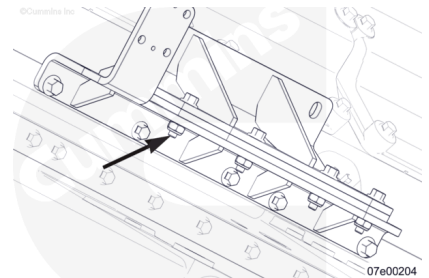

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

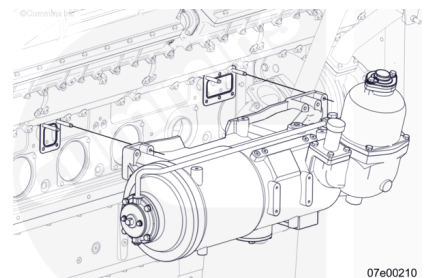

Install the filter over the guide studs while guiding the connection tube into the handhole cover.

If the installation requires spacers, install spacer with new gaskets between filter housing and the cylinder block.

Install new gaskets between the filter body and cylinder block.

Note : The front bottom capscrew needs to be inserted before the Eliminator™ filter is moved into place, due to limited clearance.


Install six capscrews and washers and hand-tighten.

Remove the guide studs and install the remaining capscrews and washers, hand-tighten to the eliminator manifold.

Tighten the capscrews in sequence illustrated.

Torque Value: 45 n•m [33 ft-lb]


Note : Due to the difficulty in accessing the lower capscrews, the use of a 3/8 drive socket and torque wrench is recommended to gain access to achieve the correct torque value on these capscrews.

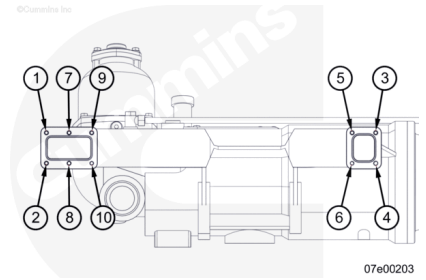

Use capscrews and spacers to secure the filter head front support bracket to the bottom of the filter head.


Install and tighten the two lower support capscrews.

Torque Value: 45 n•m [33 ft-lb]

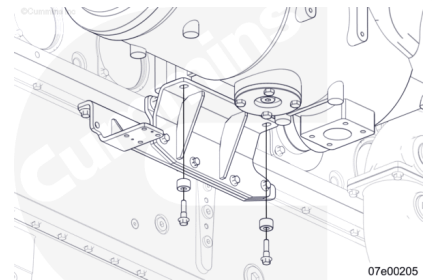

Tighten the capscrews going through all three support brackets.


Torque Value: 45 n•m [33 ft-lb]

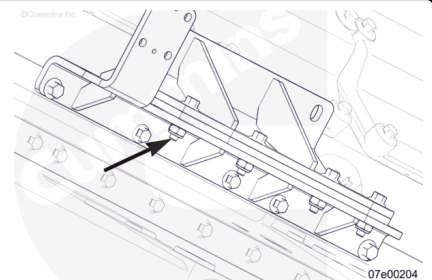

Loosen capscrews in sequence illustrated by at least one full turn.

Tighten capscrews in sequence illustrated in order from 1 to 10.

Torque Value: 45 n•m [33 ft-lb]

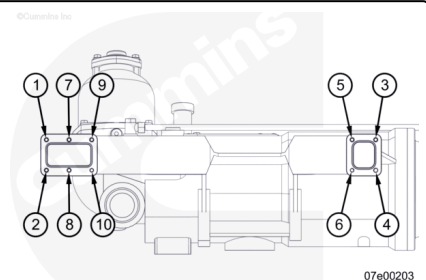

Loosen capscrews by at least one full turn.

Tighten both capscrews again.

Torque Value: 45 n•m [33 ft-lb]

