


Trainings ▾

Remove

⚠ WARNING ⚠


Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

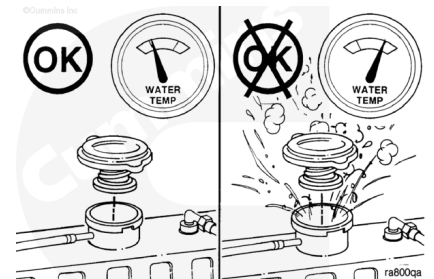

Remove the pressure cap from the radiator.

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

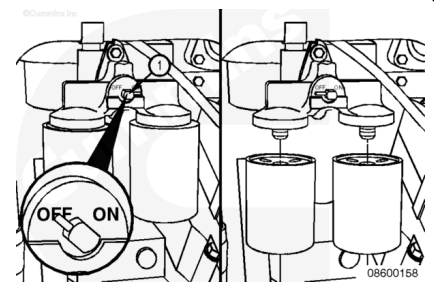

Turn valve (1) on the coolant filter head to the OFF position to prevent water loss.


Remove the coolant filters.

Install

Clean the area around the coolant filter head. Clean the gasket surface of the coolant filter head.

The o-ring can stick on the coolant filter head. Make sure the o-ring is removed.


Discard the coolant filters.

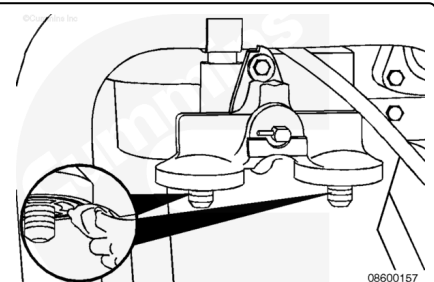

⚠ CAUTION ⚠

When lubricating the seal on the coolant filter do not allow oil to get into the coolant filter. It will adversely affect the SCA.

Lubricate the seal on the coolant filter with clean engine oil.

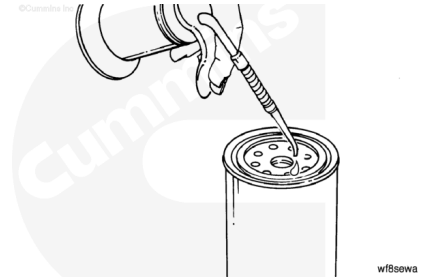

Install the coolant filter.

Turn the coolant filter **clockwise** until the seal touches the coolant filter head.

Turn the coolant filter an additional $\frac{1}{2}$ to $\frac{3}{4}$ of a turn after contact.

Turn the valve (1) on the coolant filter head to the ON position.

