


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

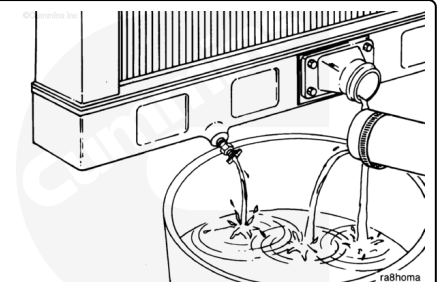


⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.


- Drain the cooling system. Refer to Procedure 008-007 in Section 8. (</qs3/pubsys2/xml/en/procedures/56/56-008-007-tr.html>)

- Remove the coolant filters. Refer to Procedure 008-006 in Section 8. (</qs3/pubsys2/xml/en/procedures/56/56-008-006-tr.html>)

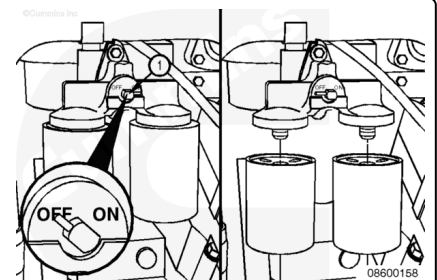

Remove


Remove the two coolant filter head mounting capscrews, and the coolant filter head (4).

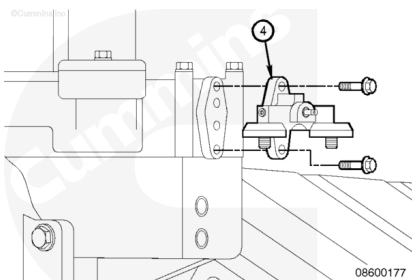

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

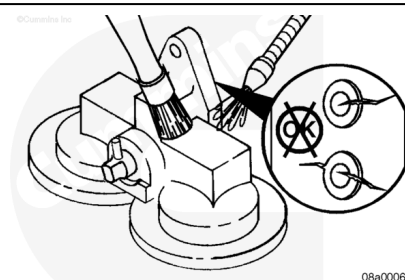

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the coolant filter head and components with solvent and dry with compressed air.

Inspect the coolant filter head for cracks and other damages.

Replace the coolant filter head if cracked or damaged.

Inspect the coolant shutoff valve shaft for pitting or corrosion.


Replace the coolant shutoff valve if pitted or corroded.

Install

Install the coolant filter head on the thermostat housing with two capscrews.

Tighten the capscrews.

Torque Value: 45 N·m [33 ft-lb]

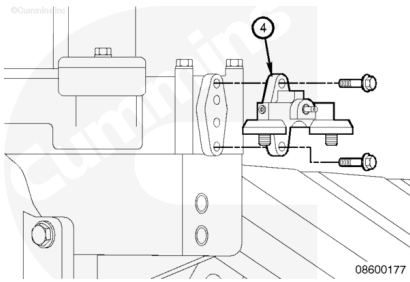

Finishing Steps


⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

- Install the coolant filters. Refer to Procedure 008-006 in Section 8. (/qs3/pubsys2/xml/en/procedures/56/56-008-006-tr.html)

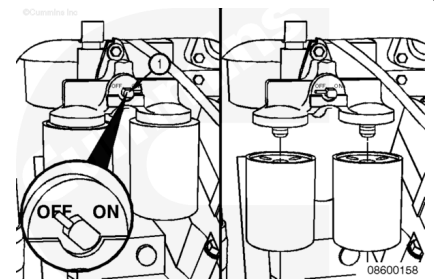

- Fill the cooling system. Refer to Procedure 008-007 in Section 8. (/qs3/pubsys2/xml/en/procedures/56/56-008-007-tr.html)
- Operate the engine and check for leaks.

