


Trainings ▾


Preparatory Steps

- Remove the thermostats (9) from the thermostat housing. Refer to Procedure 008-013 in Section 8. (</qs3/pubsys2/xml/en/procedures/56/56-008-013.html>)

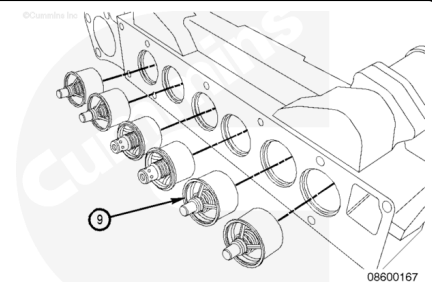

Remove

Note : The procedures used to replace the thermostat seal in the jacket water aftercooling system and the low-temperature aftercooling system are similar.

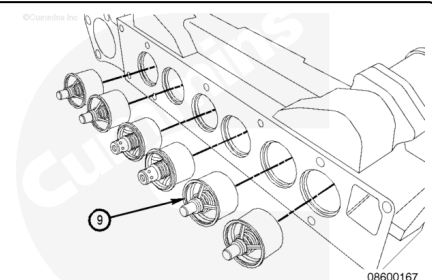


⚠ CAUTION ⚠

Use care when removing the seal. The thermostat housing can be damaged during removal.

The thermostat housing has a machined counterbore to locate the seals.

The two center thermostats are for LTA cooling and the other four thermostats control engine cooling.

Use a Snap-On™ pry bar, Part Number 1650, or equivalent, to remove the thermostat seals. Position the pry bar tip under the top flange of the seal and pry upward. Remove the seals from the housing.

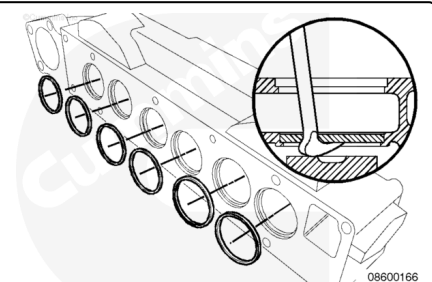


Install

Before installation make sure that the counterbore is clean and free of contaminants.

The seal **must** be installed with the part number positioned upward (facing seal driver).

Use a mallet and seal driver, Part Number 2892254, to install the seal.

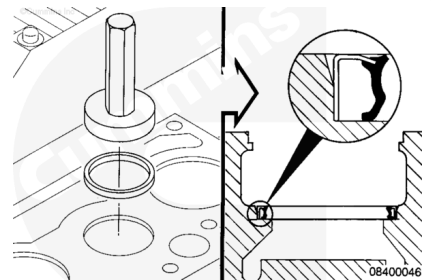


Make sure the seals are installed level in the seal counterbore.

Use the thermostat counterbore ledge as a reference. Measure the depth of the seal in four evenly-spaced locations around the seal circumference.

All seal depth measurements **must** be within 0.5 mm [0.020 in].

If the seal is **not** square use the seal driver tool to try to correct , or install a new seal.

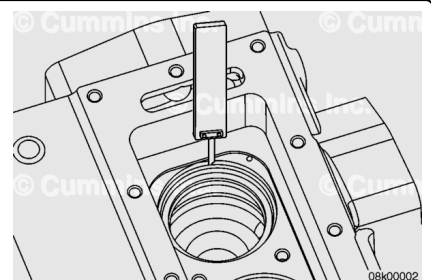

Finishing Steps

- Install the thermostats (9) in the thermostat housing.
Refer to Procedure 008-013 in Section 8.
(</qs3/pubsys2/xml/en/procedures/56/56-008-013.html>)

