


Trainings ▾

Remove

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

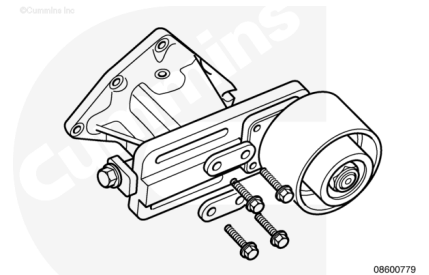


On engines fitted with the slide arm adjuster, remove the four capscrews from the adjusting bracket.

Remove the fan idler assembly and adjusting bracket, as an assembly.

⚠ WARNING ⚠

The belt tensioner and the pivot arm assembly will rotate during removal. Personal injury can result. To reduce the possibility of personal injury, use a hoist or get assistance to lift the component.

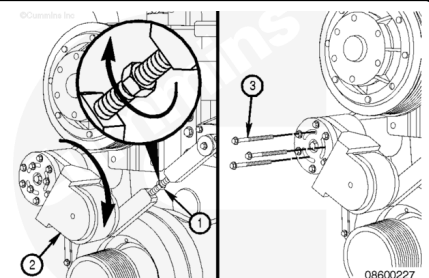


On engines fitted with the control arm adjuster, loosen the belt control rod (1) to release the idler arm assembly (2).

Remove the three capscrews (3) from the idler arm assembly (2).

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

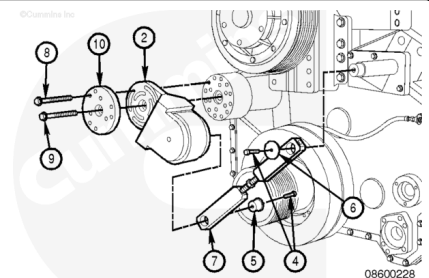

Remove the two capscrews (4), retainer plug (5), washer (6), and the control rod (7).


Remove the six capscrews (8).

Remove the capscrew (9), washer plate (10), and idler arm assembly (2).

For engines that use a Rockford™ fan clutch, the actuator bracket (1) has a solenoid bracket (2) attached by using the actuator bracket mounting capscrews. Both the solenoid bracket and actuator bracket are removed at the same time.


Remove the actuator bracket capscrews.

Remove the actuator bracket (1) and the solenoid bracket (2).

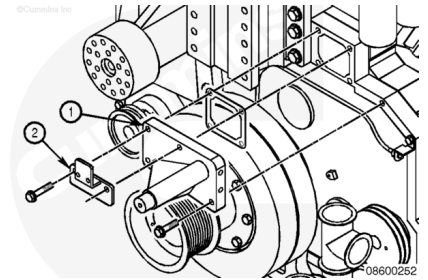

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

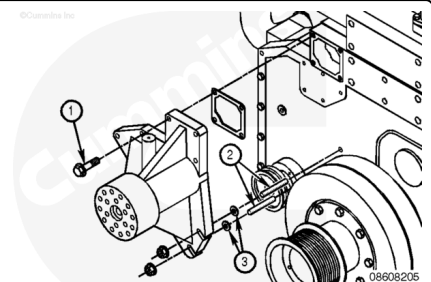

Use the correct lifting equipment to remove the idler pulley support bracket.

Remove the lower nuts from the idler pulley support bracket.

Remove the capscrews (1) from the idler pulley support bracket.

Remove the idler pulley support bracket.

Remove the spacers (3) and studs (2).