


Trainings ▾

Preparatory Steps


- Remove the fan. Refer to Procedure 008-040 in Section 8. (</qs3/pubsys2/xml/en/procedures/56/56-008-040-tr.html>)
- Remove the fan belt. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/56/56-008-002-tr.html>)
- Remove the fan hub. Refer to Procedure 008-036 in Section 8. (</qs3/pubsys2/xml/en/procedures/56/56-008-036-tr.html>)

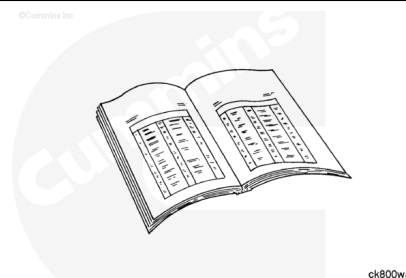

Remove

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

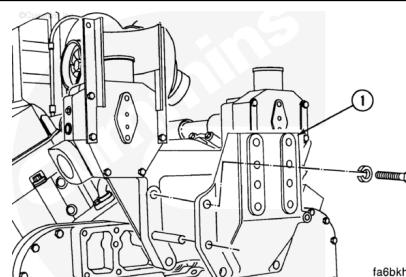


Remove the capscrews and the fan hub bracket (1).

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

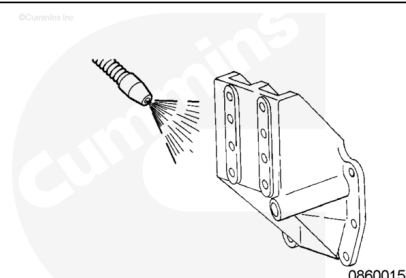

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.


Clean the fan hub bracket using solvent and steam.

Dry the fan hub bracket with compressed air.

Check the fan hub bracket support areas for cracking or fretting.

Replace the fan hub bracket support if damaged.


If the fan hub bracket is replaced, make sure to install the correct bracket. All fan hub brackets are **not** the same. The center location and spacing from the center of the block can be different.

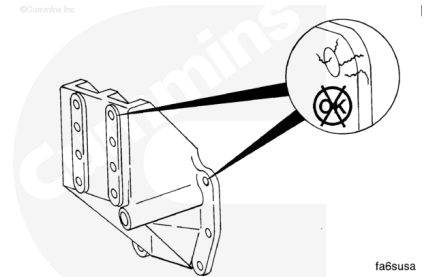

Install

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

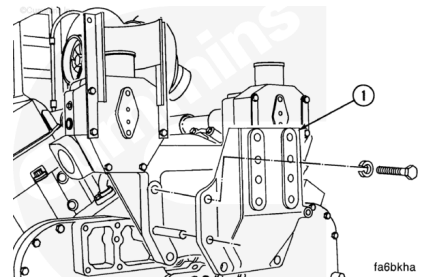

Install the fan hub bracket (1) and the capscrews.

Tighten the fan hub bracket capscrews.

Torque Value:

1. 195 n•m [144 ft-lb]

2. 550 n•m [406 ft-lb]

Finishing Steps

- Install the fan hub. Refer to Procedure 008-036 in Section 8. (</qs3/pubsys2/xml/en/procedures/56/56-008-036-tr.html>)
- Install the fan belt. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/56/56-008-002-tr.html>)
- Install the fan. Refer to Procedure 008-040 in Section 8. (</qs3/pubsys2/xml/en/procedures/56/56-008-040-tr.html>)
- Operate the engine and check for proper operation.

