


Trainings ▾

Install

Standard

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

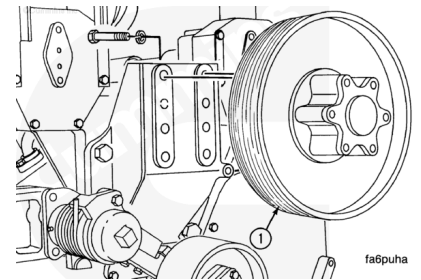

Install the fan hub, the eight washers, and the capscrews.


Tighten the fan hub capscrews.

Torque Value: 280 n•m [207 ft-lb]

Rockford

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

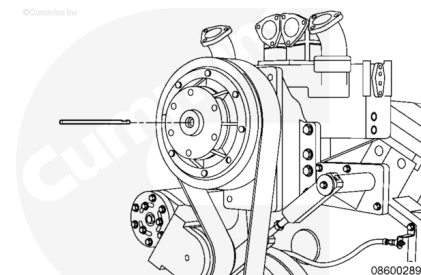

Install the fan hub and capscrews.

Tighten the capscrews.

Torque Value: 280 n•m [207 ft-lb]

For fan clutches equipped with speed sensors, install the speed sensor and tighten.

Torque Value: 30 n•m [22 ft-lb]


Install the solenoid onto the solenoid bracket with capscrews and tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

Install the o-rings onto the three male connections and lubricate with clean engine oil.

Install the following and tighten:

- Straight male union into sump port (1).
- Elbow into supply port (2)
- Elbow into control port (3).

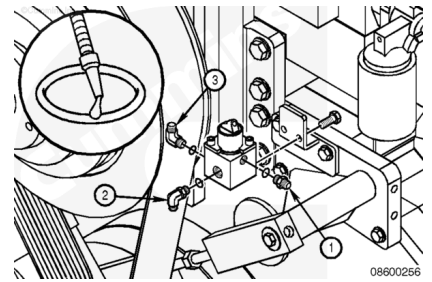


Torque Value: 24 n•m [212 in-lb]

Install the o-ring onto the tee and lubricate with clean engine oil.

Install the tee into the top left bank of the gear cover and tighten the tee.

Torque Value: 47 n•m [35 ft-lb]

The final position of the center hose port is facing down.

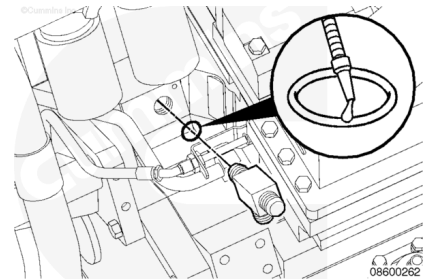


Install the o-ring onto the tee and lubricate with clean engine oil.

Install the tee into the lower left bank port in the front gear cover and tighten the tee.

Torque Value: 11 n•m [97 in-lb]

The final position of the tee is with the number 4 hose connection facing forward and the number 8 hose connection facing to the rear.

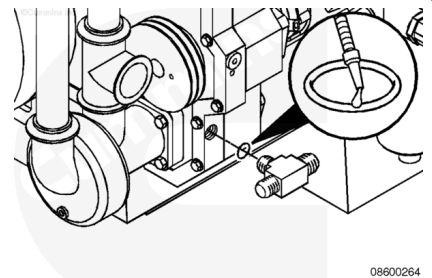


Connect the number 4 solenoid supply hose to the supply port of the solenoid valve.

Route the supply hose to the lower tee in the front gear cover and connect it to the tee.

Tighten the hose nuts.


Torque Value: 48 n•m [35 ft-lb]

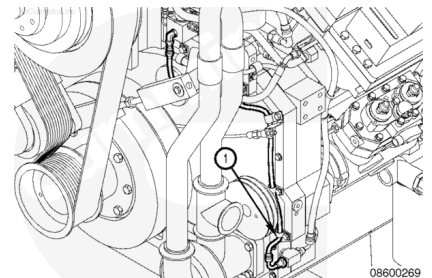

Attach the hose with two p-clips to the lower front gear cover capscrews located behind the accessory drive pulley.

Install a third P-clip under the front trunnion remote grease nipple bracket.

Secure the solenoid supply hose to the fuel hose using wire ties.

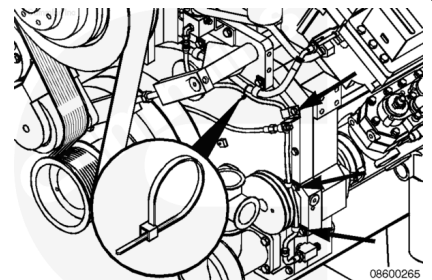

Tighten the P-clip capscrews.

Torque Value: 80 n•m [59 ft-lb]

The lower hose elbow faces slightly outboard, and the top elbow faces slightly to the rear to allow the number 4 hose elbow to clear the number 8 supply hose.

Connect the number 8 fan hub supply hose to the top port of the fan clutch.

Route the hose to the lower tee on the front gear cover and connect the hose.

Tighten the hose nuts.


Torque Value: 48 n•m [35 ft-lb]

For engines equipped with an air compressor, secure the number 8 fan hub supply hose to the water tube with a wire tie.

For engines that are **not** equipped with an air compressor, secure the fan hub supply hose at a higher location with a wire tie.

Secure the hose with a P-clip installed to the front lower air intake manifold capscrew.

Torque Value: 16 n•m [142 in-lb]

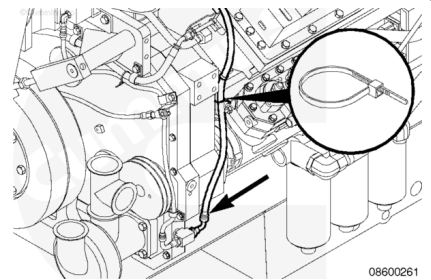

Connect the number 4 solenoid drain hose to the straight male connector in the sump port (1) of the solenoid (2).


Route the drain hose to the lower port in the upper front gear cover tee (3) and connect the hose.

Tighten the hose nuts.

Torque Value: 16 n•m [142 in-lb]

Secure the hose with a P-clip connected to the actuator bracket.

Torque Value: 16 n•m [142 in-lb]

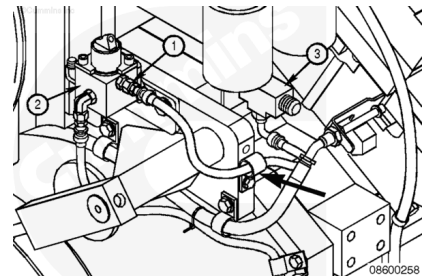


Connect the number 4 solenoid-to-clutch drain hose to the control port (1) in the solenoid.

Route the hose to the top of the fan clutch and connect the hose.

Tighten the hose nuts.

Torque Value: 16 n•m [142 in-lb]

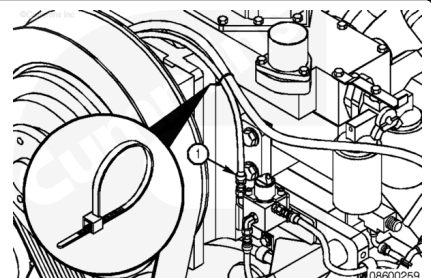

Secure the hose to the number 8 fan supply hose with a wire tie.


Connect the number 12 drain hose (1) to the connector in the side of the fan clutch.

Route the hose to the upper tee in the front gear cover and connect the hose.

Tighten the hose nuts.

Torque Value: 95 n•m [70 ft-lb]

Secure the hose to the fan hub supply hose with wire ties.

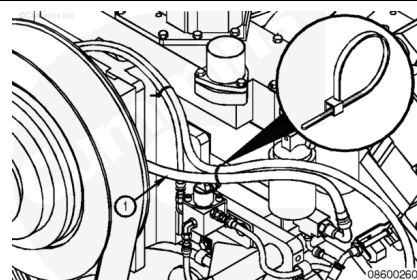

Secure the three hoses connected to the fan clutch together to provide an orderly routing.

Make sure all of the hoses are routed so they are clear of any rotating parts.

