


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

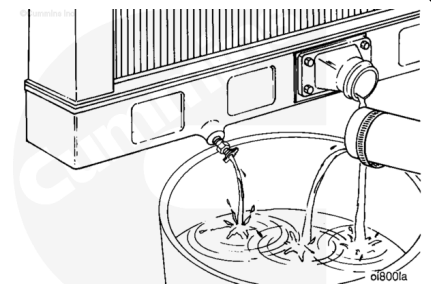

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

Drain the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/56/56-008-018-tr.html>).


Remove

Aftercooled Engines


Disconnect the lower radiator hose from the water pump inlet.

Disconnect the lower radiator hose from the radiator bottom tank.


Remove the lower radiator hose.

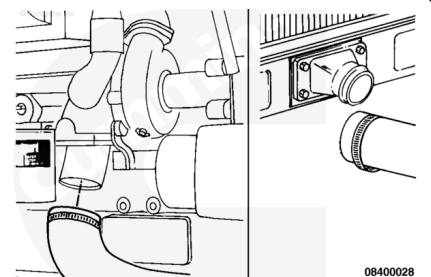

Remove the upper radiator hoses from the thermostat housing.

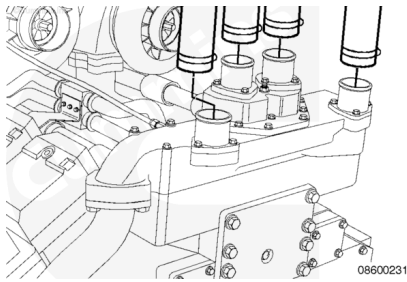

Remove the upper radiator hoses from the top tank of the radiator.

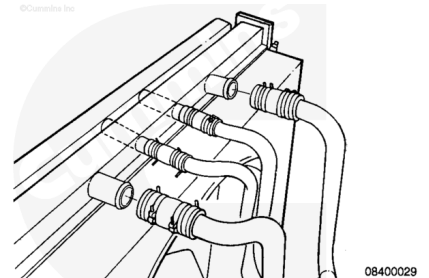


LTA


Disconnect the lower radiator hose from the water pump inlet.

Disconnect the lower radiator hose from the radiator bottom tank.


Remove the lower radiator hose.

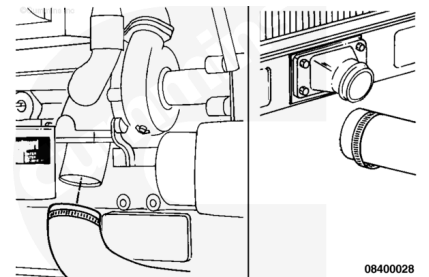

Remove the low temperature aftercooling hoses from the thermostat housing.

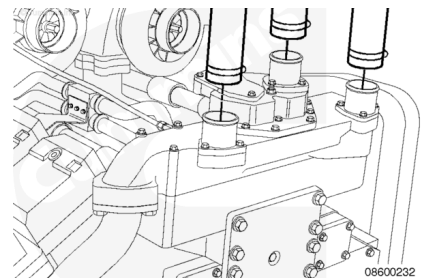


Remove the low temperature aftercooling radiator hoses from the top tank of the radiator.

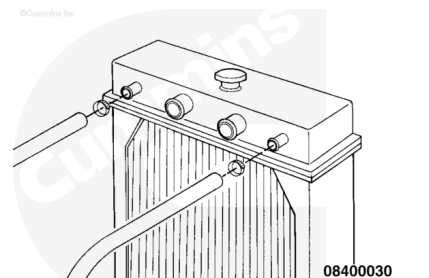

Inspect for Reuse

⚠ CAUTION ⚠

Do not bend or deform the hoses during inspection. This can cause the hoses to crack.

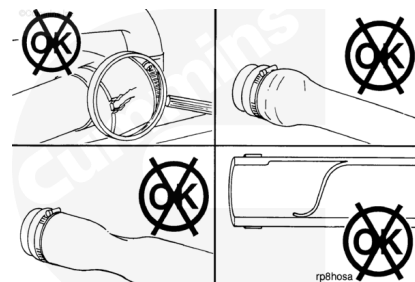


Check all hoses for cracks, cuts, or collapsing.

The silicone engine coolant hose will exhibit swelling due to the elasticity of the hose.

Install


Aftercooled Engines

Install the upper radiator hoses to the thermostat housing.
Tighten the clamps.

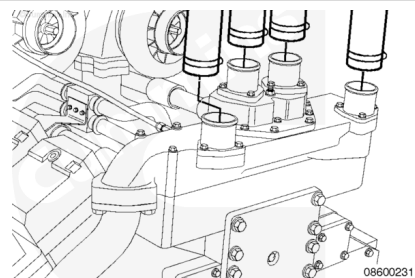


Worm Clamp	5 n.m	[44 in-lb]
T-Bolt Clamp	8 n.m	[71 in-lb]

Install the upper radiator hoses to the top tank of the radiator.
Tighten the clamps.

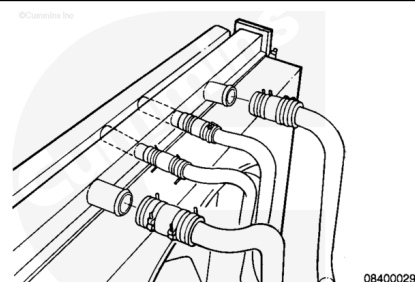

Worm Clamp	5 n.m	[44 in-lb]
T-Bolt Clamp	8 n.m	[71 in-lb]


Install the lower radiator hose to the radiator bottom tank.
Tighten the clamps.

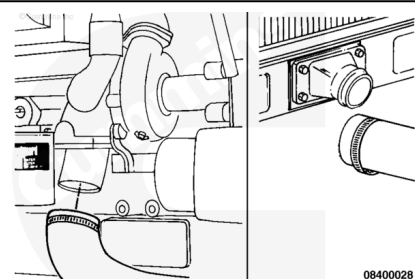

Worm Clamp	5 n.m	[44 in-lb]
T-Bolt Clamp	8 n.m	[71 in-lb]

LTA


Install the upper low temperature aftercooling radiator hoses to the thermostat housing. Tighten the clamps.

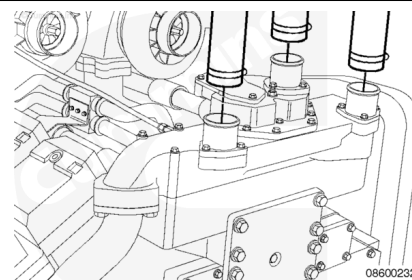

Worm Clamp	5 n.m	[44 in-lb]
T-Bolt Clamp	8 n.m	[71 in-lb]


Install the low temperature aftercooling radiator hoses to the top tank of the radiator.

Tighten the clamps.

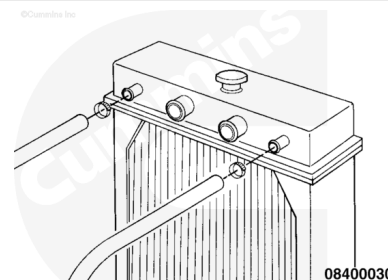

Worm Clamp	5 n.m	[44 in-lb]
T-Bolt Clamp	8 n.m	[71 in-lb]

Install the lower radiator hose to the water pump inlet. Tighten the clamp.

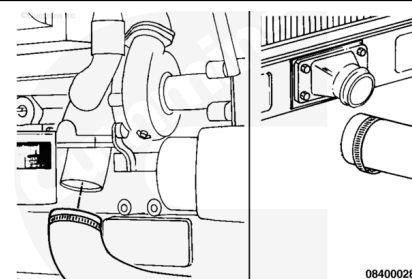

Worm Clamp	5 n.m	[44 in-lb]
T-Bolt Clamp	8 n.m	[71 in-lb]


Install the lower radiator hose to the radiator bottom tank. Tighten the clamps.

Worm Clamp	5 n.m	[44 in-lb]
T-Bolt Clamp	8 n.m	[71 in-lb]

Finishing Steps

Fill the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/56/56-008-018-tr.html>).

Operate the engine to 70°C [160°F] coolant temperature. Check for leaks.

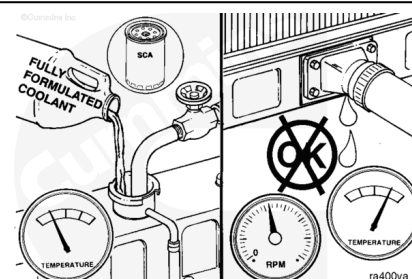

Last Modified: 05-Feb-2004
