


Trainings ▾

Remove

Jacket

Note : The procedure for the QSK45 engine is shown. The procedure for the QSK60 engine is similar.

Open the draincock on the engine (1) and on the water pump (2).

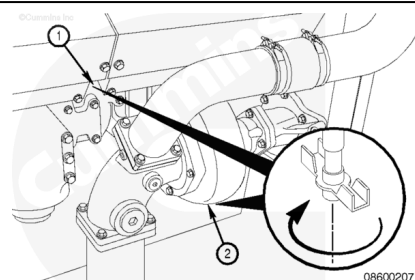


Remove the bypass tube hose clamp (3).

Remove the four capscrews (4), the bypass tube (5), and the gasket (6).

Remove the four capscrews (7), the inlet tube (8), and the gasket (9) from the water pump inlet.


Discard the gaskets.

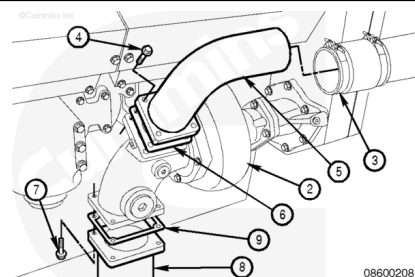

Remove the two capscrews (10) from the engine (1) and the water pump support bracket (11).


Remove the two capscrews (12) from the water pump (2) and the water pump support bracket (11).

Remove the capscrew (13), two spacers (14), and the water pump support bracket (11) from the water pump (2), and the engine (1).

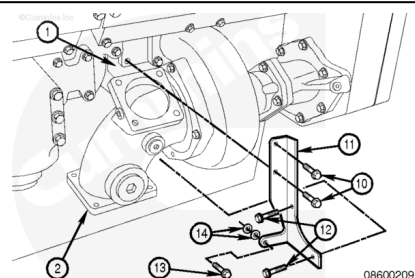

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

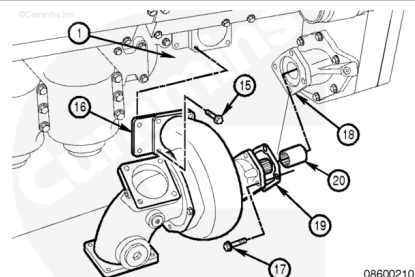

Remove the four capscrews (15) from the water pump adapter (16) and the engine (1).

Remove the four capscrews (17) from the water pump and the water pump drive assembly (18).


Remove the water pump, gasket (19), and the collar (20) from the water pump drive assembly (18).

Discard the gasket.


Dual Impeller

Note : The procedure for the QSK60 Tier II engine is shown. The procedure for the QSK50 Tier II is similar.

Open the draincock on the engine block (1) and the water pump (2).

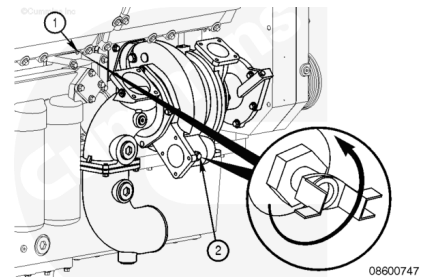

Remove the two brackets and U-clamps (1) from the low temperature aftercooler outlet (2) and jacket water bypass pipes (3).

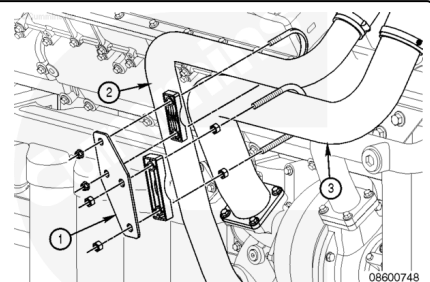


Remove the hose clamps (1) from the low temperature aftercooler outlet (2) and the jacket water bypass pipe (3).

Remove the U-clamp (4) from the jacket water bypass pipe (3).

Remove the four capscrews (5), low temperature aftercooler outlet (2), and the gaskets.


Remove the four capscrews (6), the jacket water bypass pipe (3), and the gaskets.

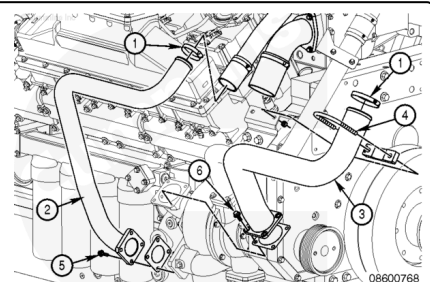


Remove the bracket/clamp (1) from the low temperature aftercooler bypass pipe (2).

Remove the hose clamp (3) from the low temperature aftercooler bypass pipe (2).


Remove the bypass pipe (2).

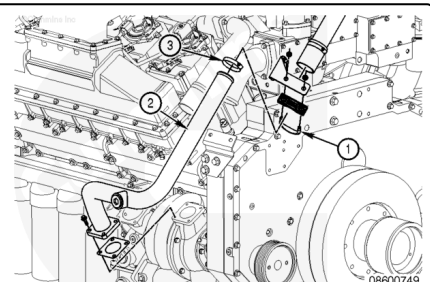

Remove the four capscrews and the jacket water radiator inlet connection.

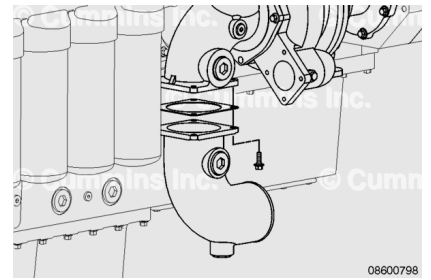


Remove the capscrews and the jacket water inlet connection.

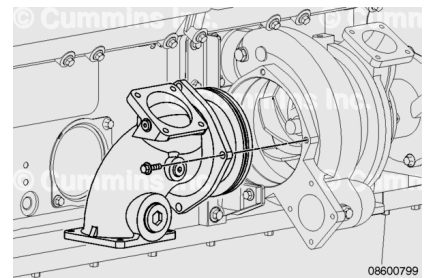

Remove the two capscrews (2) from the engine block (1) and the water pump support bracket (3).


Remove the two capscrews (2) from the water pump (4) and the water pump support bracket (3).

Remove the capscrews (2) and the water pump support bracket (3) from the water pump (4) and the engine block (1).

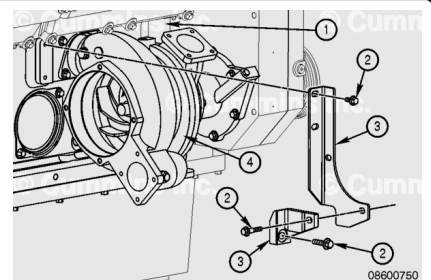

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

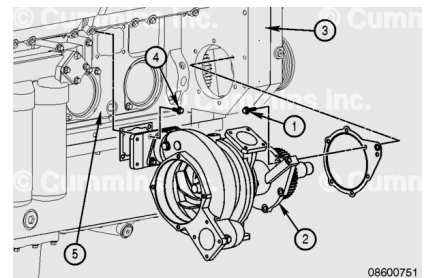

Remove the six capscrews (1) from the water pump (2) and the gear housing (3).

Remove the four capscrews (4) from the engine block (5).

Remove the water pump from the front gear housing.

