


Trainings ▾

Remove


Note : The procedure for the QSK45 engine is shown. The procedure for the QSK60 engine is similar.

Remove the plug (1) on the low-temperature aftercooler water pump (2) to drain the remaining or trapped coolant from the engine (3).

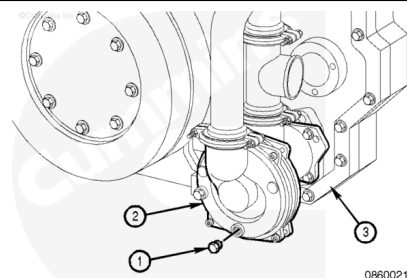

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

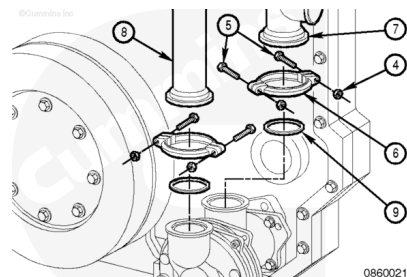

⚠ CAUTION ⚠


Do not support the weight of the water pump on the shaft end. Damage to the coupling or shaft can occur.

Remove the four nuts (4), capscrews (5), and the two clamps (6) from the inlet pipe (7) and bypass pipe (8).

Position the inlet pipe (7) and bypass pipe (8) aside to remove the three gaskets (9). Discard the old gaskets.


Remove the banjo capscrew (1) from the low-temperature aftercooler water pump.

Discard the sealing washers (2).

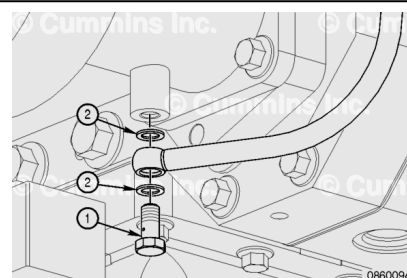


Note : Inspect the oil feed hose for damage. If replacement is required, remove as instructed in the following steps.

Disconnect the oil feed hose (2) from the elbow (1) on the front gear housing.

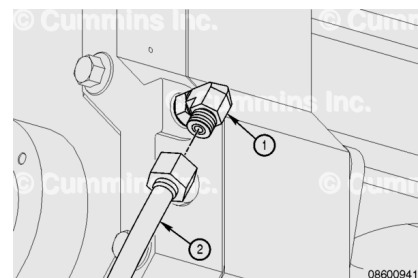

Remove the capscrew that attaches the oil feed hose P-clip (1) to the front gear housing and remove the oil feed hose.

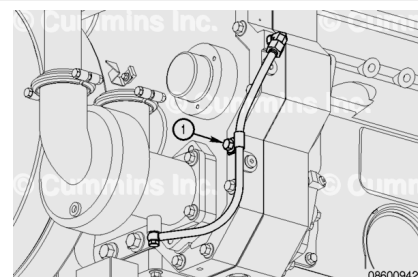

Remove the four capscrews (10), the low-temperature aftercooler pump (2), and the o-ring (11) from the engine (3).

Inspect the o-ring for damage.

Discard the o-ring if damaged.

