


Trainings ▾

Remove

⚠ CAUTION ⚠

Improper use of the standard puller, Part Number ST-647, will damage the internal threads of the accessory driveshaft.

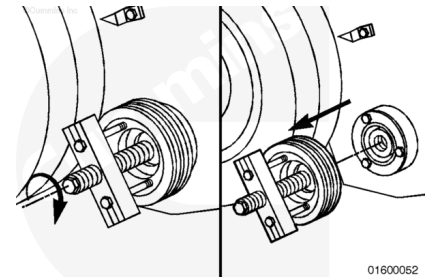


01600052

Use a standard puller, Part Number ST-647, or equivalent, to remove the accessory drive pulley.

Remove and discard oil seal sleeve from pulley.

Remove and discard oil seal. Refer to Procedure 001-003 in Section 1. (</qs3/pubsys2/xml/en/procedures/56/56-001-003-tr.html>)

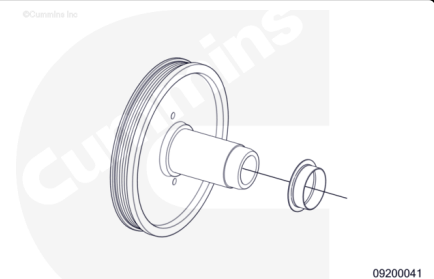


09200041

Clean and Inspect for Reuse

⚠ WARNING ⚠


When using solvents, acids or alkaline materials for cleaning, follow the manufacturers recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

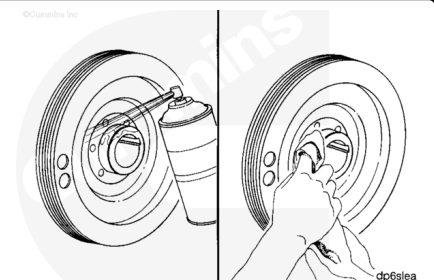


dp6slea

Use solvent and a clean shop towel to clean the pulley wear sleeve.

Inspect the pulley for cracks, wear in the belt grooves, or other damage.

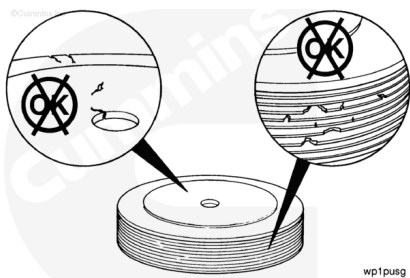


Inspect the mating surface and the bore of the pulley for damage.

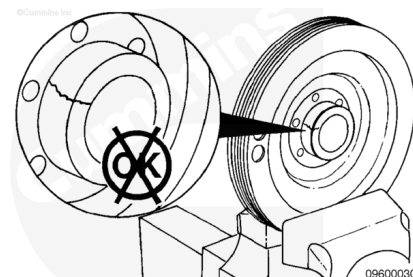

Measure the inside diameter of the pulley.

Accessory Drive Pulley Inside Diameter		
mm		in
34.912	MIN	1.3745
34.938	MAX	1.3755

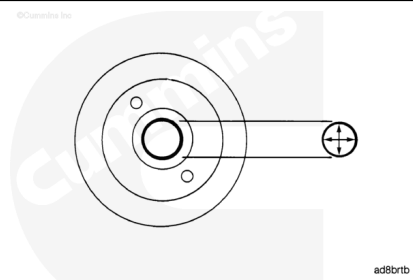


Install

⚠ CAUTION ⚠

Do not lubricate the drive seal. The seal must be clean and dry or the seal will leak.

⚠ CAUTION ⚠

Do not use a hammer to drive the pulley into position. Damage to the thrust bearing will result.

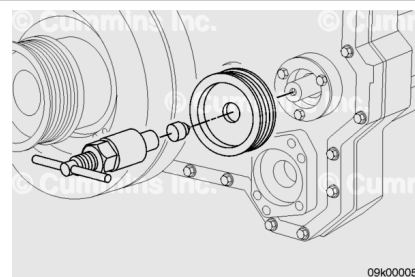

Install new oil seal. Refer to Procedure 001-003 in Section 1.
(/qs3/pubsys2/xml/en/procedures/56/56-001-003-tr.html)

Lubricate the outside of the shaft and the inside of the pulley with clean engine oil.

Insert the adapter, Part Number 3163373, into the pulley installation tool, Part Number 3376326.

Using the pulley installation tool, install the pulley on the shaft until it touches the step on the shaft.

Remove the tool and adapter.

Last Modified: 05-Mar-2021
