



## Trainings ▾

### Remove

The low-pressure turbochargers are used **only** on the QSK60 two-stage engine configuration, and are mounted to the two-stage frame assembly above the high-pressure turbochargers.

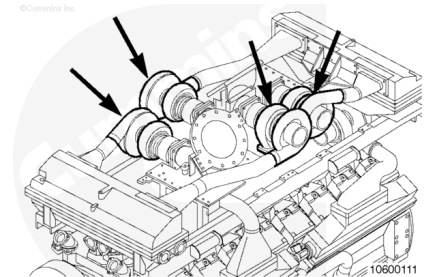


Determine which of the four low-pressure turbochargers requires removal. If it is a left bank rear or right bank front turbocharger, loosen the clamps on the hose between the turbocharger and the intercooler connection.

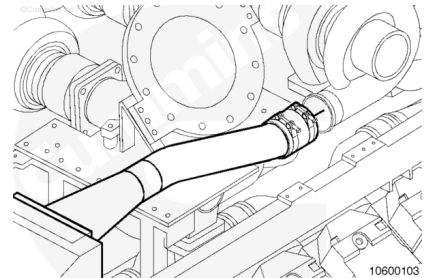

Disconnect the oil supply hose.

Verify the o-ring is in the correct position and has **not** been damaged.

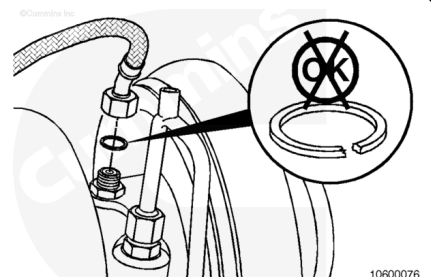


Remove the two oil drain line capscrews (1).


Remove the oil drain line (2) from the turbocharger (3).

Discard the gasket (4).


Discard the hose if it is cracked or frayed.

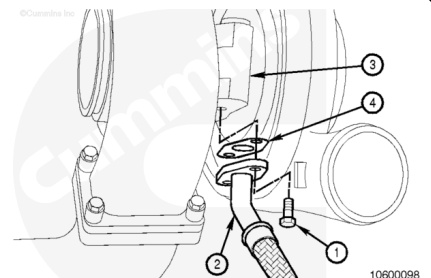

Remove the inlet piping to the turbocharger.

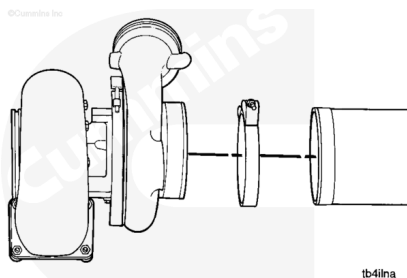


Remove the V-band clamp between the exhaust bellows and the turbocharger.

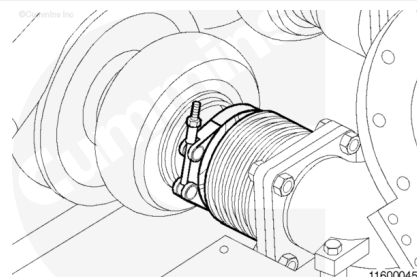

**⚠ WARNING ⚠**

**This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.**

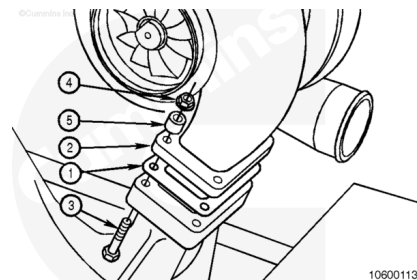

Note the position of the spacers and direction of capscrews for assembly.

Remove the four capscrews (3), spacers (5), and flange nuts (4).

Remove the turbocharger (2) and gasket (1).