


Trainings ▾

Remove

It is a good practice to mark the location of all lines during removal.


Disconnect the coolant lines from the thermostat housing.

Position coolant lines aside.

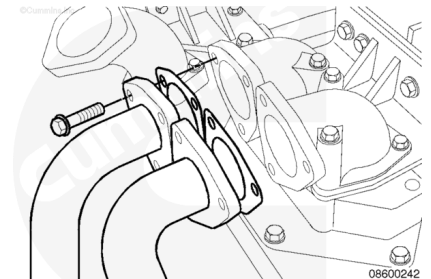


Remove the 12 capscrews from each of the four intercooler intake crossovers and the two intercoolers.

Remove and discard the gasket.

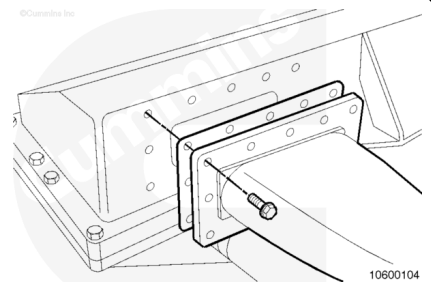


Loosen the hose clamps on each end of the four air connection hoses for the four intercooler intake crossovers and the four low-pressure turbochargers.

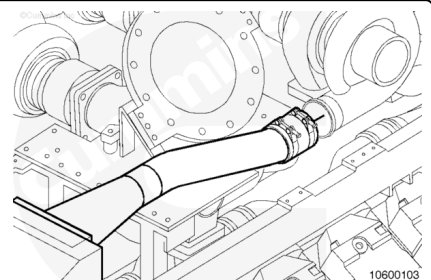

Note : The left rear high-pressure turbocharger connection is shown. The other high-pressure turbocharger connections are similar.

Loosen the two intake hose clamps on the four high-pressure turbochargers and the two intercoolers.


Disconnect the hose clamp at the intercooler.

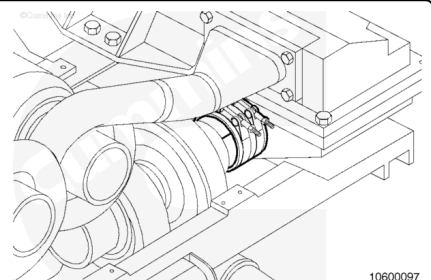


Note : The front intercooler water supply and return connections are shown. The rear intercooler

connections are similar.


Disconnect the water supply and return piping from the intercoolers.

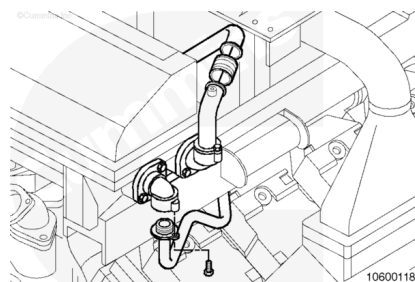

Remove the capscrews from each of the four intercooler supports.

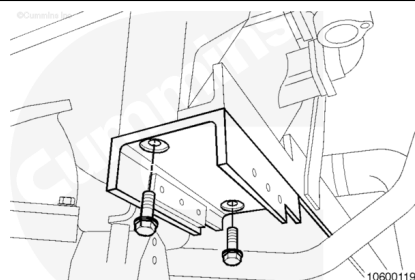

Remove the lifting eye from the bracket between the intercooler and the two-stage frame.

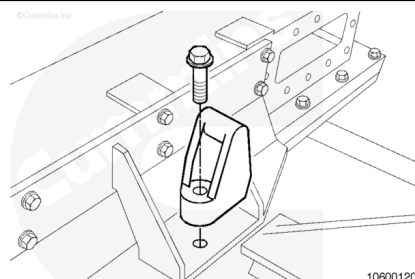

⚠ WARNING ⚠

The QSV81G and QSV91G engines can weigh as much as 11,000 kg [24,200 lbs]. Use a properly rated hoist and engine lifting fixture, Part Number 3163264, to lift the engine. Rigging and lifting must be done by trained, experienced personnel.

Install a M12 x 1.75 threaded eye bolt in the top of the intercoolers.

Remove the intercoolers.

