

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.




- Remove the low pressure oil supply lines. Refer to Procedure 010-046 in Section 10.
(/qs3/pubsys2/xml/en/procedures/56/56-010-046-tr.html)
- Remove the low pressure oil drain lines. Refer to Procedure 010-045 in Section 10.
(/qs3/pubsys2/xml/en/procedures/56/56-010-045-tr.html)
- Remove the low pressure turbochargers. Refer to Procedure 010-035 in Section 10.
(/qs3/pubsys2/xml/en/procedures/56/56-010-035-tr.html)

Remove


Remove the four capscrews and spacers securing each of the bellows to the exhaust connection pipe.

Remove the bellows and discard the gaskets.

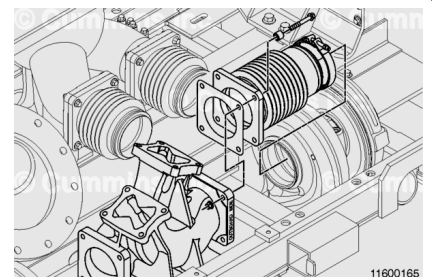

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

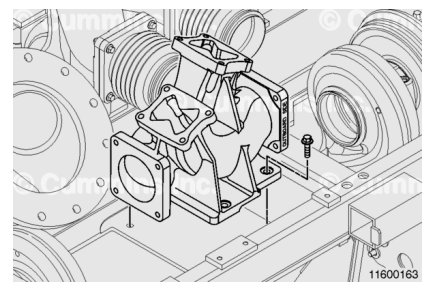


Remove the four capscrews securing the exhaust connection pipe to the two stage frame.

Clean and Inspect for Reuse

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

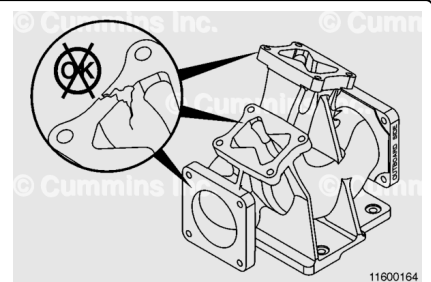

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

Clean the exhaust connection pipe with solvent.

Clean the remaining residue on the exhaust connection pipe with a steam cleaner.


Inspect the exhaust connection pipe for any signs of damage or deterioration.

If damage is found that allows exhaust gas leakage, replace the exhaust connection pipe.

Install

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

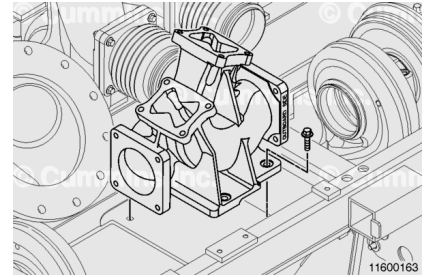

Note : The exhaust connection pipe must be installed with the outboard side marking facing the outboard side.

Install the four capscrews securing the exhaust connection pipe to the two stage frame.


Torque Value:

Exhaust Connection Pipe to Frame 80 n•m [60 ft-lb]

Install the four capscrews and spacers for each of the bellows with a new gasket.

Torque Value:


Exhaust Connection Pipe to Bellows 45 n•m [33 ft-lb]

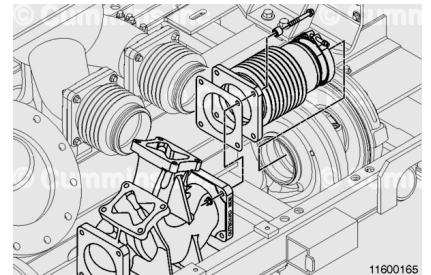

Finishing Steps

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

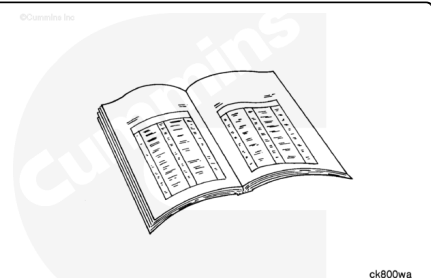

- Install the low pressure turbochargers. Refer to Procedure 010-035 in Section 10.
(/qs3/pubsys2/xml/en/procedures/56/56-010-035-tr.html)

- Remove the low pressure oil drain lines. Refer to Procedure 010-045 in Section 10.
(/qs3/pubsys2/xml/en/procedures/56/56-010-045-tr.html)
- Remove the low pressure oil supply lines. Refer to Procedure 010-046 in Section 10.
(/qs3/pubsys2/xml/en/procedures/56/56-010-046-tr.html)

Last Modified: 15-Oct-2014
