


Trainings ▾

Initial Check


There are several different air compressor options available on the QSK45 and QSK60 engines.

Note : The illustrations shown are of the SS model single-cylinder air compressor. Differences in procedures between the other air compressor models will be shown where necessary.

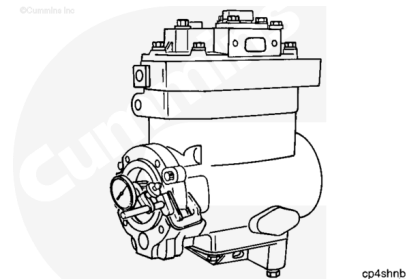

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

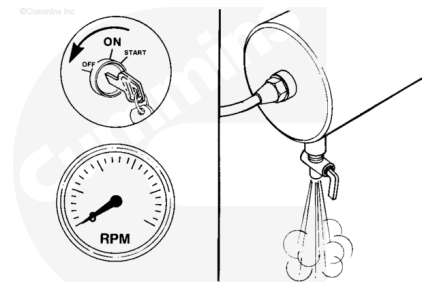

Shut off the engine.


Open the drain cock on the wet tank to release compressed air from the system.

Remove the air inlet and outlet connections from the air compressor.

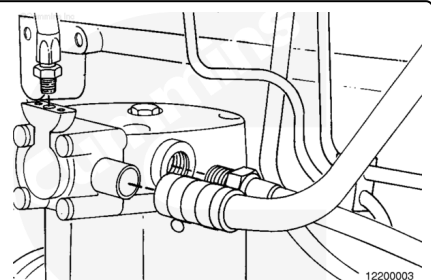


Measure the total carbon deposit thickness inside the air discharge line as shown.

The carbon deposit thickness **must not** exceed 1.6 mm [0.06 in].

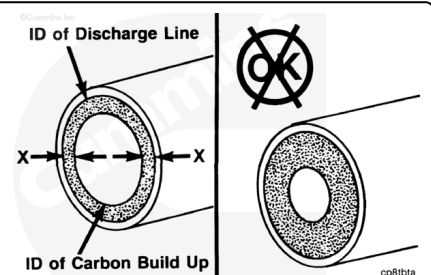

⚠ WARNING ⚠


The air discharge line must be capable of withstanding extreme heat and pressure to prevent personal injury and property damage. Refer to the manufacturer's specifications.

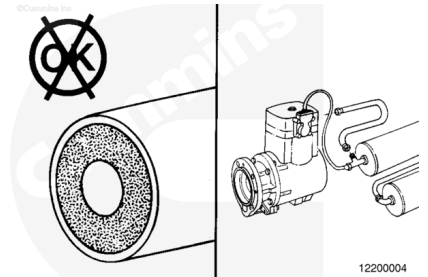

If the total carbon deposit thickness exceeds specification, remove and clean, or replace the air discharge line. Refer to the manufacturer's material specifications.

⚠ WARNING ⚠

The air discharge line must be capable of withstanding extreme heat and pressure to prevent personal injury and property damage. Refer to the manufacturer's specifications.

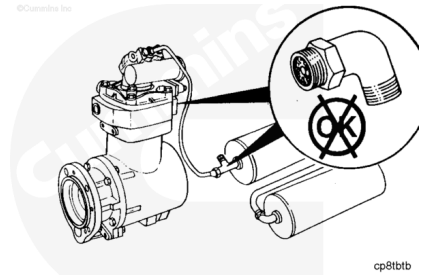


Continue to check for carbon buildup in the air discharge line connections up to the first connection, or wet tank.

Clean or replace all lines and fittings with carbon deposits greater than 1.6 mm [0.06 in]. Refer to the manufacturer's specifications for cleaning or replacement instructions.

⚠ CAUTION ⚠

Do not use a sharp object to remove carbon. The sealing surfaces can be damaged.

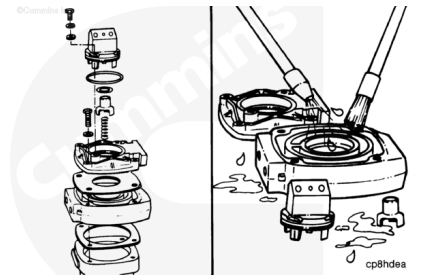


Remove the air compressor head and valve assembly; refer to the Master Repair Manual, Holset® Air Compressors, Bulletin 3666121.

Clean the compressor head and valve assembly components with solvent and a nonmetallic brush to remove carbon.

Inspect the valve assembly components for reuse; refer to the Master Repair Manual, Holset® Air Compressors, Bulletin 3666121.


Assemble the air compressor using new gaskets and o-rings; refer to the Master Repair Manual, Holset® Air Compressors, Bulletin 3666121.

Install and tighten the air inlet and outlet connections.

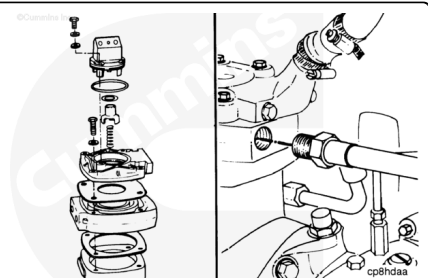

Close the wet tank drain cock.

Operate the engine and check for air leaks.

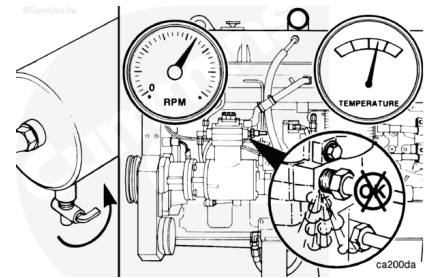

Last Modified: 03-Feb-2004
