


Trainings ▾

Install

Lubricate the shaft with clean engine oil. Install the pulley and nut on the alternator shaft. Tighten the nut.


Torque Value: 95 n•m [70 ft-lb]

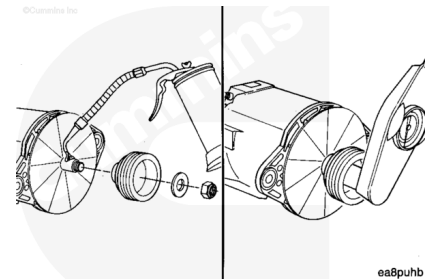

The belt **must** be installed and adjusted before the capscrews are tightened.


The end of the adjusting link with the largest area at the capscrew hole **must** be nearest to the alternator.

Install the alternator and the adjusting link, as shown.

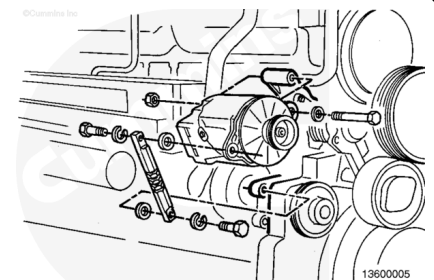

Do **not** attempt to pry the belt on the pulley.

Install the belt. Turn the adjusting screw **counterclockwise** to shorten the link if necessary.

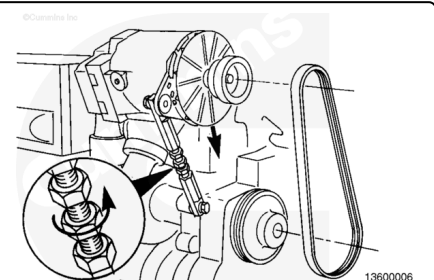


Use a belt tension gauge (Borroughs), Part Number ST-1293, to measure the poly V-belt tension.

Refer to the Drive Belt Tension Table in Section V.

A belt is considered used if it has been in operation for 10 minutes or longer.

If used belt tension is below the minimum value, tighten to the maximum value.

Replace the belt if it will **not** maintain the correct tension.

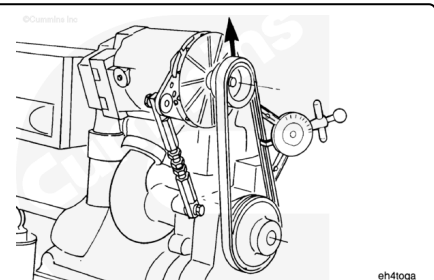


The lower jam nut has left-hand threads.

Tighten the jam nuts on the adjusting screw.

Torque Value: 80 n•m [59 ft-lb]


Tighten the adjusting link and alternator mounting capscrews.

Torque Value: 115 n•m [85 ft-lb]

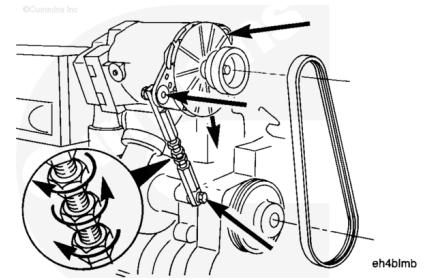

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

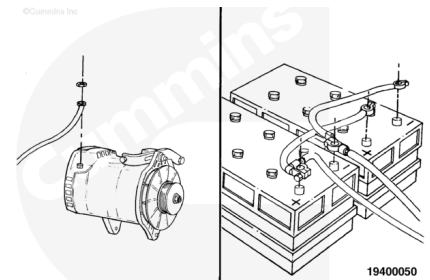

Connect the wiring to the alternator.

Connect the batteries.