

Trainings ▾


Remove

Loosen the adjusting link and the alternator mounting capscrews.

Note : The lower jam nut has left-hand threads.


Loosen both of the jam nuts. Turn the adjusting screw to relieve the belt tension.

Remove the belt.

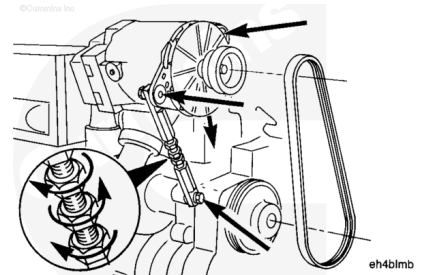

Inspect for Reuse


Inspect the belt for cracks, glazing, tears, or cuts. The belt **must** be replaced if damaged.

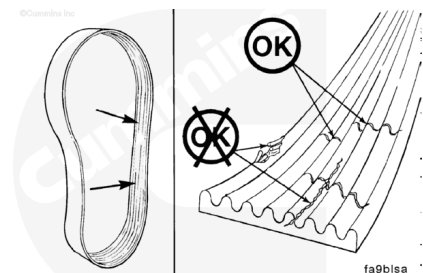

Install

Do **not** attempt to pry the belt on the pulley. Turn the adjusting screw **counterclockwise** to shorten the link if necessary.


Install the alternator belt.

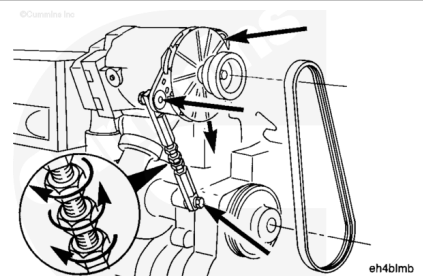

Note : The lower jam nut has left-hand threads.

Tighten the jam nut on the adjusting screw.

Tighten the adjusting link and alternator mounting capscrews.

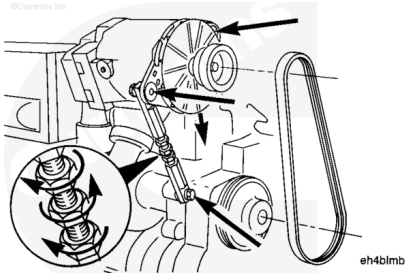


Adjust


Note : The lower jam nut has left-hand threads.

Loosen the alternator and adjusting link mounting capscrews.

Loosen the jam nuts on the adjusting screw.

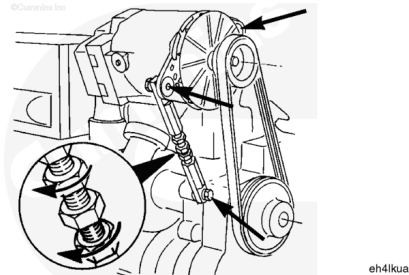


Turn the adjusting screw **clockwise** to increase the belt tension.

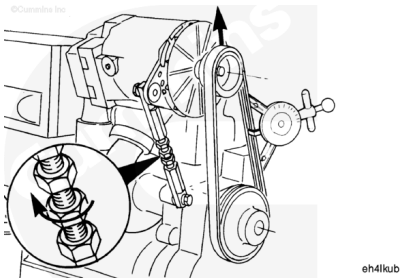

Note : The lower jam nut has left-hand threads.


Tighten the jam nuts on the adjusting screw.

Tighten the adjusting link and alternator mounting capscrews.

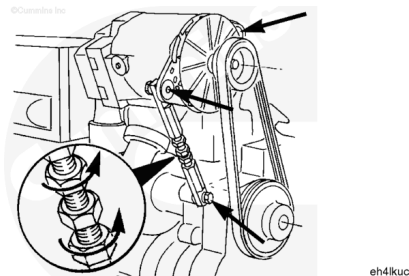

Check the belt tension again to be sure it is correct.

Refer to Section V for the proper belt tension.

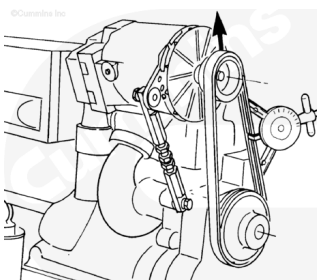

eh4toga

Last Modified: 07-Aug-2003
