


Trainings ▾

Inspect


Use an inductive charging and cranking system analyzer to load-test the state of charge of maintenance-free batteries. If the state of charge is low, use a battery charger to charge the battery. Refer to the manufacturer's instructions.

Replace the battery if it will **not** charge to the manufacturer's specifications or the battery will **not** maintain a charge.

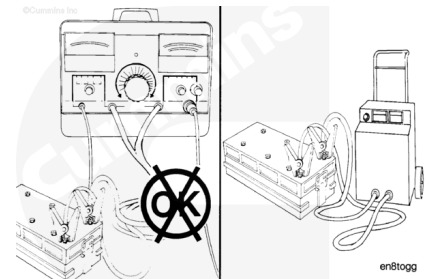

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

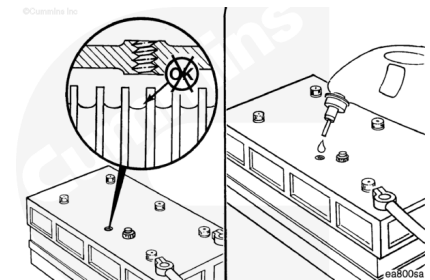

⚠ WARNING ⚠

Acid is extremely dangerous and can damage the machinery and can also cause serious burns. Always provide a tank of strong soda water as a neutralizing agent when servicing the batteries. Wear goggles and protective clothing to reduce the possibility of serious personal injury,

Note : Maintenance-free batteries are sealed and do not require the addition of water.


If conventional batteries are used, remove the cell caps or covers and check the electrolyte (water and sulfuric acid solution) level.

Fill each battery cell with water. Refer to the manufacturer's specifications.

Do **not** attempt to check the specific gravity of a battery immediately after adding water. If it is necessary to add water to allow use of the hydrometer, charge the battery several minutes at a high rate to mix the electrolyte.

Use a hydrometer to measure the specific gravity of each cell.

Refer to the accompanying table to determine the battery state of charge based on the specific-gravity readings.

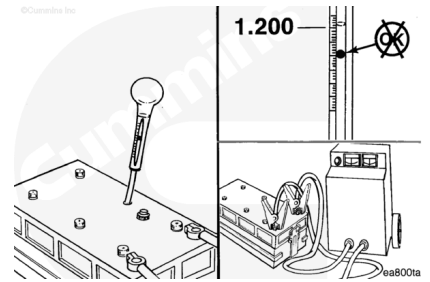

Battery State of Charge	Specific Gravity @ 27°C [80°F]
100 percent	1.260 to 1.280
75 percent	1.230 to 1.250
50 percent	1.200 to 1.220
25 percent	1.170 to 1.190
Discharged	1.110 to 1.130

If the specific gravity of any cell is below 1.200, the battery **must** be charged.