


Trainings ▾

Remove


Disconnect the electrical connections from the starting motor

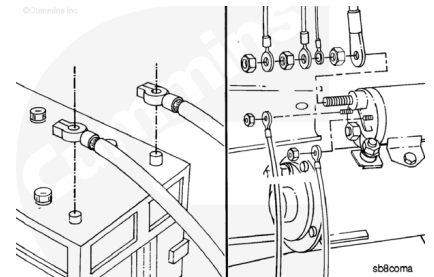

Integral Prelub™ Starter


Remove the suction hose (1) from the hose fitting (3) on the back of the integral prelube starter. Disconnect the other end of the suction hose from the oil pump.

Remove the supply hose (2) from the hose fitting (3) on the back of the integral prelube starter. Disconnect the other end of the supply hose from the oil filter head.

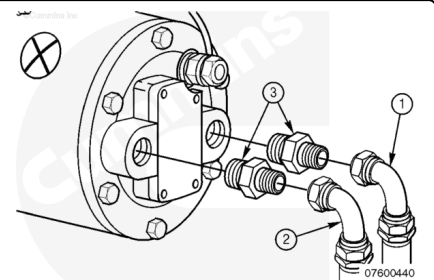

⚠ WARNING ⚠

This assembly weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get personal assistance to lift this assembly.

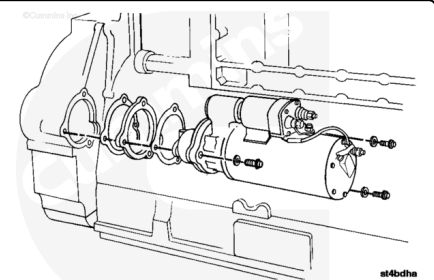

Remove the starting motor capscrews, the starter, the spacers, and the gaskets.


Discard the gaskets.

Note : Not all engines contain spacers and gaskets.


Disassemble

Remove the four end cover capscrews.

Remove the end cover.

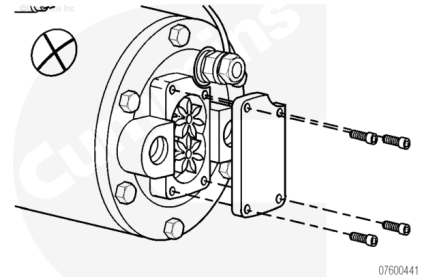


Slide the two pumping gears off the shafts.

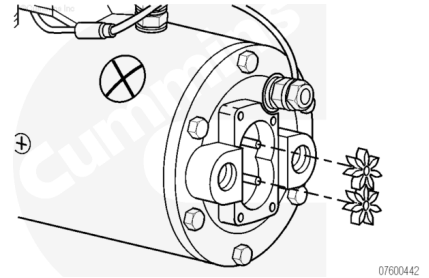

Inspect for Reuse


Inspect the gears for cracks, chipped or broken teeth.

If the gears are damaged, the gears **must** be replaced.

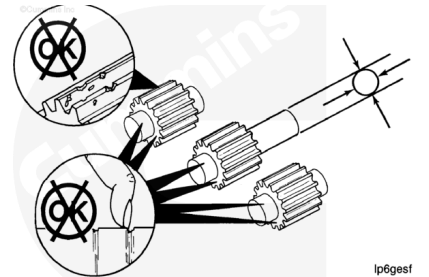

Inspect the gear, shaft, and bushing for wear or damage.


Note : A pipe plug **must** be removed to lubricate the bushing on some starter motors.

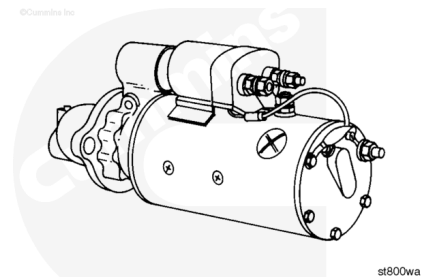

Assemble

Lubricate the gears with clean engine oil.

Slide the gears onto the shafts.

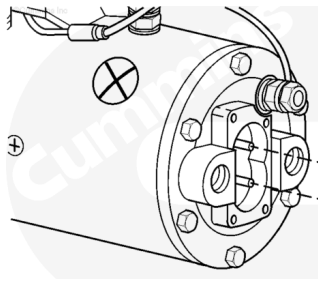


07600442

Install the cover plate.

Install the four cover plate capscrews.

Tighten the capscrews.

Torque Value: 18 n•m [159 in-lb]

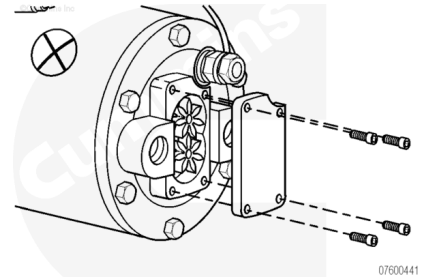

07600441