

Trainings ▾

Initial Check

Remove the drive belt and check the tensioner capscrew torque.

The capscrew grade is located on the head of the capscrew.

Torque Value:


9.8 Capscrew

1. 45 n•m [33 ft-lb]

Torque Value:


10.9 Capscrew

1. 65 n•m [48 ft-lb]

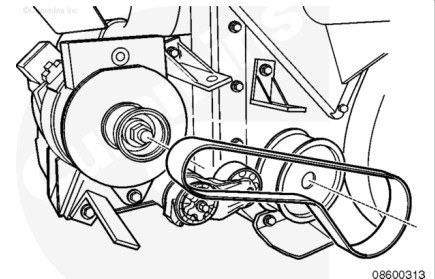


With the belt removed, make sure the tensioner arm stop is in contact with the spring case stop.

If the tensioner arm stop is **not** touching the spring case stop, the tensioner **must** be replaced.

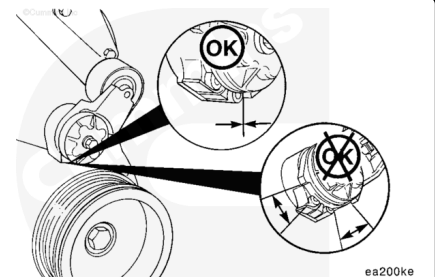


After checking the capscrew torque, use a breaker bar with a 1/2-inch ratchet to rotate the tensioner slowly away from the area of belt contact.

If the arm rotates with any roughness or hesitancy, replace the tensioner.

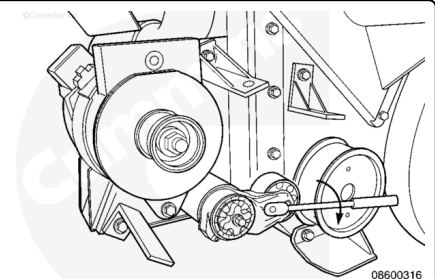


With the belt removed, make sure the tensioner pulley rotates freely.

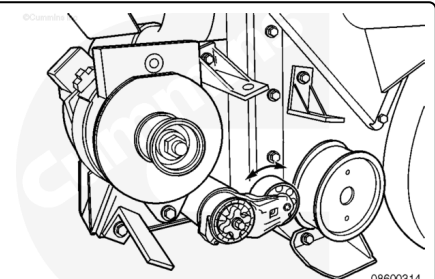

Check the tensioner arm pulley and stops for cracks.

If the tensioner arm pulley and stops are cracked, the tensioner arm **must** be replaced.

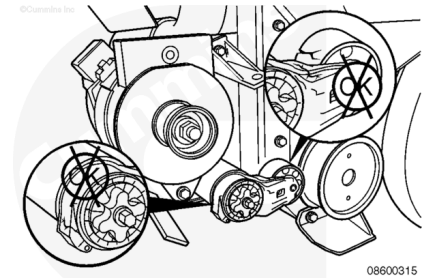


Install the belt.

Make sure the belt tensioner arm stop is **not** in contact with the spring casing stop.

If the arm stop and spring casing stop are touching, the drive belt **must** be replaced.


After replacing the belt, if the arm stop and spring casing stop are touching, the tensioner **must** be replaced.

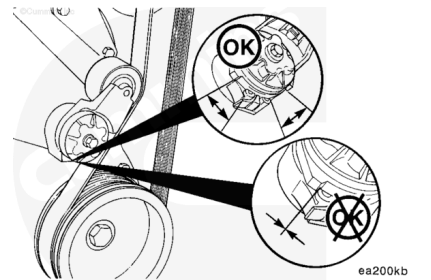

Check the location of the drive belt on the belt tensioner.


The belt **must** be centered or centered close to the middle of the pulley.

Unaligned belts, either too far forward or backward, can cause belt wear, belt roll-off, or increased, uneven tensioner bushing wear.

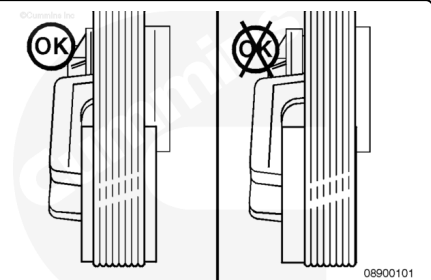


Remove

Remove the drive belt.

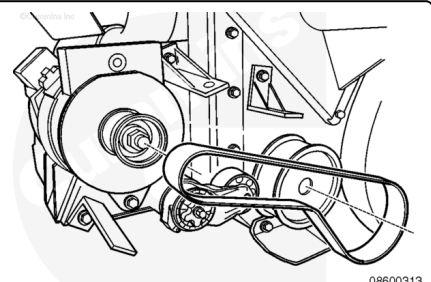


Remove the belt tensioner capscrew and the belt tensioner.

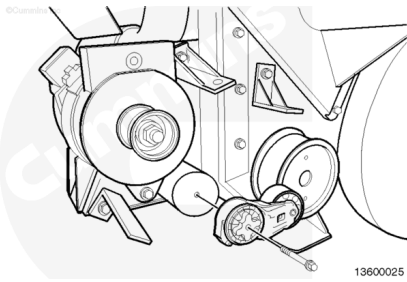

Inspect for Reuse


Make sure the tensioner arm is **not** touching the tensioner cap.

If the tensioner arm is touching the tensioner cap the pivot tube bushing has failed and the tensioner **must** be replaced.

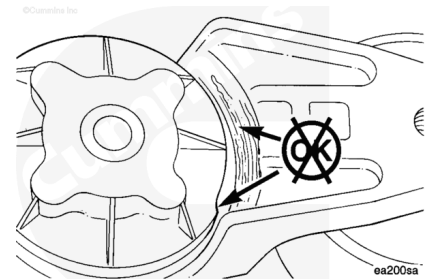

The components of the belt tensioner are:

1. Tensioner cap
2. Tensioner arm
3. Spring case
4. Tensioner pulley
5. Clearance Gap

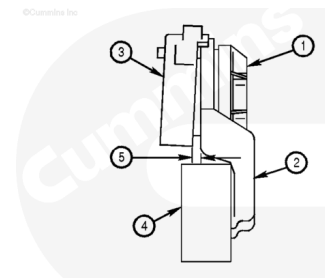

Measure the clearance (5) between the tensioner spring case (3) and tensioner arm (2) to verify tensioner wear-out and uneven bearing wear.

Tensioners generally show a larger clearance gap near the lower portion of the spring case, resulting in the upper portion rubbing against the tensioner arm.

Spring Tensioner Clearance		
mm		in
3	MAX	0.12


If the clearance is **not** within specification, the tensioner **must** be replaced.

Always replace the belt when a tensioner is replaced.

Install

⚠ CAUTION ⚠

To reduce the possibility of capscrew failure, replace any 9.8 grade belt tensioner mounting capscrew with a 10.9 grade mounting capscrew.

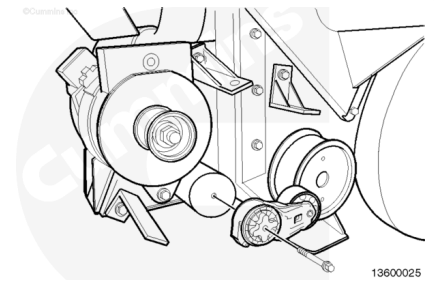

Install the belt tensioner and capscrew.

Tighten the capscrew.

Torque Value: 65 n•m [48 ft-lb]

Install the drive belt.

