

Trainings ▾

Disassemble

⚠ WARNING ⚠

To reduce the possibility of severe burns, wear protective gloves when removing the heated ring gear.

⚠ WARNING ⚠


To reduce the possibility of severe eye damage, wear eye protection when you drive the ring gear from the flywheel.

⚠ CAUTION ⚠

Adjust the torch to a good heating flame. Do not use a cutting flame (a blue flame) to heat the ring gear. Damage to the flywheel can result.

Heat the ring gear with a torch.

Use a brass drift and a hammer to remove the hot ring gear.

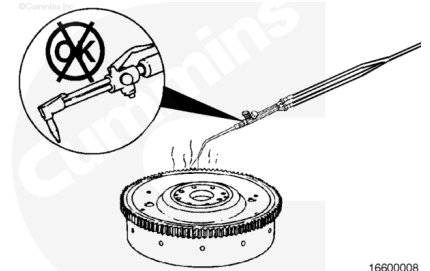


⚠ WARNING ⚠

To reduce the possibility of severe eye damage, wear eye protection when you drive the ring gear from the flywheel.

If a heating torch is **not** available, the ring gear can be removed with a brass drift and hammer.

If this method is used to remove the ring gear from a flexplate assembly, make sure a wooden block is used to support the ring gear adapter.

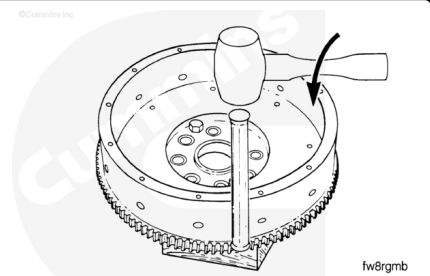

Assemble

⚠ WARNING ⚠

To reduce the possibility of severe burns, wear protective gloves when installing the heated ring gear.


⚠ CAUTION ⚠

Do not exceed the specified time or temperature. Damage to the ring gear and the ring gear teeth can result.

⚠ CAUTION ⚠

Do not attempt to install the ring gear without heating it, the ring gear will be damaged or broken.

Adjust the oven temperature to 232°C [450°F]. Heat the ring gear in the oven for a minimum of one hour, and a maximum of six hours. The inner diameter of the ring gear will become larger and simplify the installation of the ring gear on the flywheel.

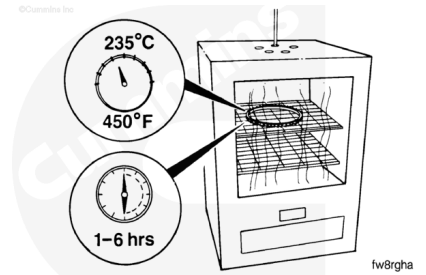


⚠ WARNING ⚠

To reduce the possibility of severe burns, wear protective gloves when installing the heated ring gear.

Use a heating flame to heat the ring gear if an oven is **not** available.

Use a Tempilstik® crayon or equivalent, to check the temperature of the ring gear. Heat the ring gear to 232°C [450°F].

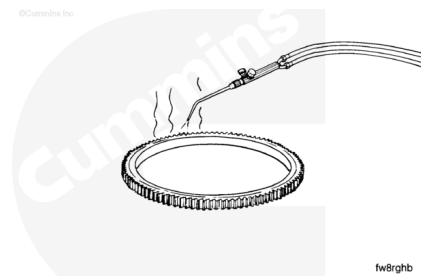


⚠ WARNING ⚠

To reduce the possibility of severe burns, wear protective gloves when installing the heated ring gear.

⚠ CAUTION ⚠

Allow the ring gear to air cool. Do not use water or oil to reduce the cooling time. Damage to the ring gear can result.

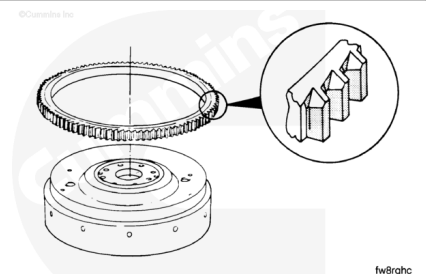

Remove the ring gear from the oven.

The part number is on the same side as the bevel.

Position the ring gear so that the bevel is positioned toward the crankshaft edge of the flywheel as shown.

Install the ring gear.

Last Modified: 20-Aug-2003
