


Trainings ▾

Remove

⚠ CAUTION ⚠

Do not allow metal shavings to fall inside the engine when drilling a hole in the cup plug. Damage to engine components can occur.

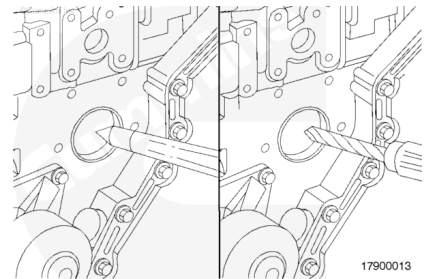


Use a center punch to mark the cup plugs for drilling.

Drill a 3.20 mm [0.125 in] hole in the cup plug.

Use a dent puller to remove the cup plug.


Discard all used cup plugs.

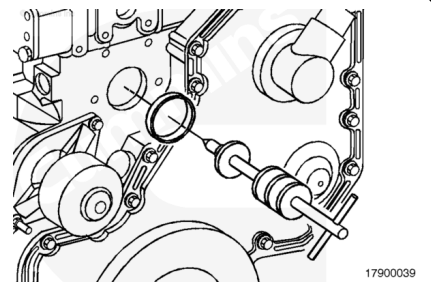

Clean and Inspect for Reuse


Thoroughly clean the cup plug bore using Scotch-Brite™, or equivalent.

Use spray cleaner, Part Number 3375433, or equivalent, to clean the bore.

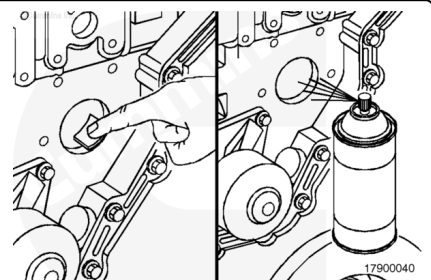

Inspect the cup plug bores for damage.

Repair any damaged cup plug bores.

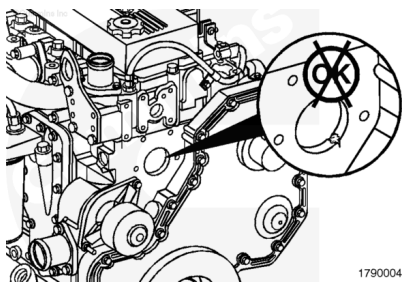


17900041

Install

⚠ CAUTION ⚠

Excessive sealant can run back into the engine and cause damage to other components. Allow the sealant to dry for a minimum of two hours before operating the engine. The plug can come out of the bore if the sealant is not dry.

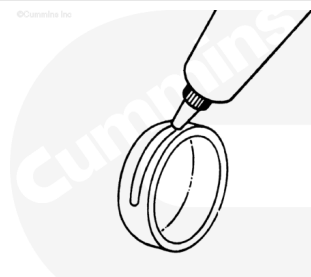


ee1epwa

Apply a 2 mm [1/6 in] bead of cup plug sealant, Part Number 3375068, or equivalent, to the outside circumference of the cup plug and the inside circumference of the cup plug bore.

Do **not** install a used cup plug.


Install the cup plug with the appropriate cup plug driver.

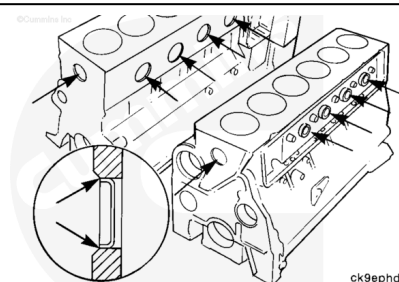

ck9ephd

⚠ CAUTION ⚠

Do not install the cup plug too deeply. If the cup plug is not installed straight and flat, it must be replaced with a new cup plug.

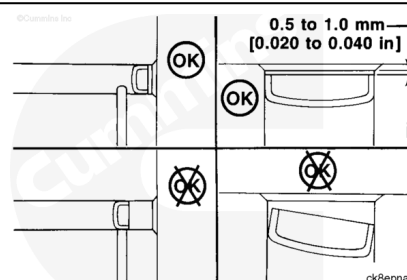

ck8epna

The cup plug **must** be installed with the edge of the cup plug 0.5 to 1.0 mm [0.020 to 0.040 in] deeper than the leading chamfer of the bore.

Last Modified: 04-Aug-2003
