


Trainings ▾


Remove

Select the appropriate size allen wrench or socket and remove the straight thread plug.

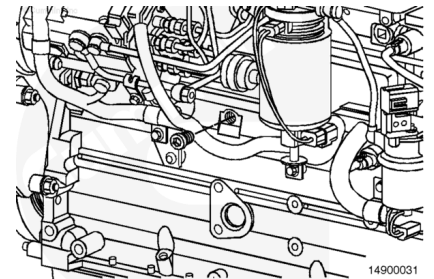

Clean and Inspect for Reuse

Use spray cleaner, Part Number 3375433, or equivalent, to clean the threads of the straight thread plug and threaded bore.

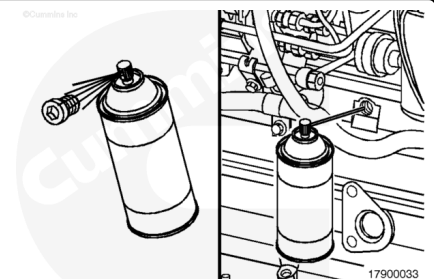


Inspect the threads of the straight thread plug for damage.

Replace the straight thread plug if damaged.

Inspect the threaded bore for damage.

Repair the bore if damaged.

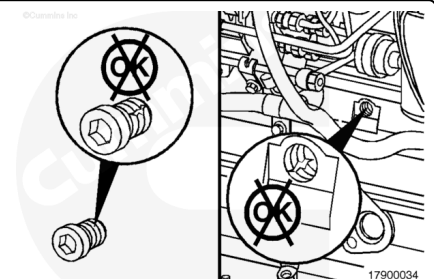


Install

Install a new o-ring on the straight thread plug.

Lubricate the o-ring with clean 15W-40 oil.

Install the straight thread plug.

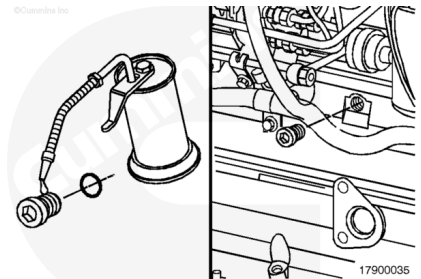

Tighten the straight thread plug.

Refer to the table below for torque values.

Straight Thread O-ring Plugs

Thread Size	Torque
M8	4 N•m [35.4 in-lb]
M10	6 N•m [53.1 in-lb]
M12	8 N•m [70.8 in-lb]
M14	11 N•m [97.3 in-lb]
M16	16 N•m [142 in-lb]
M18	21 N•m [16 ft-lb]
M22	27 N•m [20 ft-lb]
M27	47 N•m [35 ft-lb]
M33	60 N•m [44 ft-lb]
M42	74 N•m [55 ft-lb]

The torque specification apply to both aluminum and steel straight thread plugs.