

Trainings ▾


Tool Number

3163196

Torque Wrench Adapter

Secures the rocker lever adjusting screw while tightening the locknut.

©Cummins Inc

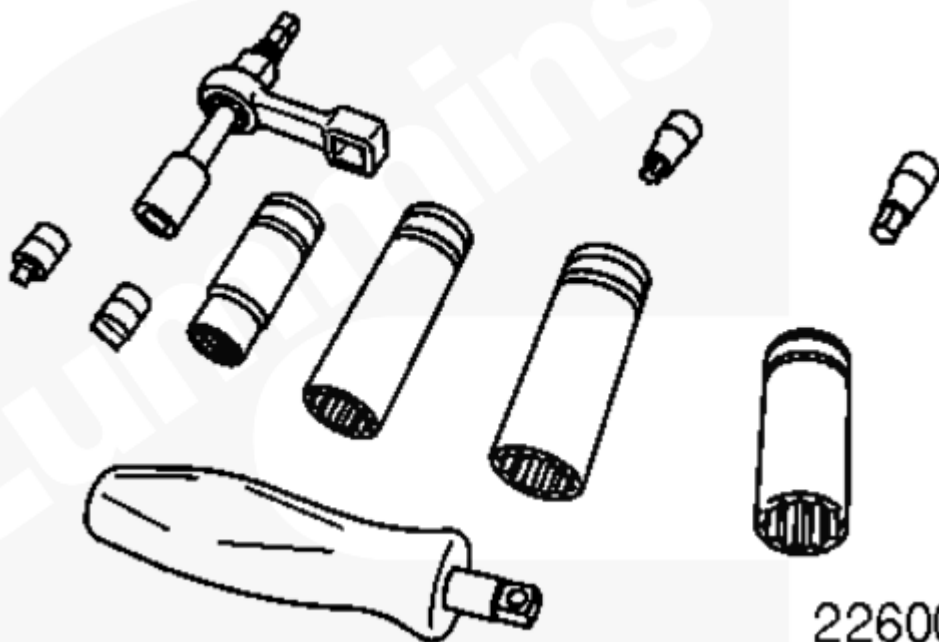

22600239


Tool Number

ST-1319

Water Tube Driver

Used to install or remove the water transfer tubes from the rocker housings.

©Cummins Inc

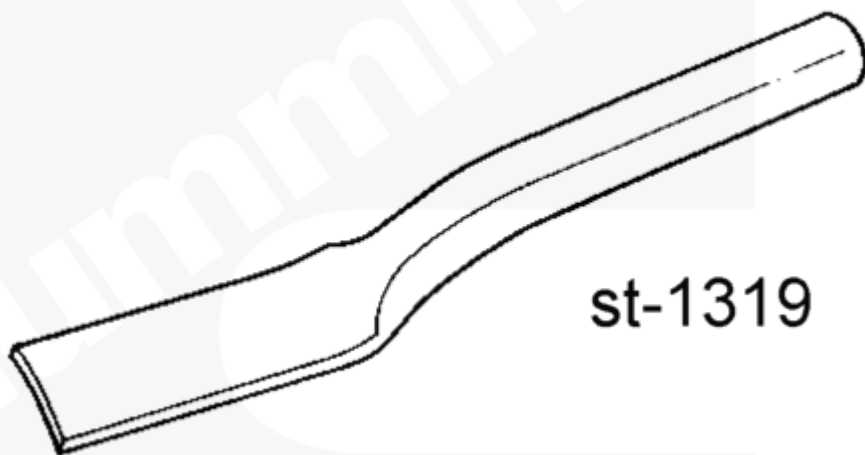**st-1319**


Tool Number

3164795

Torque Wrench

A dial-type torque wrench used to adjust injectors accurately in inch-pounds. Use of a clicker-type torque wrench is not recommended. 0 to 35 N•m [0 to 300 in-lb].

©Cummins Inc

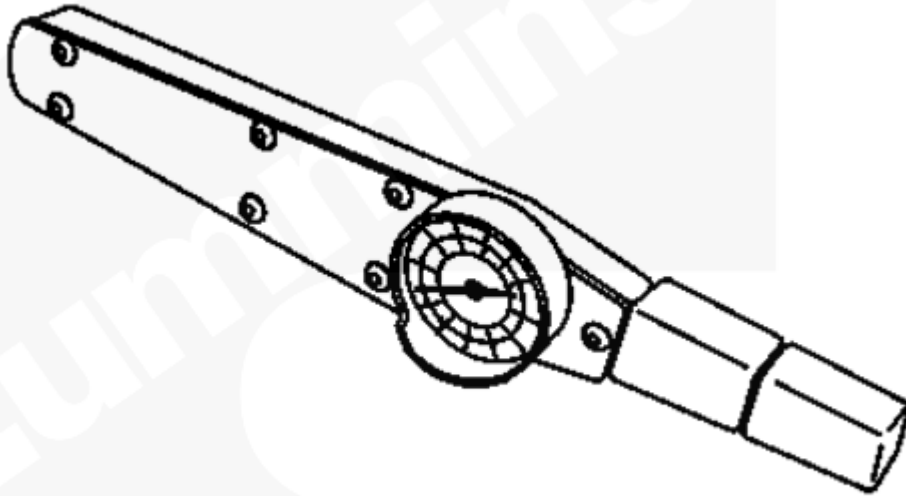

22600240


Tool Number

3375784

Light Duty Puller Kit

Used to remove small bushings, oil seals, and bearings.

©Cummins Inc

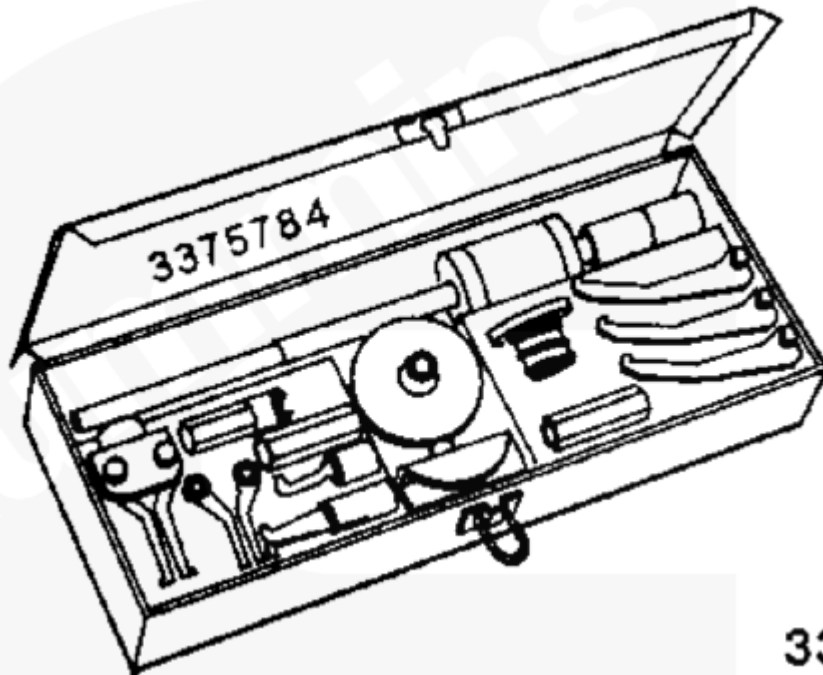


3375784

Tool Number

3376592

Torque Wrench

Inch-pound torque wrench used to tighten the valve lever adjusting screw. This torque wrench does not require screwdriver attachment.

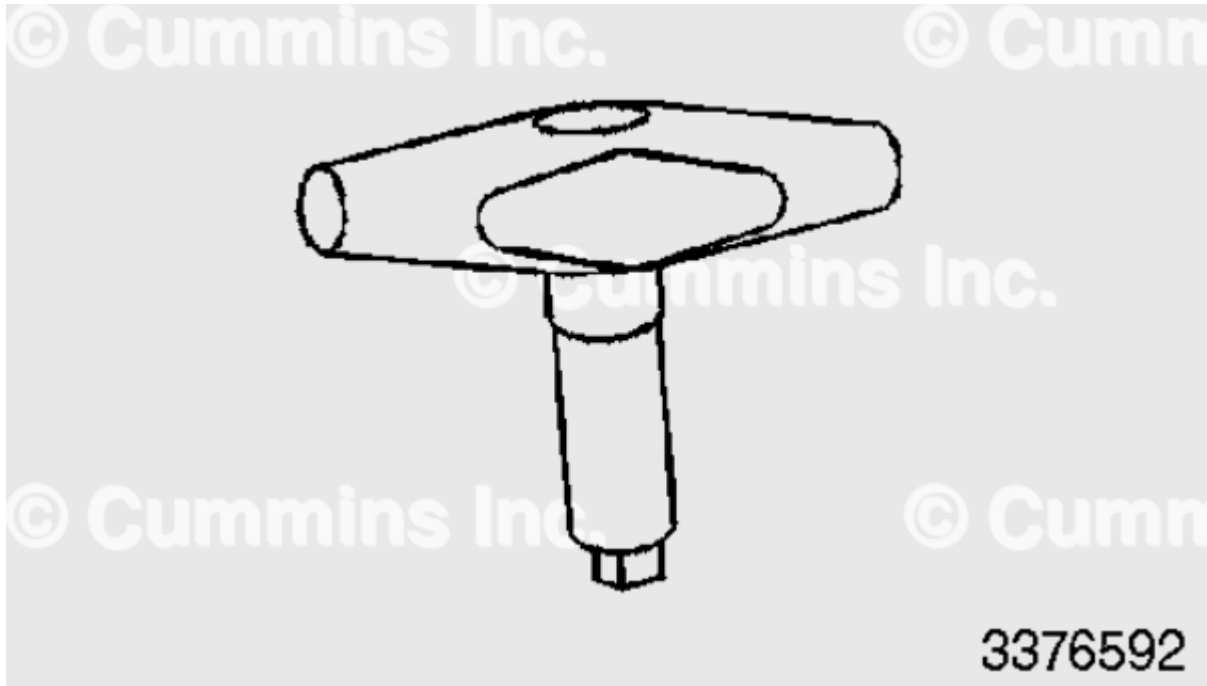

3376592


Tool Number

3824901

Valve Setting Gauge Kit

Kit contains two 25.4-mm [1-in] wide feeler gauges for centering under the swivel foot of the rocker lever when setting the valves. The kit contains an intake valve gauge at 0.36 mm [0.014 in] and an exhaust valve gauge at 0.81 mm [0.032 in].

©Cummins Inc

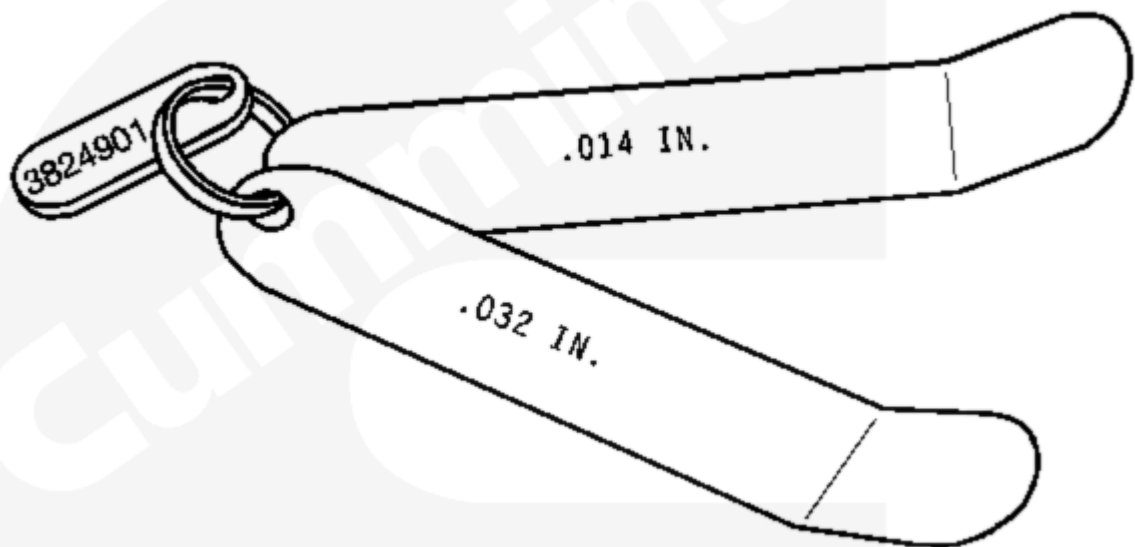

3824901


Tool Number

3162458

Rocker Lever Bushing Mandrel

Used to install and/or remove the rocker lever bushings.

©Cummins Inc

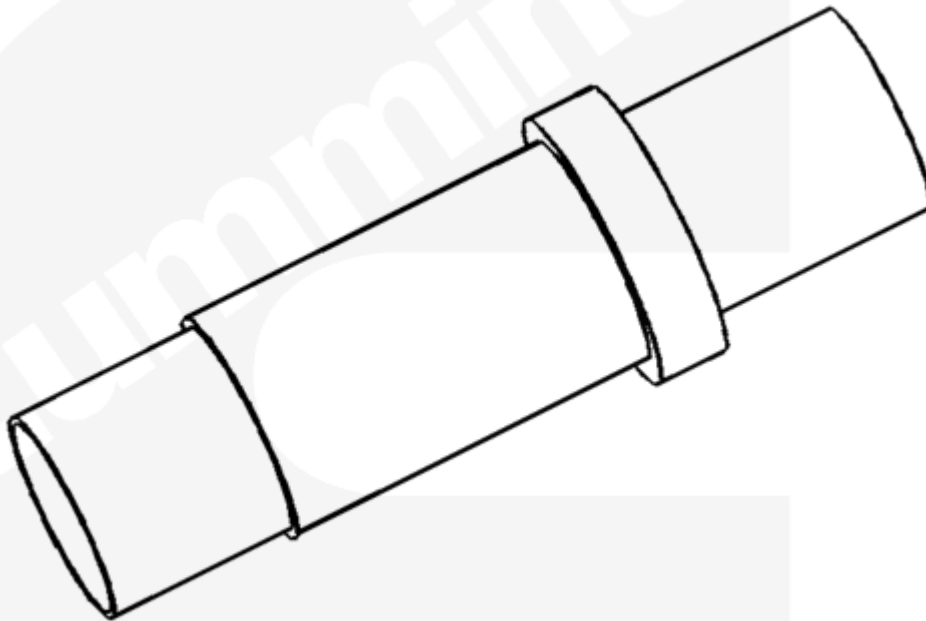

03400049


Tool Number

3375432

Crack Detection Kit

Used to inspect the housing for cracks.

©Cummins Inc

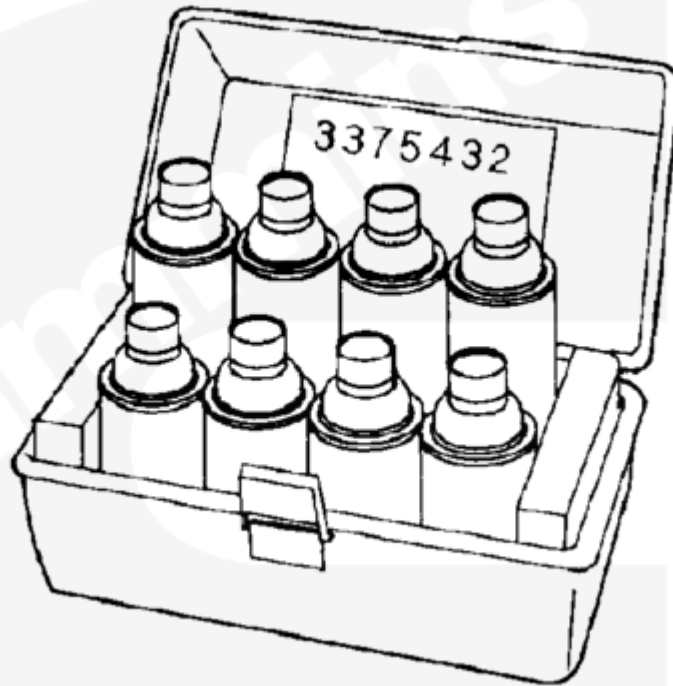

3375432

Tool Number

4918282

Cylinder Head Protective Cover

Used to prevent debris from entering the camshaft follower cavity while the rocker lever cover is removed.

©Cummins Inc



22600246

Last Modified: 04-Nov-2005
