


Trainings ▾

Tool Number

ST-1134

Dowel Pin Extractor

Used to remove dowel pins.

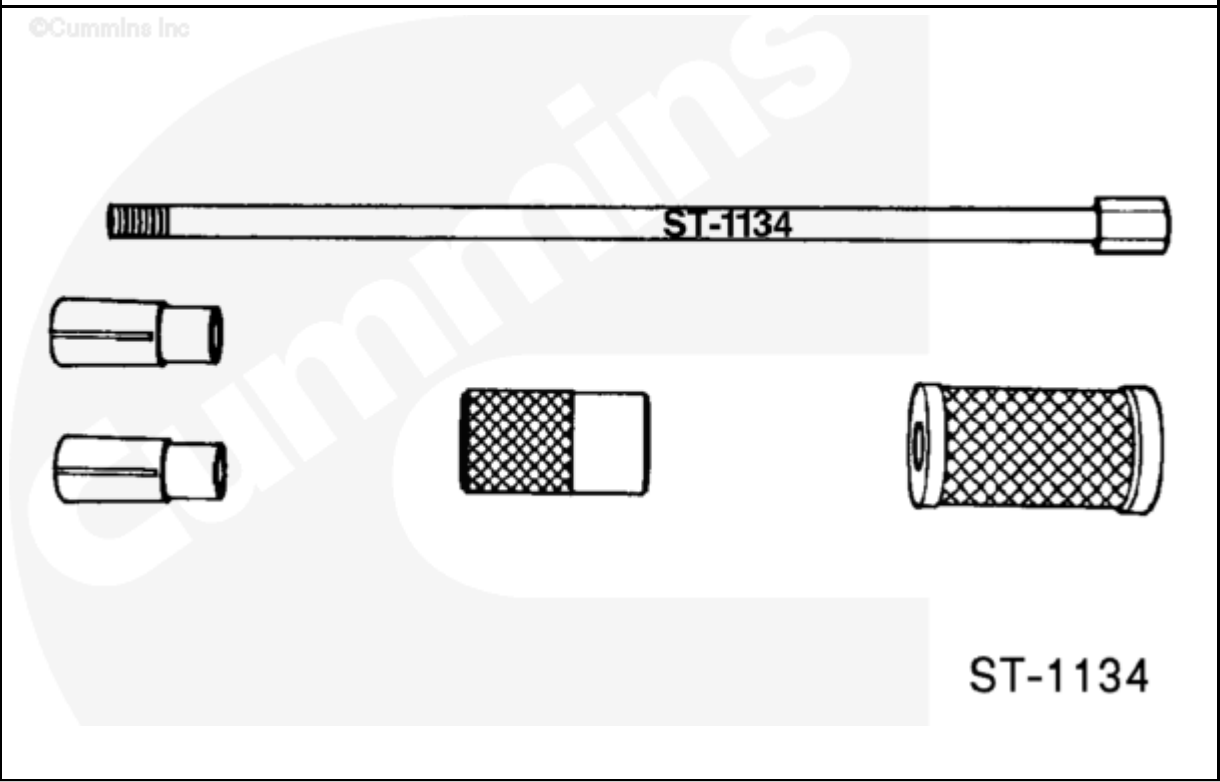



Tool Number

ST-1232

Drill and Ream Fixture

Used to machine dowel pin holes to install oversize dowel pins in the cylinder block and/or flywheel housing. Used with a drill, reamer, and the appropriate drill and ream bushing set.

©Gummine Inc

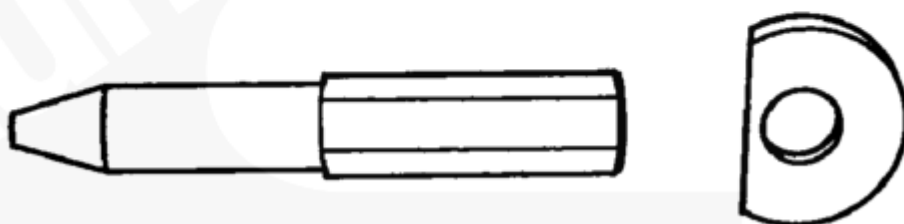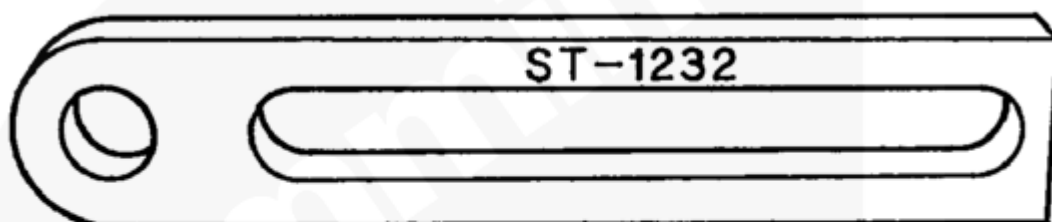

st-1232


Tool Number

3163264

Engine Lifting Fixture

Used to lift the engine during installation and removal. This kit contains the lift fixture, Part Number 3163265, and four lifting straps, Part Number 3163267.

©Cummins Inc

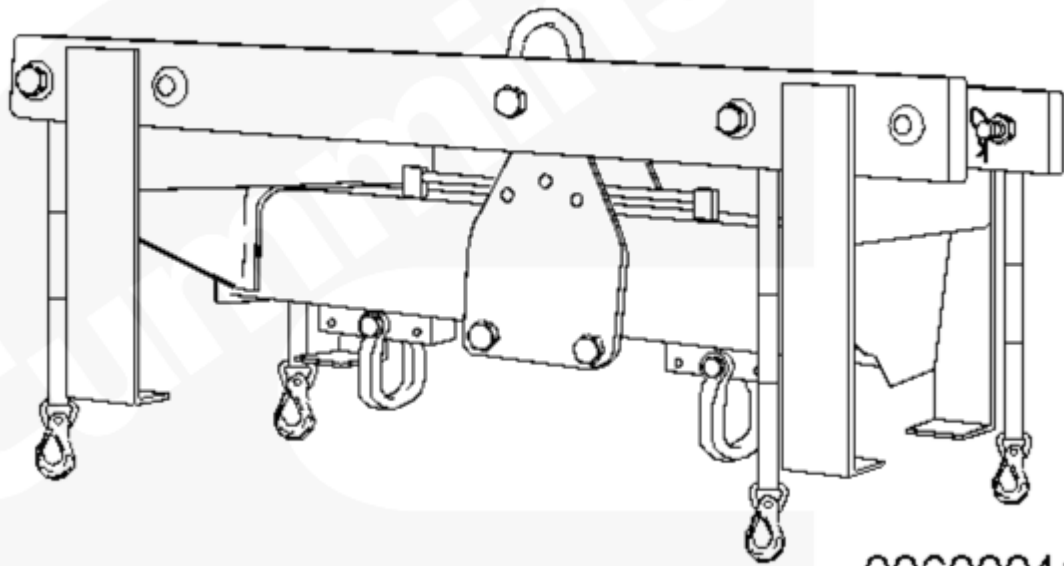

00600041

Tool Number

3375957

Lift Strap (2 in x 6 ft)

Used to aid in the removal and installation of heavy components.

©Cummins Inc



ks8toge

Tool Number

3375958

Lift Strap (1 in x 6 ft)

Used to aid in the removal and installation of heavy components.

©Cummins Inc



ks8toge

Tool Number

3375182

Spring Tester

Used to test spring force.

©Cummins Inc



kn8togs


Tool Number

ST-1325

Flywheel Housing Indicator

Used to check flywheel housing run out.

©Cummins Inc

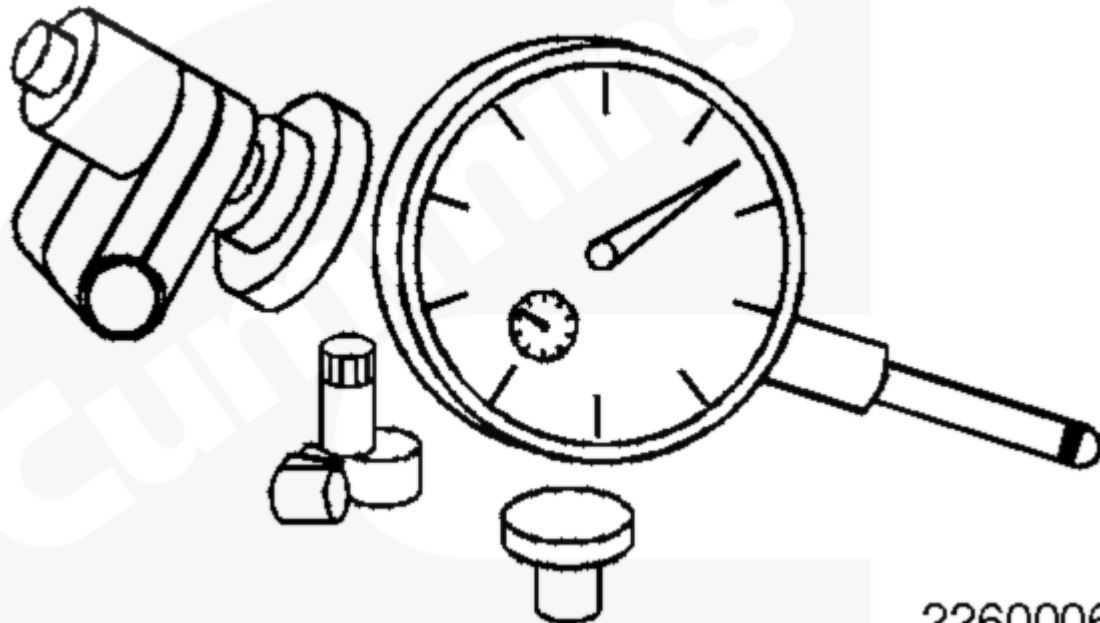

22600064


Tool Number

3164797

Torque Wrench

Used to tighten flywheel housing capscrews.

©Cummins Inc

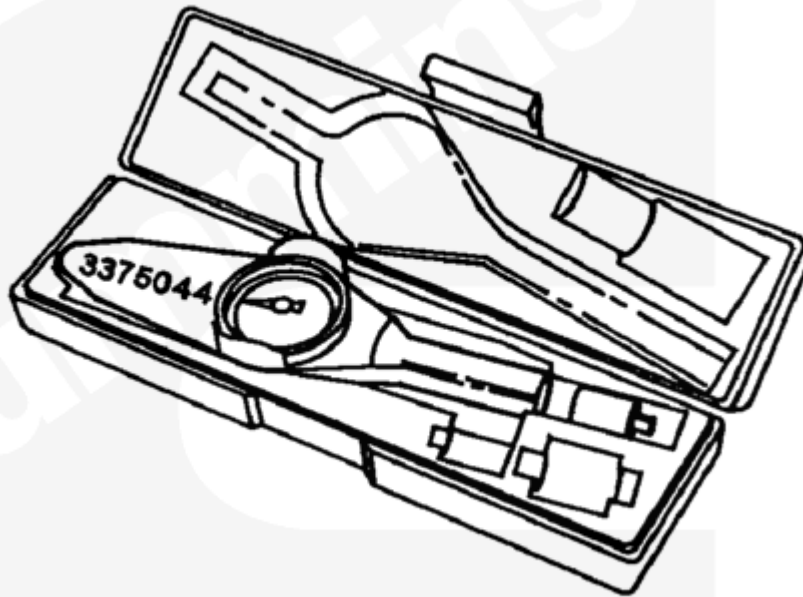

Last Modified: 30-Jun-2005
