


Trainings ▾

Initial Check

In order to recalibrate the ECM, the specified calibration for the engine model **must** be downloaded.


With the keyswitch OFF, connect the electronic service tool and start ESDN. The window that will appear will ask if the keyswitch is ON. Select No.

Click on the Recalibrate button in ESDN and choose the appropriate ECM part number and calibration you wish to download. Transfer the calibration to the ECM.

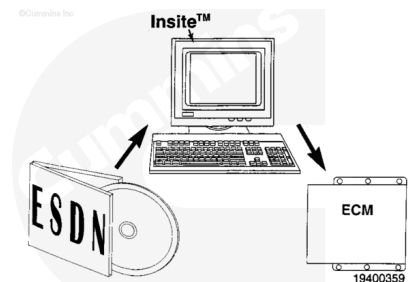


A communication status window will appear that counts the elapsed time the module has tried to establish communication. Because the keyswitch is OFF, communication can **not** be established. Wait until the communication attempt times out, or press the Cancel button.

At this point, another window will appear with the message that INSITE™ for CENSE™ was unable to connect to the module. You will be prompted to choose whether to continue or cancel the process. Select OK to continue.

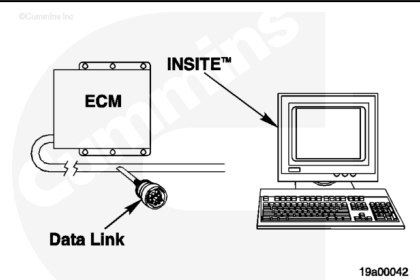


Turn the keyswitch ON.

The calibration process should cycle through the normal steps.

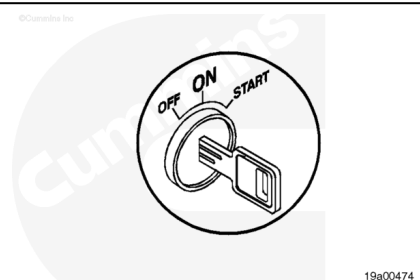

Because the recalibration overwrites the existing calibration in the module, the dataplate information is overwritten as well, once the download is completed.

Use INSITE™ for CENSE™ to add the dataplate information.

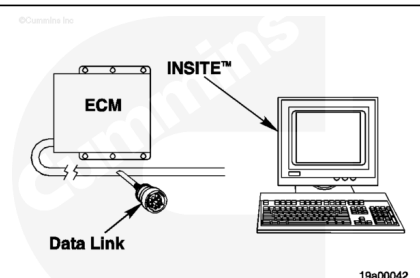

Last Modified: 26-Aug-2003