


Trainings ▾

Remove

Note : The following oil pressure sensor removal procedure is used for both prefilter and post-filter pressure sensors.

Lift up the tab, and disconnect the connector from the sensor.


Remove the sensor from the engine block.

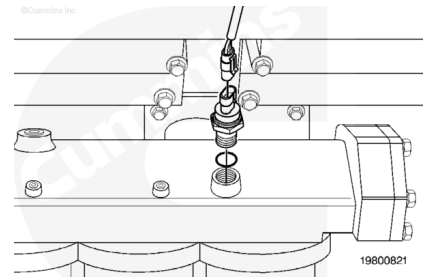

Install

⚠ CAUTION ⚠

Use only Cummins-recommended lubricant DS-ES, Part No. 3822934. Other lubricants, such as lubricating oil or grease, in the connectors can cause ECM damage, poor engine performance, or premature connector wear.

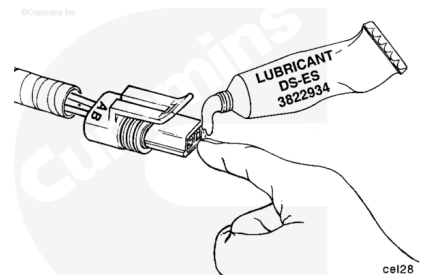

Note : The following oil pressure sensor installation procedure is used for both prefilter and post-filter oil pressure sensors.


Apply a small amount of lubricant to the connector terminals. Before installing, fill the entire connector cavity with lubricant.

Lubricate the sensor o-ring.

Install the sensor into the engine. Tighten the sensor.

Torque Value: 14 n·m [10 ft-lb]

Push the connectors together until they lock.

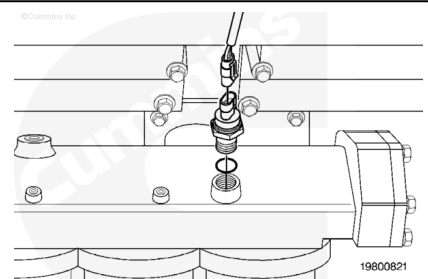

Last Modified: 26-Aug-2003
