


Trainings ▾

Remove

⚠ WARNING ⚠

Some state and federal agencies in the United States of America have determined that used engine oil can be carcinogenic and can cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. Always use the proper environmental procedures to dispose of the oil.

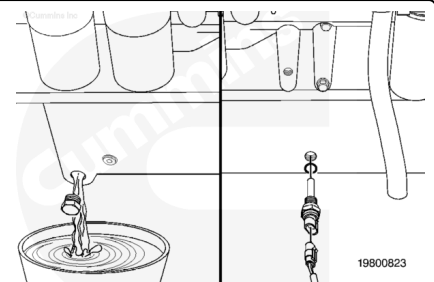

Partially drain the engine lubricating oil system. Reference Procedure 007-037 in Section 7 of the appropriate base engine troubleshooting and repair manual.


Lift up on the locking tab, and pull the electrical connectors apart.

Remove the sensor.

Install

⚠ CAUTION ⚠

Use only Cummins-recommended lubricant DS-ES, Part No. 3822934. Other lubricants such, as lubricating oil or grease, in the connectors can cause ECM damage, poor engine performance, or premature connector wear.

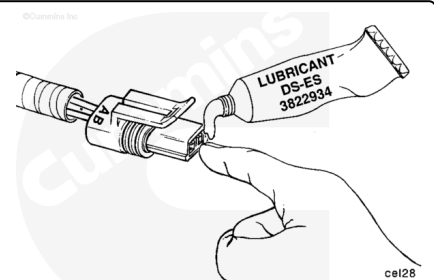

Apply a small amount of lubricant to the connector terminals. Before installing, fill the entire connector cavity with lubricant.


Lubricate the sensor o-ring.

Install the sensor into the engine. Tighten the sensor.

Torque Value: 14 n·m [10 ft-lb]

Push the connectors together until they lock.

Fill the engine to the proper level with lubricating oil, and operate the engine to check for leaks.

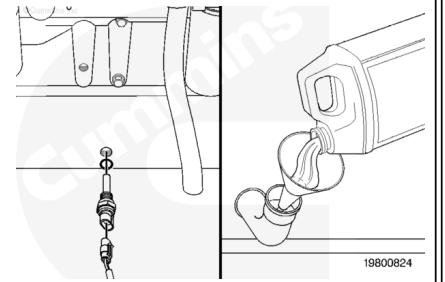

Last Modified: 29-Jun-2015
