



Trainings ▾

Initial Check


When disconnecting connectors during troubleshooting, the pins **must** be inspected to make sure they are **not** the cause of a bad connection. The three things to look for are bent, corroded, and pushed back pins.

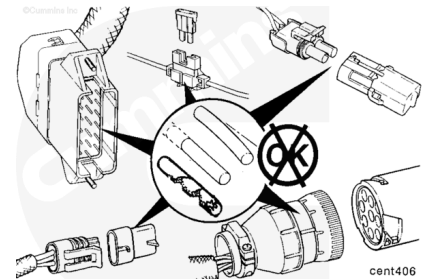

Inspect the male terminals of the connector. If any of the terminals are bent so that they will **not** easily mate with the other side of the connector, then the pin **must** be replaced. Refer to the connector repair section for the specific connector in question.

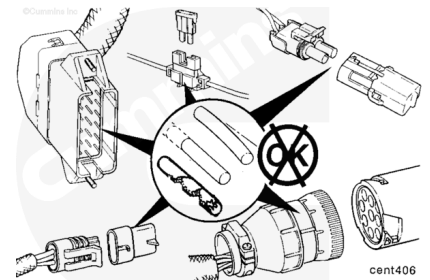

Inspect both the male and female terminals for corrosion that can cause a poor electrical connection within the connector. If any corrosion is evident on the pins, the corroded pins **must** be replaced. Refer to the connector repair section for the specific connector in question.

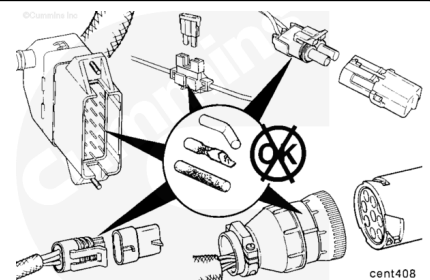

Inspect both the male and female terminals for pins that can **not** be making contact because they are pushed back in the connector. To repair, push the pin into the connector body from the back of the connector. Make sure the terminal locks into place. If the terminal will **not** lock in place, replace it. Refer to the connector repair section for the specific connector in question.

