

Trainings ▾

Preparatory Steps

- Remove the fan belt. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/89/89-008-002.html>)




Remove

⚠ WARNING ⚠

This assembly weighs more than 23 kg [50 lb]. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

⚠ CAUTION ⚠

Do not pry or hammer on the vibration damper. Damage will result.

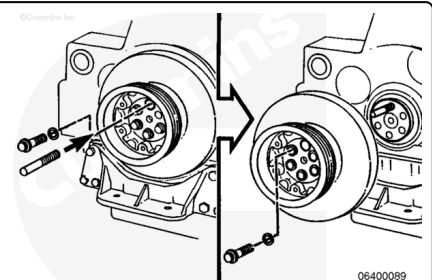


Remove one capscrew and install a M22 x 1.5 guide stud.

Remove the remaining capscrews, damper, and pulley.

Remove the guide stud.

Remove the pulley from the damper.

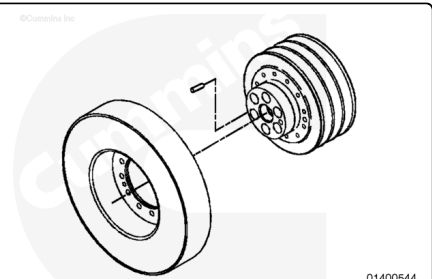


Inspect for Reuse

Vibration dampers have a limited service life. The damper **must** be replaced after 576,000 km [360,000 mi] or 15,000 hours of service.

Do **not** repair or balance a viscous damper in the field.


Inspect the damper for reuse. Inspect for cracks on the mounting flange. Inspect for dents or bulges on the housing.

If the damper is damaged, it **must** be replaced.

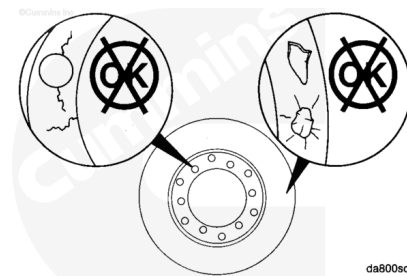

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

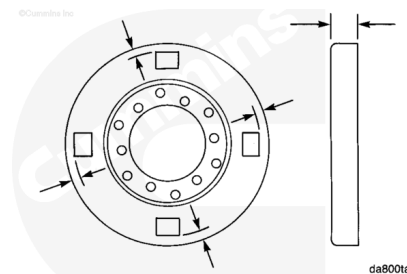


Use a paint solvent and fine crocus cloth. Remove the paint from the front and back of the housing at the four areas shown.

Measure **no** less than 3.0 mm [0.12 in] from the outside diameter to make sure the measurement is on a flat surface.


Measure the thickness at four places. If the measurements vary more than 0.25 mm [0.010 in], or if the thickness exceeds 68.05 mm [2.679 in], the damper **must** be replaced.

Use the crack detection kit, Part Number 3375432, or equivalent, and spray the rolled lip of the damper.

The crack detection kit, Part Number 3375432, contains the necessary cleaner, penetrant, and developer to check for cracks using the dye penetrant method.

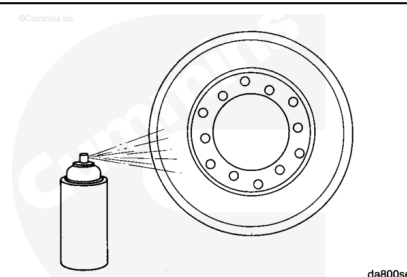

Check for leakage around the lip. If there is any leakage the damper **must** be replaced.

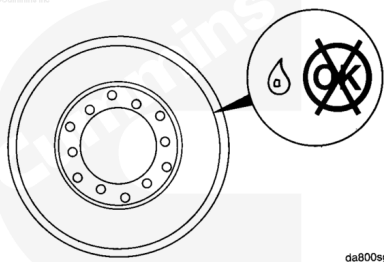

da800sg

Install


Align the dowel pin and install the vibration damper on the crankshaft pulley.

Install the twelve washers and capscrews.

Tighten the capscrews.

Torque Value: 68 N•m [50 ft-lb]

©Cummins Inc.

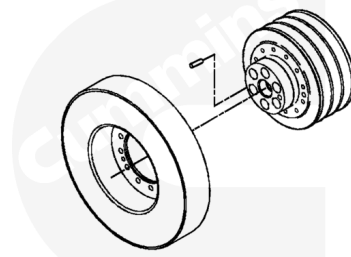

01400544

Install the M22 x 1.5 guide stud in the crankshaft.

Align dowel pin and install the crankshaft pulley and vibration damper assembly on the crankshaft.

Use clean 15W-40 oil to lubricate the capscrew threads.

Install five of the six capscrews.


Remove the M22 x 1.5 guide stud and install the sixth capscrew.

Tighten the capscrews to the values indicated below.

Torque Value:

1. 74 N•m [55 ft-lb]
2. 240 N•m [177 ft-lb]
3. 637 N•m [470 ft-lb]


©Cummins Inc.

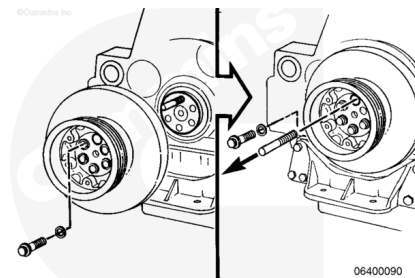

06400090

Finishing Steps

- Install the fan belt and related components. Refer to Procedure 008-002 in Section 8.
(/qs3/pubsys2/xml/en/procedures/89/89-008-002.html)

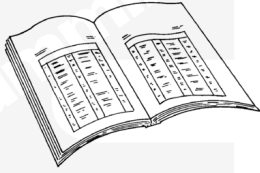

ck800wa

Last Modified: 25-Apr-2017
