


Trainings ▾

Remove

Remove the six capscrews, washers, and seal washers from the rocker lever cover.


Remove the rocker lever cover.

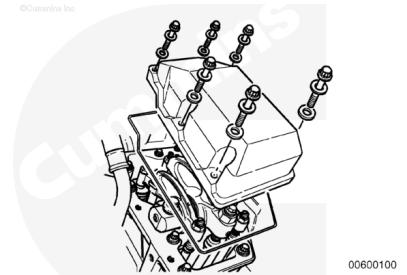

Inspect for Reuse

Inspect the cover for cracks.

Inspect the seal groove for damage.

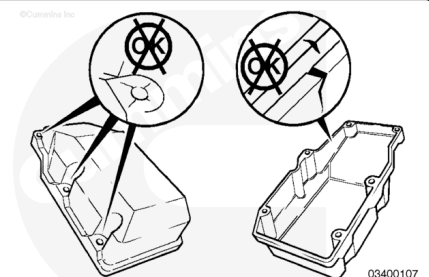

Install


The rocker lever cover is fitted with a seal, a gasket is **not** required. Each capscrew **must** be used in conjunction with a washer and sealing washer.

Install the rocker lever cover onto the rocker lever housing.

Install the six capscrews.

Tighten the capscrews.

Torque Value: 10 n•m [89 in-lb]

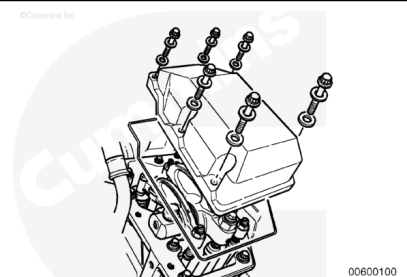

Last Modified: 30-May-2003
