

Trainings ▾


Preparatory Steps

- Remove the rocker lever covers. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/89/89-003-011.html>).
- Remove the rocker lever assembly. Refer to Procedure 003-009 (</qs3/pubsys2/xml/en/procedures/89/89-003-009.html>).
- Remove the push rods and crossheads. Refer to Procedure 004-014 (</qs3/pubsys2/xml/en/procedures/89/89-004-014.html>).




Remove

Remove the ten rocker lever housing mounting capscrews and remove the rocker lever housing.

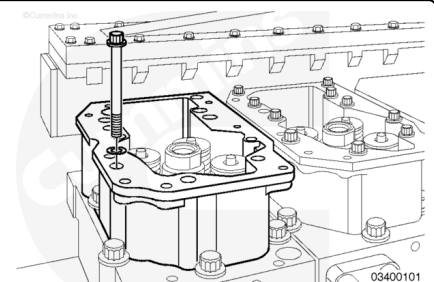


Clean and Inspect for Reuse

Remove and discard the liquid gasket material from rocker housing and cylinder head mating surfaces.

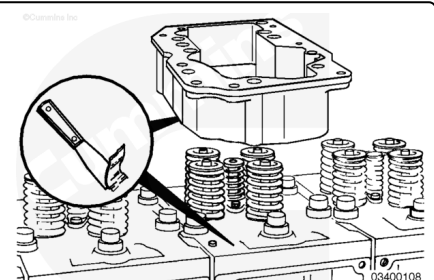

⚠ WARNING ⚠

Wear safety glasses or a face shield, as well as protective clothing, to reduce the possibility of personal injury when using a steam cleaner or high pressure water.

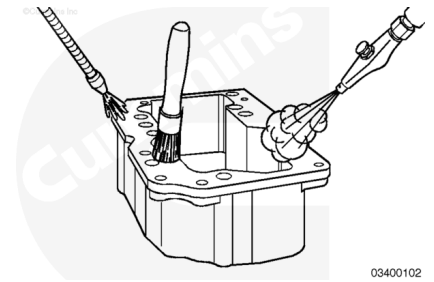

03400102


⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, following the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

Use steam or solvent to clean the rocker lever housing.

Inspect the rocker lever housing for damage.


Use the crack detection kit, Part Number 3375432, to inspect the housing for cracks. If the housing is cracked, it **must** be replaced.

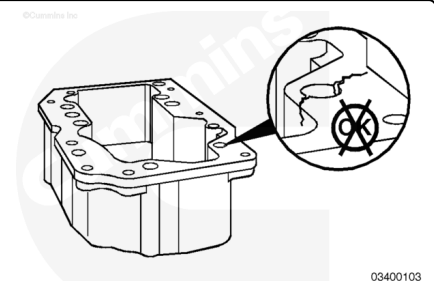

03400103

⚠ CAUTION ⚠

Do not attempt to repair damaged threads in the two 16 mm x 2 holes for the capscrews that hold the rocker lever shaft to the housing (1). If threads in either of these two holes are damaged, the rocker lever housing must be replaced.

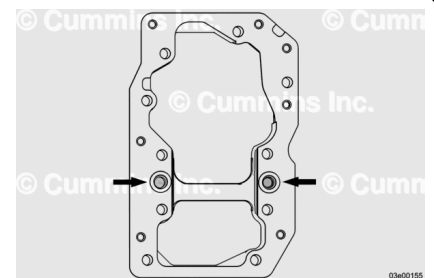


03400155

Inspect the threaded holes for damage.

Install

Apply an even amount of gasket sealant into the groove on the bottom of the rocker housing.

Install the o-ring on the groove of the rocker lever housing. Do **not** use sealant on the groove (half circle) near the o-ring.

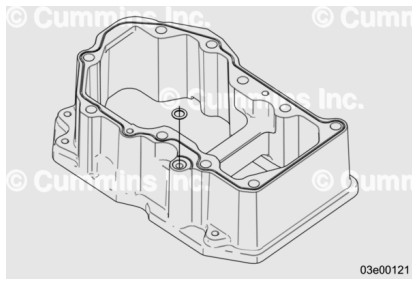


The housing **must** be aligned correctly with the dowel pins.

Install the rocker lever housing.

Install the ten rocker lever housing mounting capscrews.

Use the sequence illustrated in the graphic to tighten the capscrews.

Torque Value: 86 N·m [64 ft-lb]

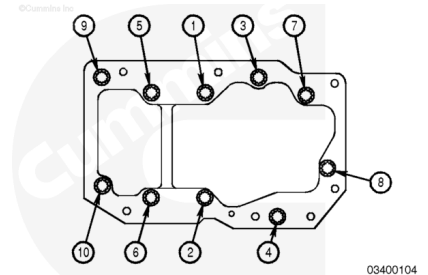

Finishing Steps

- Install the push rods and crossheads. Refer to Procedure 004-014 (</qs3/pubsys2/xml/en/procedures/89/89-004-014.html>).
- Install the rocker levers. Refer to Procedure 003-009 (</qs3/pubsys2/xml/en/procedures/89/89-003-009.html>).
- Adjust the valves and injectors. Refer to Procedure 003-006 (</qs3/pubsys2/xml/en/procedures/89/89-003-006.html>).
- Install the rocker lever cover. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/89/89-003-011.html>).

