


Trainings ▾


Measure

Remove the fuel drain hose.

Install the adapter, Part Number 3376719, and pressure gauge, Part Number ST-1273, between the engine fuel drain fitting and the fuel drain hose.

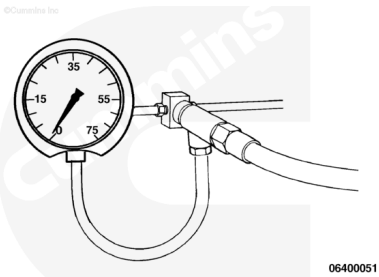


If the engine has a drain side check valve, install the adapter and pressure gauge between the check valve outlet and fuel drain hose.

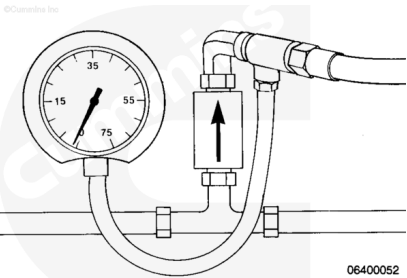


Start and operate the engine at high idle, no load.

	kpa		psi	
With check valve		21	MAX	3
Without check valve		30	MAX	5

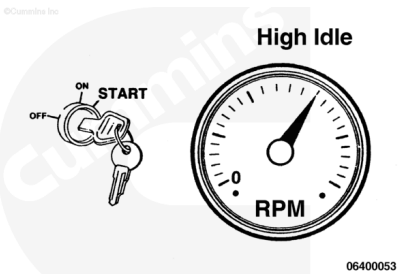

All QSK23 engines are built without check valves.


If the fuel drain line restriction is above specifications, inspect the fuel drain line. Refer to Procedure 006-013 ([/qs3/pubsys2/xml/en/procedures/89/89-006-013.html](http://qs3/pubsys2/xml/en/procedures/89/89-006-013.html)).

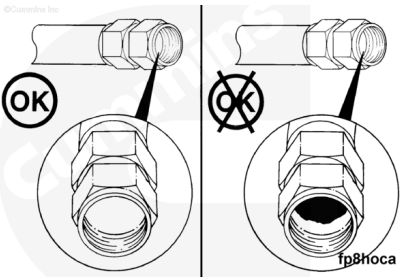

Remove the pressure gauge. Install the fuel drain line.

Tighten the fuel line.

Torque Value: 95 n•m [70 ft-lb]

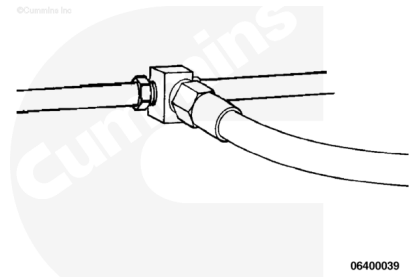

Last Modified: 23-Sep-2003
