

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

- Drain the lubricating engine oil from the oil pan. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/89/89-007-025.html>).




Remove

Remove the 51 capscrews.

Remove the oil pan.


Clean and discard the liquid gasket material from the block, stiffener plate, and oil pan.

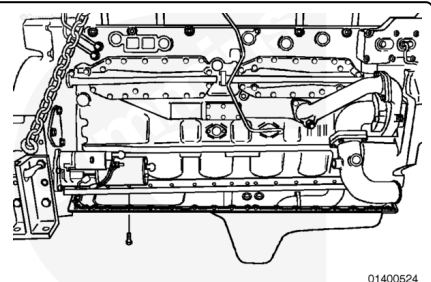

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

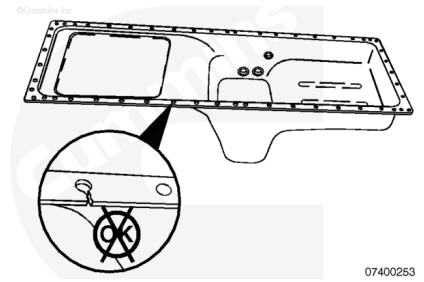

07400253

⚠ CAUTION ⚠


If oil pan is cast aluminum, use solvent that will not harm aluminum. Failure to do so will damage oil pan.

Clean the oil pan.

Inspect for cracks or other damage.


Install

Apply liquid gasket to oil pan.

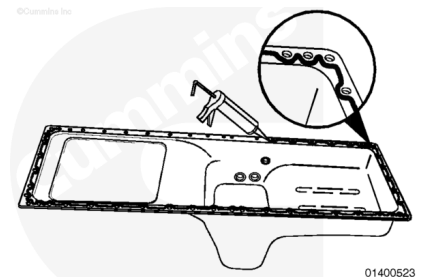

01400523

Install the gaskets and oil pan.

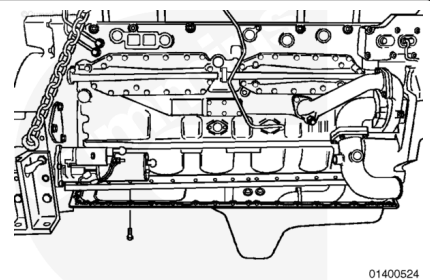


01400524

Use the sequence shown to torque the capscrews.

Tighten the capscrews.

Torque Value: 66 n•m [50 ft•lb]

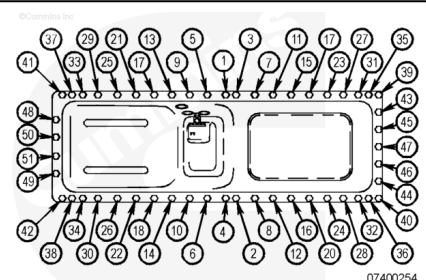


07400254

Finishing Steps

- Fill the oil pan with clean 15W-40 engine oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/89/89-007-037.html>).
- Operate the engine and check for leaks.

©Cummins Inc.

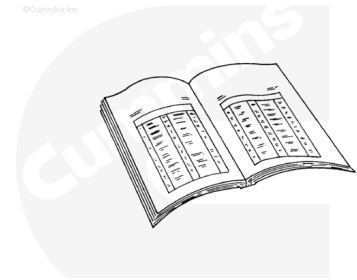

ck800wa

Last Modified: 30-May-2003
