

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

- Drain the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/89/89-008-045.html>).

©Cummins Inc.




ck800wa

Remove

Loosen the hose clamp.

Remove the radiator hose from the engine.

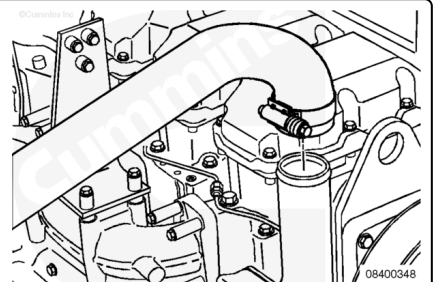


08400348

Inspect for Reuse

Inspect all hoses for cracks, cuts, or collapsing.

The silicone engine coolant hose will exhibit swelling due to the elasticity of the hose.

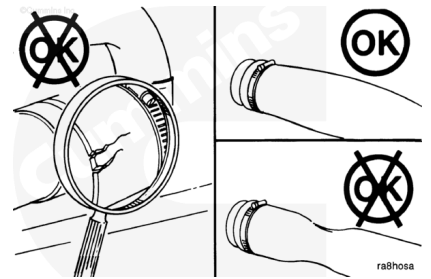


Install

Install the radiator hose.

Tighten the clamp.

Torque Value: 5 n•m [40 in-lb]

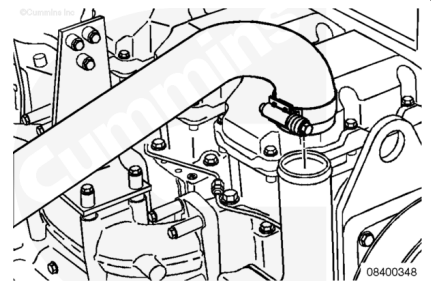

Finishing Steps

- Fill the cooling system. Refer to Procedure 008-018 (</qs3/pubsys2/xml/en/procedures/89/89-008-018.html>).

