


Trainings ▾

Inspect for Reuse

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

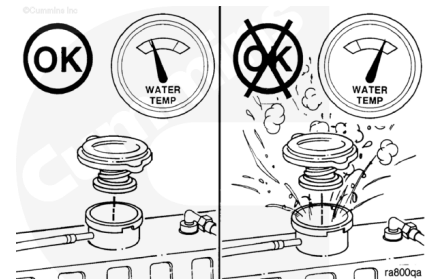


Remove the pressure cap.

Inspect the rubber inner seal and the brass outer seal of the pressure cap for damage.

Inspect the radiator or expansion tank fill neck for cracks or other damage. Refer to the radiator manufacturer's or vehicle manufacturer's instructions if the fill neck is damaged.

Make sure the correct pressure cap is used. Refer to Cooling System Specifications.

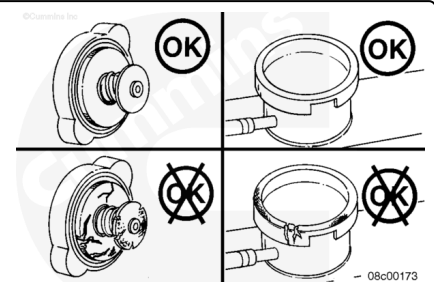

Pressure-test the radiator cap.

The pressure cap **must** seal within 14 kPa [2 psi] of the value stated on the cap, or it **must** be replaced.

