


Trainings ▾

Inspect for Reuse

⚠ CAUTION ⚠

The engine air intake must be filtered to prevent dirt and debris from entering the engine. If the intake air piping is damaged or loose, unfiltered air can enter the engine and cause premature wear.

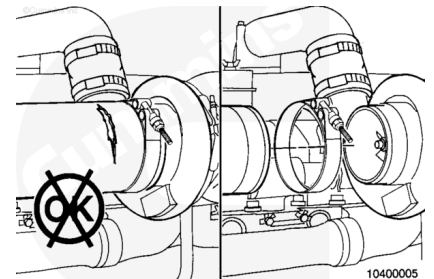


Inspect the system for damaged or loose intake piping.

Replace damaged pipes and tighten loose clamps.

Stall speed is **not** full power.


Operate the engine at rated rpm and load.

Listen for a high pitched noise from the turbocharger.

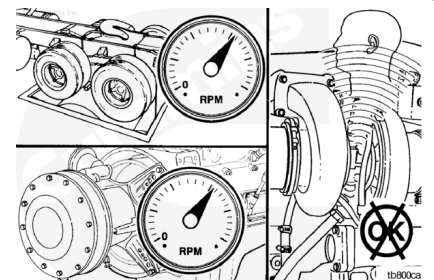

Listen for a turbocharger-to-exhaust manifold gasket leak.
Replace the gasket if a leak is detected. Refer to Procedure 010-033 in Section 10.

(</qs3/pubsys2/xml/en/procedures/89/89-010-033.html>)

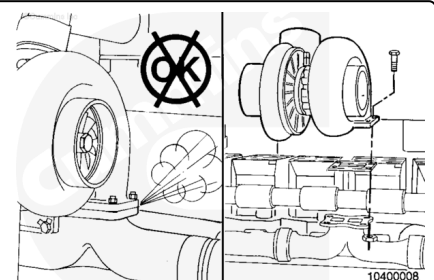


Listen for a turbine housing-to-bearing housing sealing surface leak. Tighten the capscrews if a leak is detected.

Torque Value: 20 n•m [177 in-lb]

If an air leak is still present, replace the turbocharger. Refer to Procedure 010-033 in Section 10.


(</qs3/pubsys2/xml/en/procedures/89/89-010-033.html>)

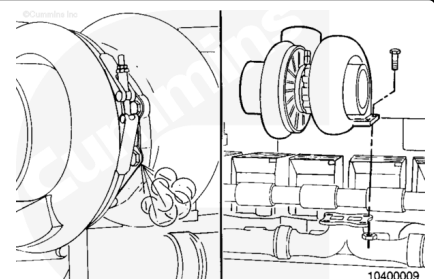

Listen for a compressor housing sealing surface air leak.
Tighten the v-band clamp if a leak is detected.

Torque Value: 8 n•m [71 in-lb]

If an air leak is still present, remove and replace the turbocharger. Refer to Procedure 010-033 in Section 10.
([/qs3/pubsys2/xml/en/procedures/89/89-010-033.html](http://qs3/pubsys2/xml/en/procedures/89/89-010-033.html))

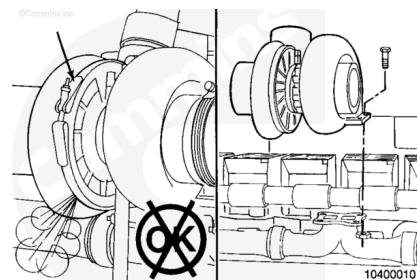

Last Modified: 07-Sep-2011
