

Trainings ▾

Preparatory Steps


- Remove turbocharger. Refer to Procedure 010-033 (</qs3/pubsys2/xml/en/procedures/89/89-010-033.html>).

Remove

Remove the four capscrews, nuts, the gasket, and the exhaust connection pipe from the exhaust manifold.


Discard the gasket.

Note : Industrial engines will not have this exhaust connection pipe.

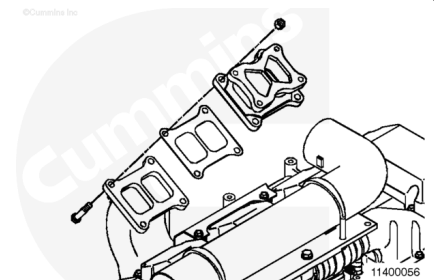

Clean and Inspect for Reuse

Inspect the exhaust connection pipe for cracks or damage.

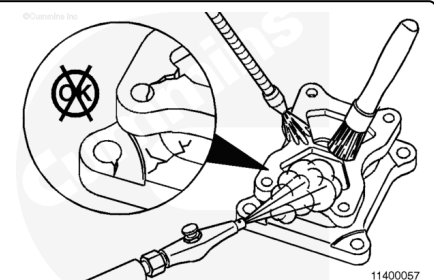


Install

Apply an anti-seize compound on the capscrew threads.

Install the four capscrews, nuts, the gasket, and the exhaust connection pipe on the exhaust manifold. Tighten the nuts.

Torque Value: 66 n•m [49 ft-lb]

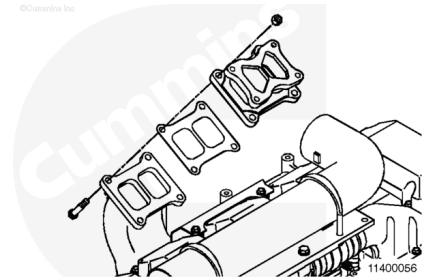

Finishing Steps

Install the turbocharger. Refer to Procedure 010-033 (</qs3/pubsys2/xml/en/procedures/89/89-010-033.html>).