

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the battery. Refer to Procedure 013-007 (</qs3/pubsys2/xml/en/procedures/89/89-013-020.html>).
- Disconnect the electrical connections from the starting motor.



Remove

⚠ WARNING ⚠

This assembly weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

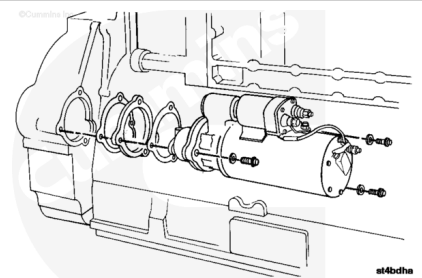

Remove the starting motor capscrews, the starter, spacers, and gaskets.

Discard the gaskets.


Note : Some engines do not use spacers and gaskets.

Clean and Inspect for Reuse

Powerpack

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

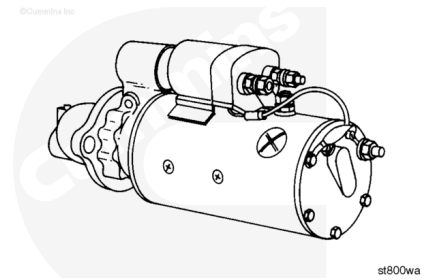

Clean the exterior of the starting motor with steam.

Inspect the gear, shaft, and the bushing for wear or damage.

Lubricate the bushing with clean engine oil.

Note : A pipe plug must be removed to lubricate the bushing on some starter motors.

Install


Note : Some engines do not use spacers.

Install any spacers or gaskets.

Install the starting motor and capscrews.

Tighten the capscrews.

Torque Value: 279 n•m [206 ft-lb]

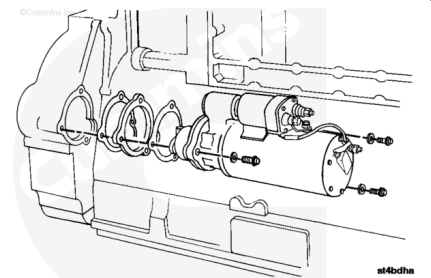

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.



- Install the electrical connections to the starting motor.

- Connect the batteries. Refer to Procedure 013-007 (</qs3/pubsys2/xml/en/procedures/89/89-013-020.html>).

Last Modified: 20-Jun-2003
