


Trainings ▾

Remove


Select the appropriate-size Allen wrench and remove the pipe plug.

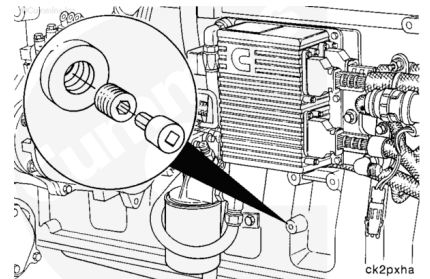

Clean

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

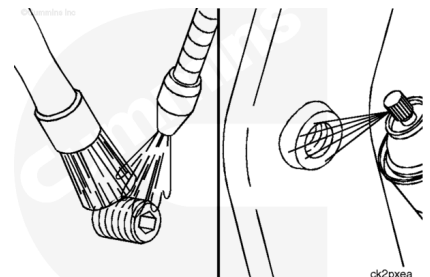

⚠ WARNING ⚠

Some solvents are flammable and toxic. Read the manufacturer's instructions before using.


Use spray cleaner, Part Number 3824510 or equivalent, to clean the threads of the pipe plugs and threaded bores.

Inspect for Reuse

Inspect the threads of the pipe plugs for mutilation or damage.

Inspect the threaded bores for damage.

Repair the bores, if necessary.

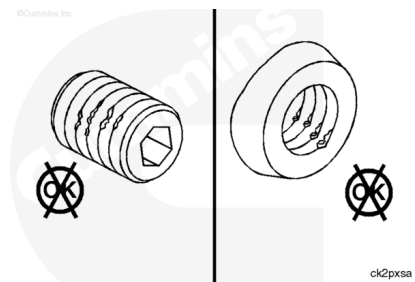


Install

Apply a film of pipe plug sealant, Part Number 3375066 or equivalent, to the threads.

Install and tighten the pipe plugs.

If torque value is not specified, refer to the following chart for torque values:

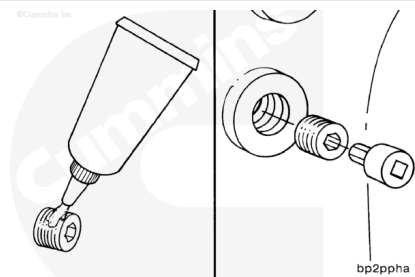

Tighten the pipe plugs to the appropriate torque values.

Pipe Plug Torque Values						
Thread	Size		Torque		Torque	
	Actual Thread O.D.		In Aluminum Components		In Cast Iron or Steel Components	
in.	mm	[in]	N•m	[ft-lbs]	N•m	[ft-lbs]
1/16	8.1	[0.32]	5	[45 in-lb]	15	[10]
1/8	10.4	[0.41]	15	[10]	20	[15]
1/4	13.7	[0.54]	20	[15]	25	[20]
3/8	17.3	[0.68]	25	[20]	35	[25]
1/2	21.6	[0.85]	35	[25]	55	[40]
3/4	26.7	[1.05]	45	[35]	75	[55]
1	33.5	[1.32]	60	[45]	95	[70]
1 1/4	42.2	[1.66]	75	[55]	115	[85]
1 1/2	48.3	[1.90]	85	[65]	135	[100]

ck8ppoa