

Trainings ▾


Tool Number

3164435

Cylinder Head Capscrew Length Gauge

Use to check the length of the cylinder capscrews.

©Cummins Inc

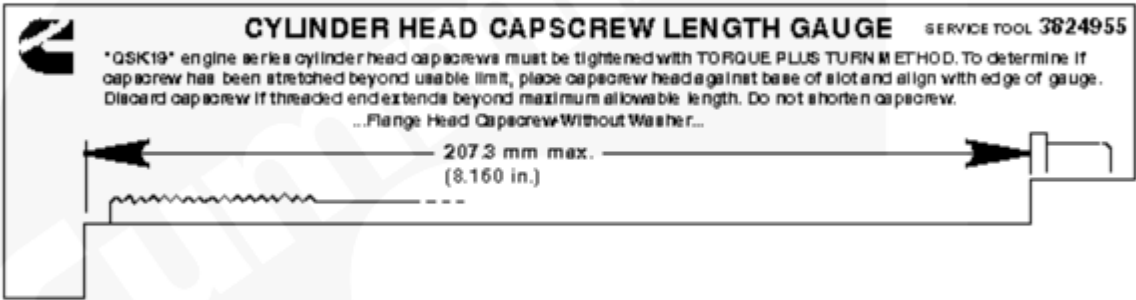

01400399


Tool Number

3163606

Valve Spring Compressor

Use to compress the valve spring to allow the valve to be removed or installed. Use with Plate, Part Number 3164594 (M10 x 1.5 thread).

©Cummins Inc

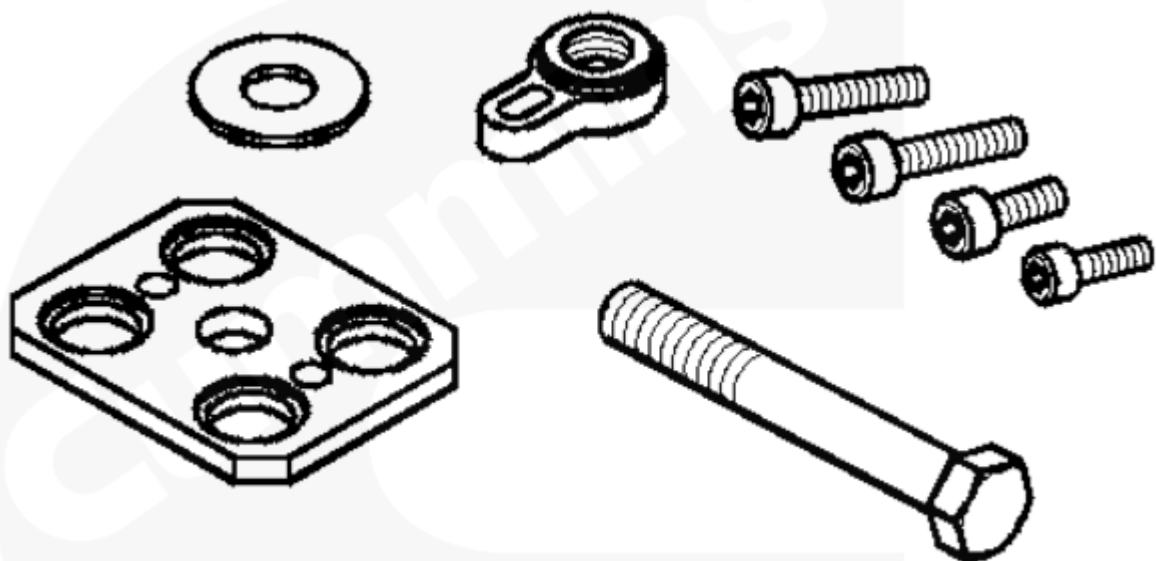

3163175


Tool Number

3164341

Cylinder Head Leak Test Kit

Use to check for coolant leaks in the cylinder head. Use with pressure regulator assembly, Part Number 3164231.

©Cummins Inc

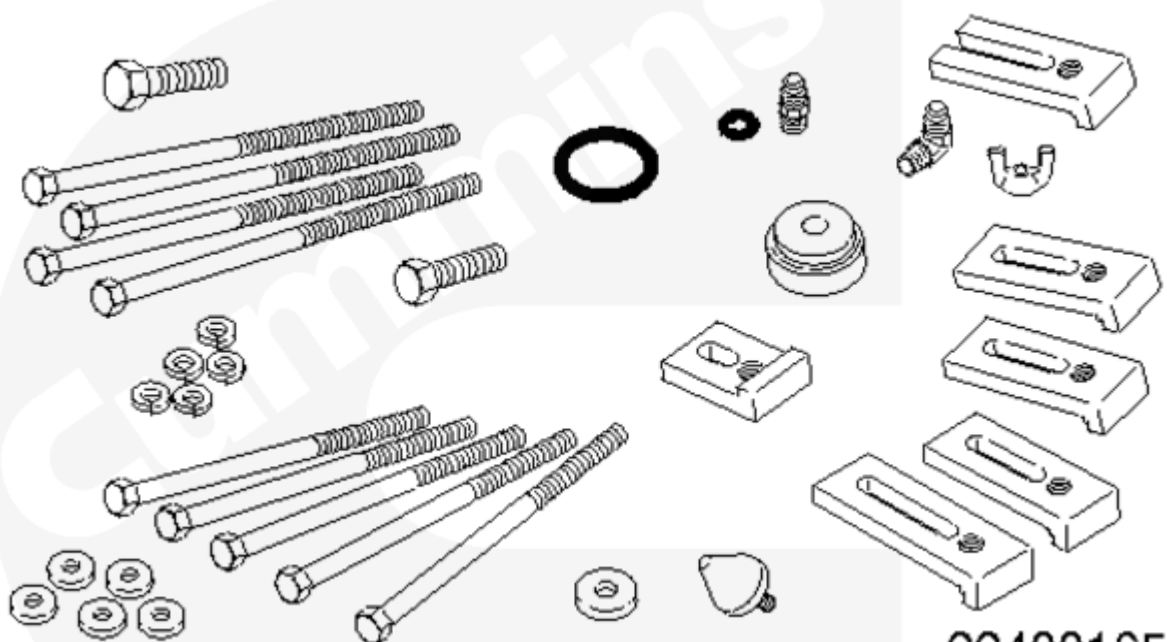

22400165


Tool Number

3164438

Depth Gauge Assembly

Use to measure cylinder liner counterbore ledge angle, injector protrusion, liner protrusion, counterbore depths, and valve intrusion and/or protrusion.

©Cummins Inc

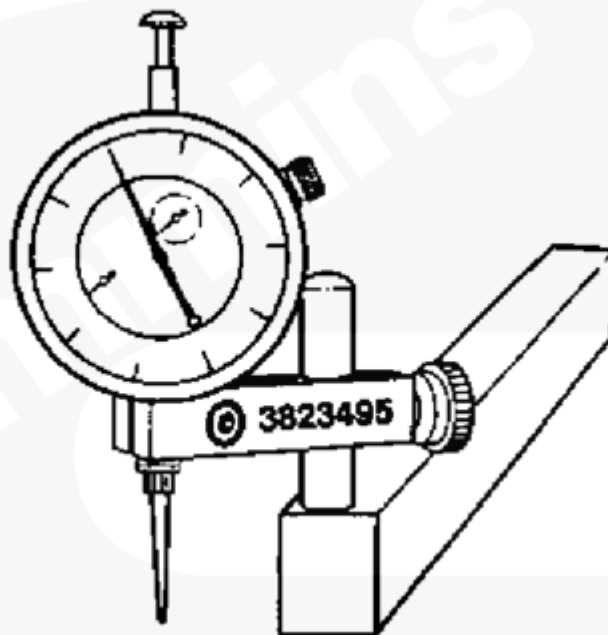**3823495**


Tool Number

3823495

Depth Gauge Assembly

Use to measure cylinder liner counterbore ledge angle, injector protrusion, liner protrusion, counterbore depths, and valve intrusion and/or protrusion.

©Cummins Inc

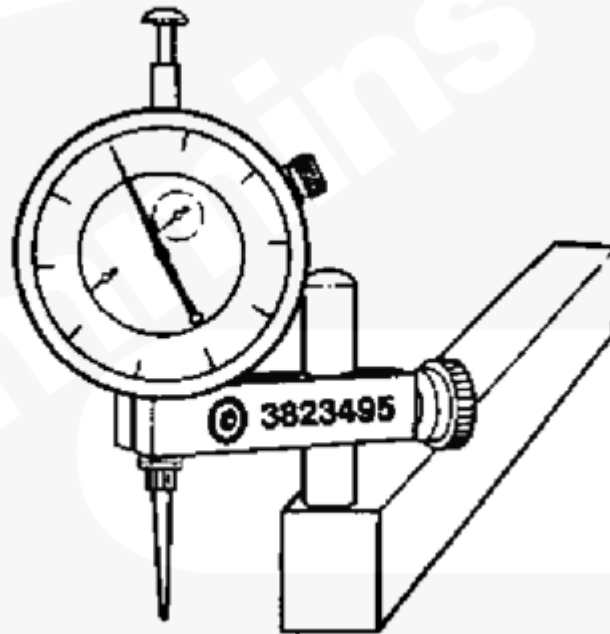**3823495**


Tool Number

3164427

Valve Guide Replacer

Use to remove and install valve guides.

©Cummins Inc

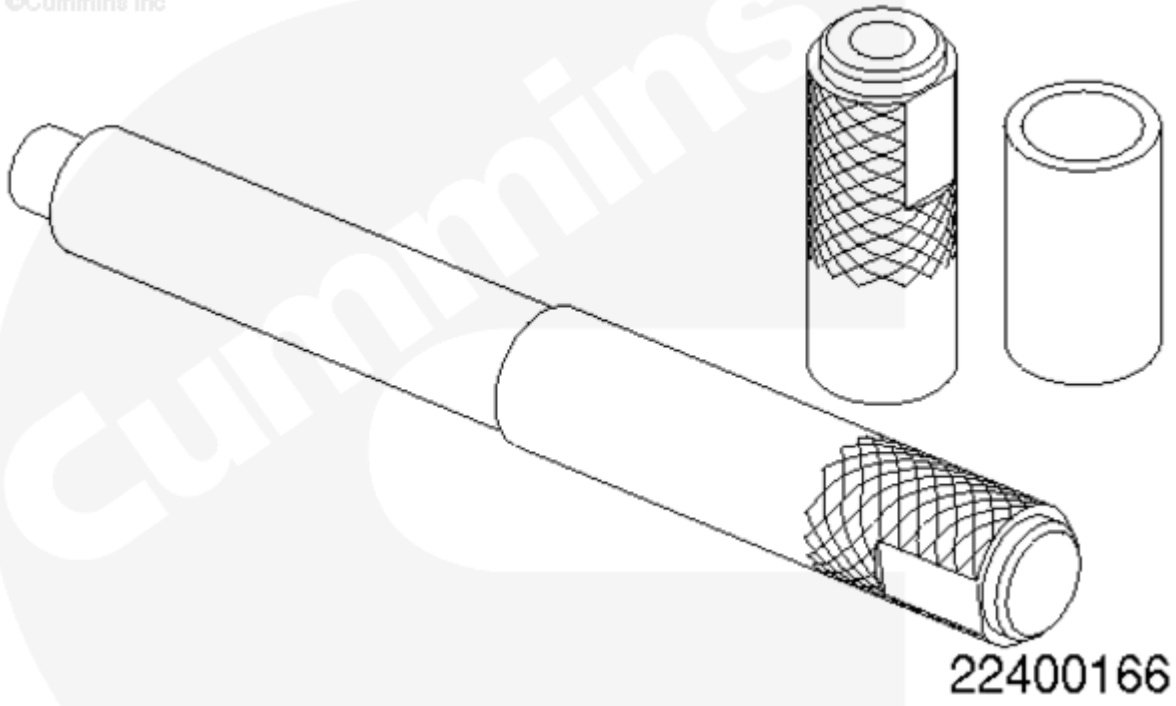


Tool Number

3164790

Valve Seat Installer

Use to install valve seats. Use with valve seat installer, Part Number 3164978.

©Cummins Inc

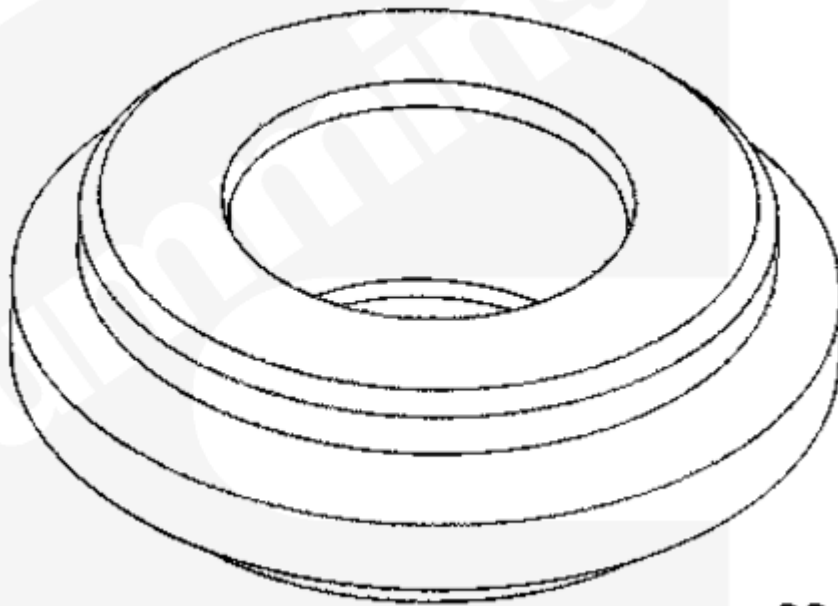

22400167


Tool Number

3164373

Crosshead Guide Installer

Use to install crosshead guides.

©Cummins Inc

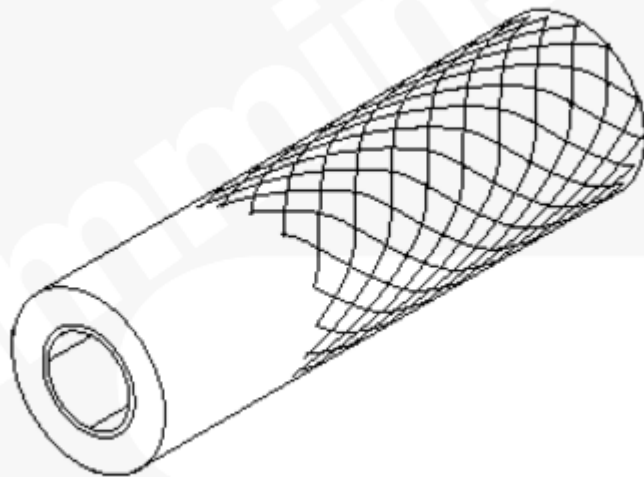

22400183


Tool Number

3164430

Valve Stem Seal Installer

Use to install valve stem seals.

©Cummins Inc

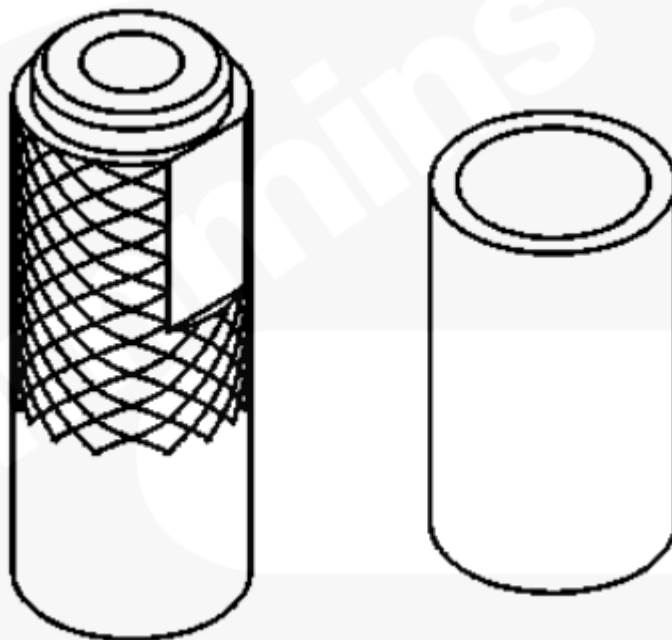

22400182


Tool Number

3163293

Boot Pliers

Use to remove valve stem seals.

©Cummins Inc

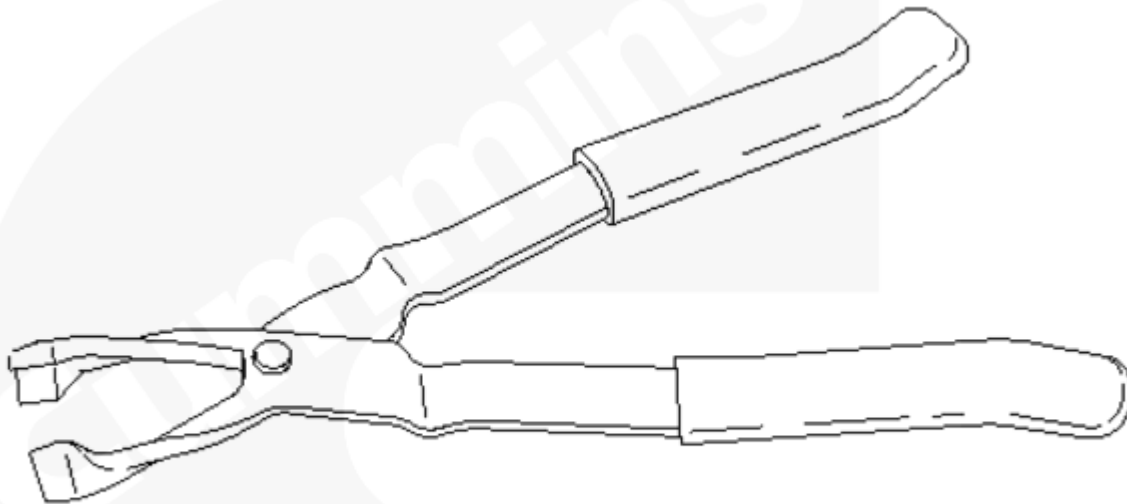

22400181

Tool Number



3163720

Dowel Pin Extractor

Use to remove dowel pins and crosshead guides.

© Cummins Inc.

© Cummins Inc.

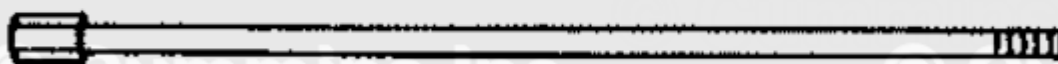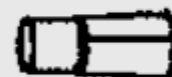

© Cummins Inc.

© Cummins Inc.

ck8toge

Last Modified: 23-Sep-2003
