


Trainings ▾

Remove

ICON™

⚠ WARNING ⚠


Batteries can emit explosive gases. To avoid personal injury, always ventilate the compartment before servicing the batteries. To avoid arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

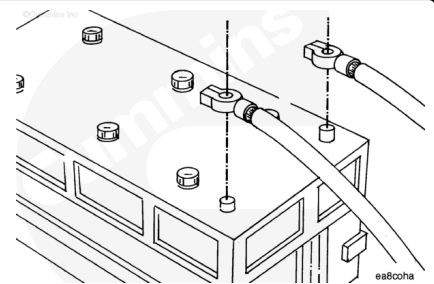

Turn the keyswitch to the OFF position. Disconnect the vehicle battery cables from the battery, if necessary.

Note : Disconnecting the vehicle battery connections can require that the engine ECM real-time clock be reset using INSITE™.


Disconnect the ICON™ engine harness battery connectors from the batteries. Disconnect the ICON™ harness negative (-) ring terminal (black wire) wire No. 003 from the negative (-) battery connector first.

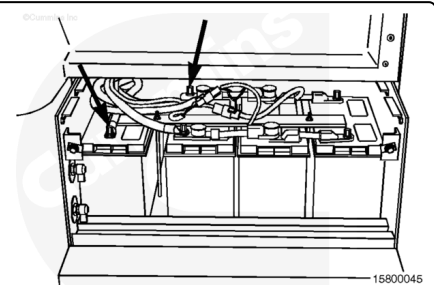


Disconnect the ICON™ harness positive (+) ring terminal (red wire) wire No. 013 from the positive (+) battery connector.

Remove the fuse from the fuse holder on the ICON™ engine harness.


Remove the fuse from the fuse holder on the ICON™ cab harness.

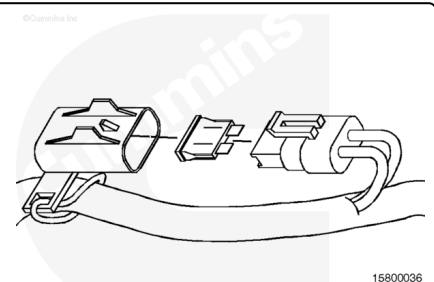


Disconnect the hood tilt switch from the ICON™ engine harness.

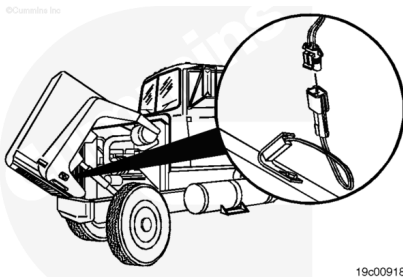


Disconnect the starter relay from the ICON™ engine harness.

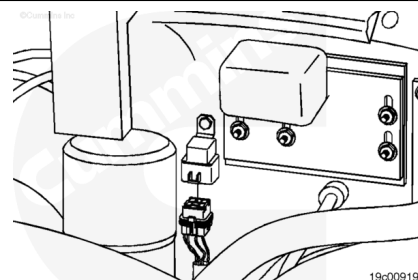


Disconnect the engine start alarm from the ICON™ engine harness.

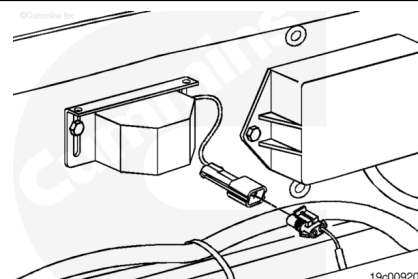

Disconnect the ICON™ idle control module A and B connectors from the ICON™ engine harness.

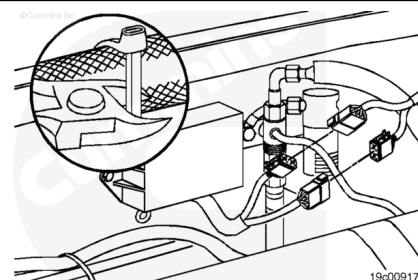


Remove the boot from around the gearshift and disconnect the neutral position switch connector from the ICON™ engine harness.

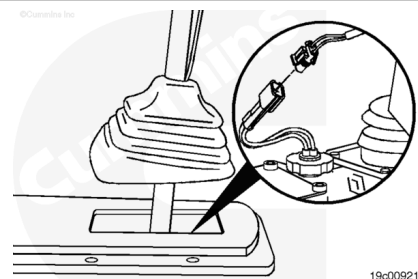


Locate and disconnect the OEM connector that contains the engine ECM keyswitch input wire splice to the ICON™ idle control module keyswitch input wire.

Cut the spliced wire using wire crimp tool, Part Number 3822930.

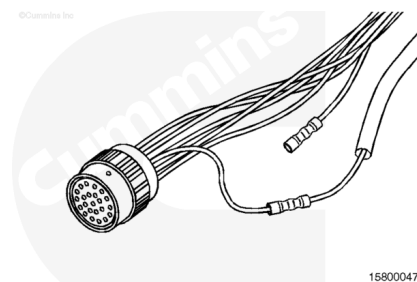


Disconnect the ICON™ engine harness 14-pin pass-through connector from the mating 14-pin pass-through connector mounted on the firewall.

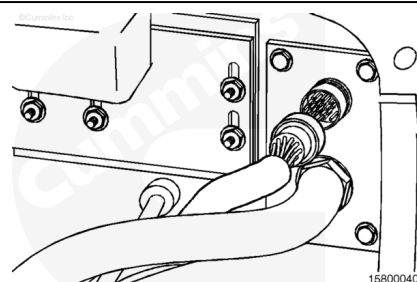

Remove any nylon wire ties used to secure the engine harness to the vehicle or other wiring.

Remove the ICON™ engine harness.

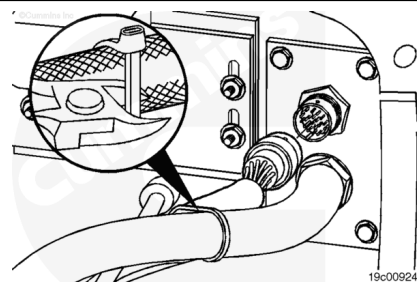


Install

ICON™


⚠ CAUTION ⚠

Prior to connecting the engine harness connectors to the electrical components, coat the connectors with lubricant DS-ES, Part Number 3824934, or equivalent. This lubricant prevents corrosion, enabling good electrical contact.

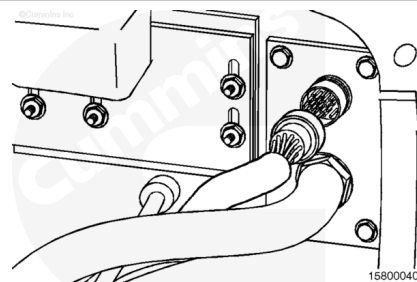


Connect the ICON™ engine harness 14-pin pass-through connector to the mating 14-pin pass-through connector mounted on the vehicle's firewall.


Connect the ICON™ idle control module A and B connectors to the ICON™ engine harness.

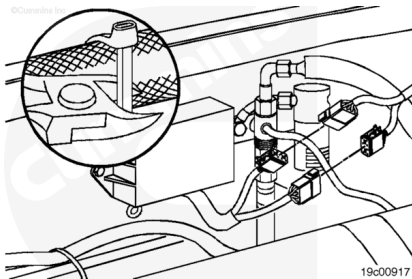


Connect the engine start alarm connector to the ICON™ engine harness connector.

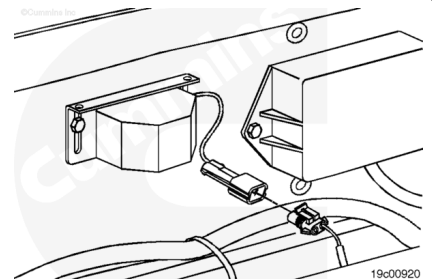


Connect the hood tilt switch connector to the ICON™ engine harness connector.

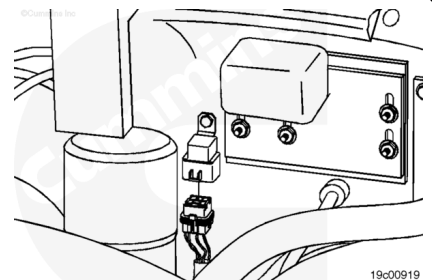

Connect the hood tilt switch connector to the ICON™ engine harness connector.

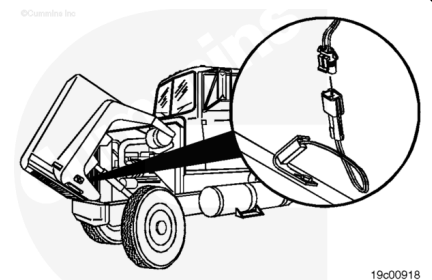


Connect the neutral position switch connector to the ICON™ engine harness connector and install the boot around the gearshift.

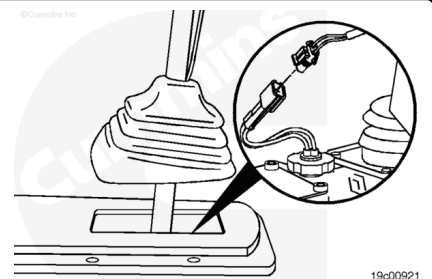

Locate the disconnected OEM connector containing the severed keyswitch input wire butt splice. Using the appropriate butt splice, splice the engine ECM keyswitch input wire to the


ICON™ idle control module keyswitch input wire. Heat-shrink the splice.

Connect the OEM connector.

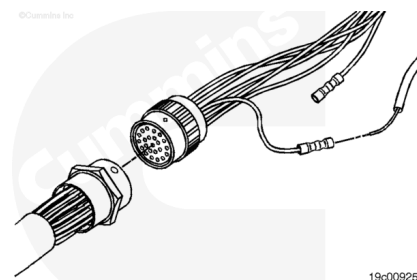


Install the fuse into the fuse holder on the ICON™ cab harness.

Install the fuse into the fuse holder on the ICON™ engine harness.

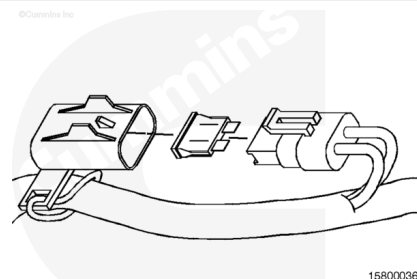


Connect the ICON™ engine harness battery connectors to the batteries.

Connect the ICON™ harness positive (+) ring terminal (red wire) wire Number 013 to the positive (+) battery connector first. Connect the ICON™ harness negative (-) ring terminal (black wire) wire Number 003 to the negative (-) battery connector last.

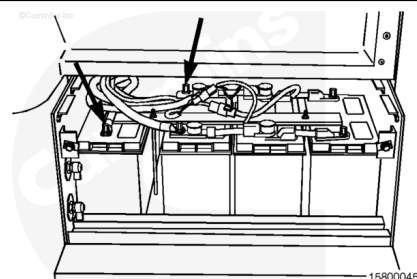

⚠ WARNING ⚠

Batteries can emit explosive gases. To avoid personal injury, always ventilate the compartment before servicing the batteries. To avoid arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

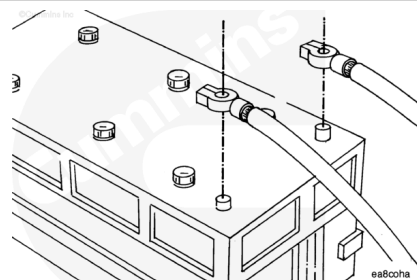

Connect the vehicle battery cables to the battery.

Use nylon wire ties to secure the engine harness to the vehicle frame or to other wiring.

