


Trainings ▾

General Information


The rail pressure sensor is mounted in the rail line between the fuel pump and the rail inlet to the block. This sensor monitors the fuel pressure in the rail line.

Note : Each engine type will have the sensor mounted in a different location. Refer to the appropriate base engine manual.

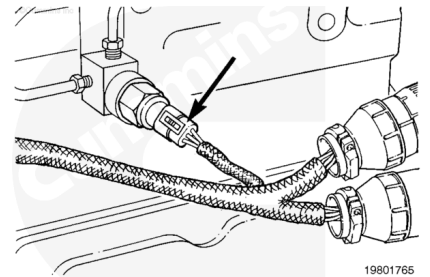


Remove

Disconnect the sensor by lifting the locking tab and pulling apart the connector.

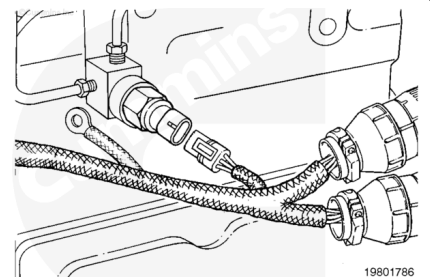

Remove the sensor.

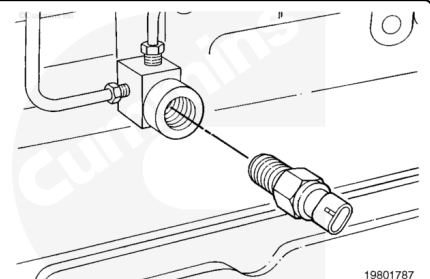


Install

Verify that the new sensor has an o-ring. Lubricate the o-ring with clean engine oil.


Install the new sensor. Tighten the sensor.

Torque Value: 16 n•m [142 in-lb]

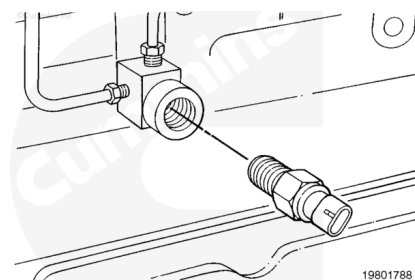

⚠ CAUTION ⚠

Use only Cummins recommended lubricant DS-ES, Part No. 38232934. Other lubricants, such as lubricating oil or grease in the connectors, can cause ECM damage, poor engine performance, or premature connector pin wear.

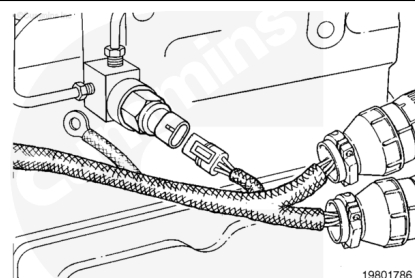


Apply a small amount of lubricant to the connector terminals. Do **not** fill the entire connector cavity with lubricant.

Connect the sensor connector. Make sure the locking tab clicks into place.


Voltage Check

Disconnect the rail pressure sensor from the main engine harness.

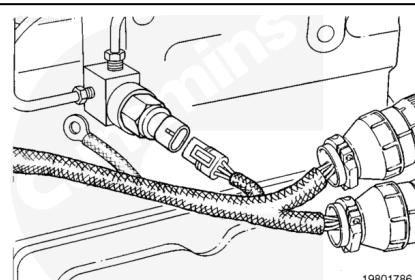

⚠ CAUTION ⚠

**To avoid pin and harness damage, use the following test lead when taking a measurement:
Part No. 3824774 - breakout cable.**

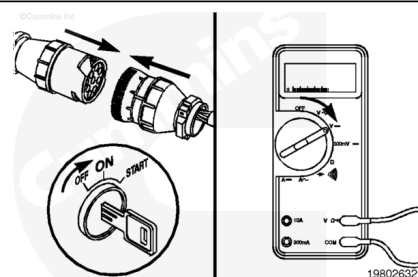

Connect the breakout cable, Part No. 3824774, to the rail pressure sensor and the main engine harness.


Set multimeter to read VDC.

Turn keyswitch ON.

Install supply (pin A) and return (pin B) into the multimeter.


The voltage should measure between 4.75 VDC and 5.25 VDC.

If the voltage is **not** between 4.75 VDC and 5.25 VDC, troubleshoot the main engine harness. Refer to Procedures 019-250 and 019-043.

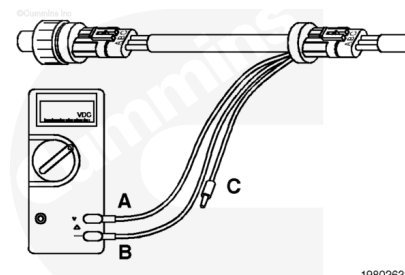


Connect all components after completing the repair.

Disconnect the rail pressure sensor from the main engine harness.

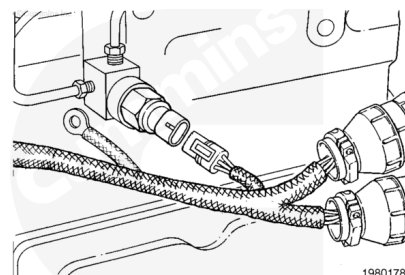

⚠ CAUTION ⚠

**To avoid pin and harness damage, use the following test lead when taking a measurement:
Part No. 3824774 - breakout cable.**

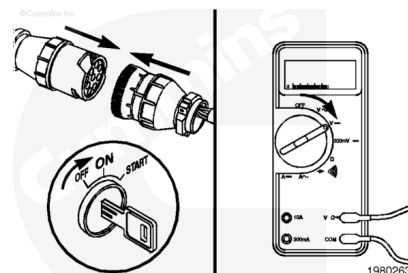

Connect the breakout cable, Part No. 3824774, to the rail pressure sensor and the main engine harness.


Set multimeter to read VDC.

Turn keyswitch ON.

Install signal (pin C) and return (pin B) into the multimeter.

The voltage should measure between 0.46 VDC and 4.56 VDC.

If the voltage is **not** between 0.46 VDC and 4.56 VDC, replace the rail pressure sensor. Refer to Procedure 019-115.

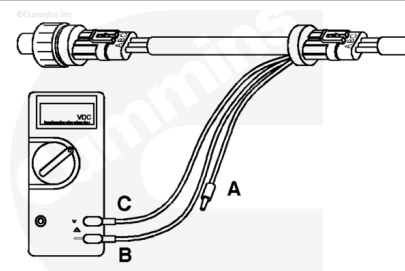

Connect all components after completing the repair.

©Cummins Inc.

Last Modified: 01-Apr-2003
