



Service Tool Instruction

Service Tool Instruction
Number: 3377933

Revision Level:

Released Date: 18-nov-
2002


Description

Valve Stem Seal Installer

Purpose

This document provides instructions for the valve stem seal installer, Part Number 3164430. The valve stem seal installer is used to install the valve seal on the QSK23 and QSK78 engines.

©Cummins Inc

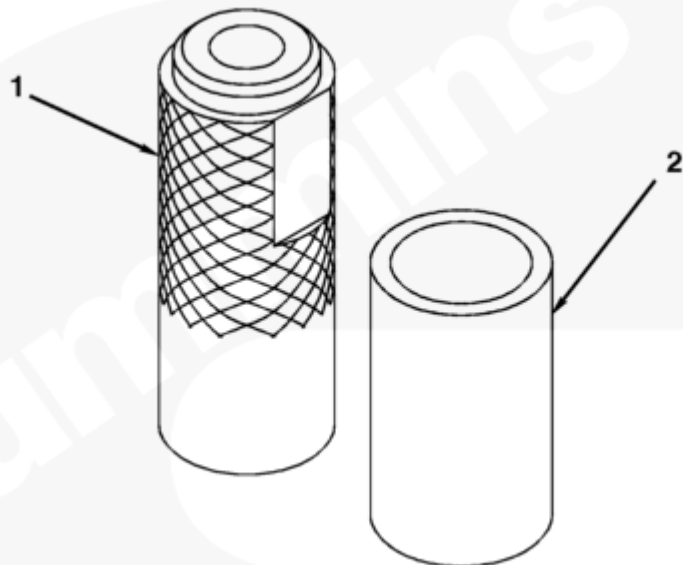

22400158


Table 1, Valve Stem Seal Installer, Part Number 3164430

Item Number	Part Number	Description	Quantity
1	3164431	Valve stem seal installer	1
2	3164432	Spacer	1

Table 2, Items Used with the Valve Stem Seal Installer, Purchased Separately

Item Number	Part Number	Description	Quantity
Not shown	3163293	Boot pliers	1


Remove the valve stem seal with the boot pliers, Part Number 3163293, using a twist-and-pull motion.

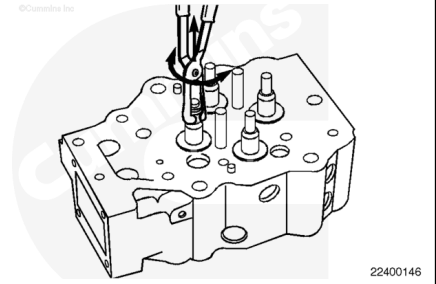

Make sure the valve guide and valve stem seal are clean and dry before installation.

Apply Lubriplate™ on the stem.

Install the new valve stem seal on the valve stem. Push the valve stem seal down until contact is made with the top of the valve guide.

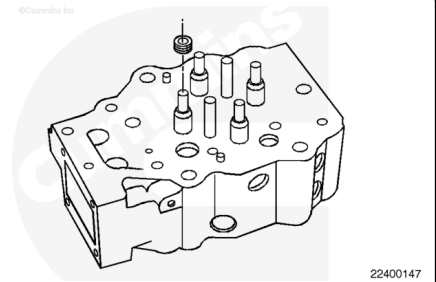

Slide the spacer, Part Number 3164432, over the valve stem and down over the valve guide.

Using a plastic mallet and the valve stem seal installer, Part Number 3164431, gently tap the valve seal into place.

