

Trainings ▾


Remove

For antipolishing ring liners, removal of the antipolishing ring is necessary before removing the piston kits. Refer to Procedure 001-054 in Section 1.

(/qs3/pubsys2/xml/en/procedures/10/10-001-054-tr.html)


The cylinder liners can be removed by using either:

- Cylinder liner puller (universal), Part Number 3163745, and puller plate (S600), Part Number 3162462.
- Cylinder liner puller (universal), Part Number 3376015.

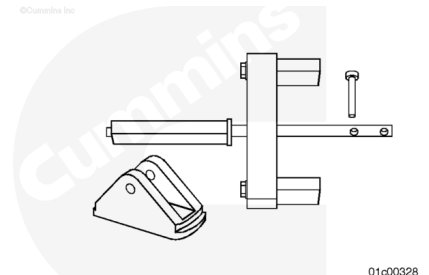

⚠ CAUTION ⚠


The cylinder puller must be installed and used as described to reduce the possibility of damage to the cylinder block. The puller plate must be parallel to the main bearing saddles and must not overlap the cylinder liner outside diameter.

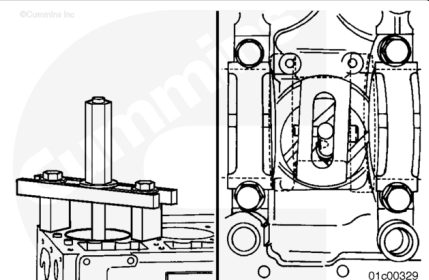

Insert the cylinder liner puller onto the top of the cylinder block.

⚠ CAUTION ⚠

Once a factory shim has been removed from a cylinder liner, it can not be reused. The used shim must be discarded and a new factory shim installed.

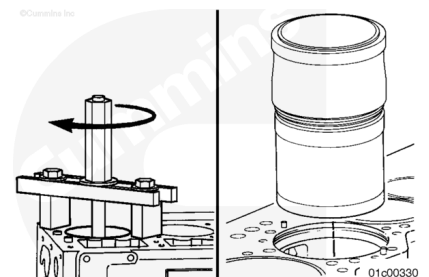

The cylinder liner puller **must** be centered on the top of the cylinder block.

Turn the puller jackscrew **clockwise** to loosen the cylinder liner from the cylinder block.

Use both hands to remove the cylinder liner.


Remove and discard the o-ring seals.

If equipped, remove and discard the retained factory brass shim.

- Gently bend out the retention tabs and slide the shim off the cylinder liner. Discard the shim.

Note : If the engine previously had the counterbore mid-stop surface machined, the non-retained service shim must be removed, measured, and discarded. Shim thickness measurements are required to make sure the correct thickness service shim is installed on reassembly.

Use Dykem™, or equivalent, to place a mark on the intake air side of the cylinder liner to show cylinder liner orientation.

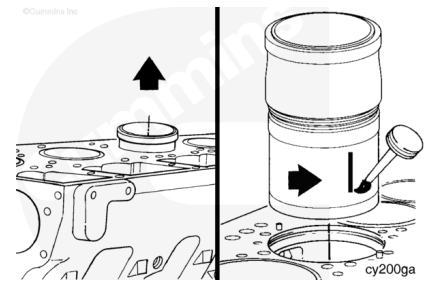

Use Dykem™, or equivalent, to mark the cylinder number on each cylinder liner.

