


Trainings ▾

Maintenance Check

Inspect the fan hub for the following:

- Freedom of rotation
- Cracks
- Grease seal leakage.

Repair or replace the fan hub if the fan hub does **not** rotate freely or if there is evidence of cracks or grease seal leakage.

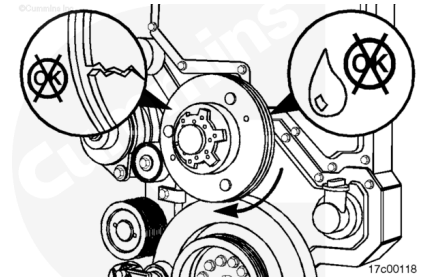

Measure the fan hub end clearance. Fan hubs with “step-bore” shafts and **not** bearing spacers **must** be 0.08 to 0.25 mm [0.003 to 0.010 in] end clearance.

Fan hubs with “through-bore” shafts with inner and outer bearing spacers **must** be 0.08 to 0.41 mm [0.003 to 0.016 in] end clearance.

