


Trainings ▾

Remove


Remove the belt tensioner mounting capscrew.

Remove the belt tensioner from the bracket.

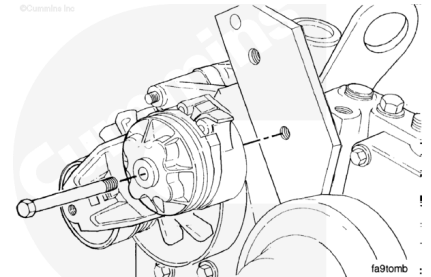

Inspect for Reuse

Inspect the tensioner bushing between the arm and the spring case.

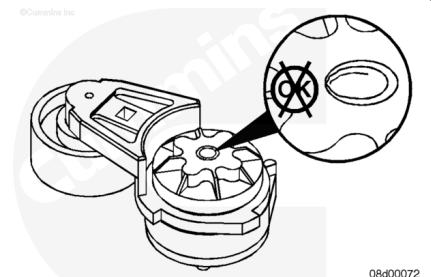


Install

Install the belt tensioner.

Install and tighten the belt tensioner capscrew.

Torque Value: 43 n•m [32 ft-lb]

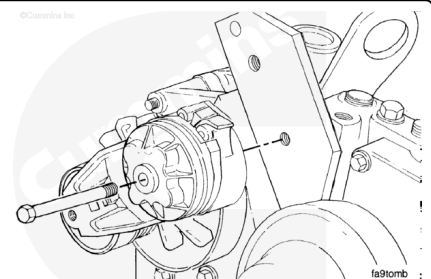

Lift and hold the tensioner. Install the drive belt and release the tensioner.

Service Tip:

If difficulty is experienced installing the drive belt, for example, the belt seems too short, position the belt over the grooved pulleys first; then, while holding the tensioner up, slide the belt over the water pump pulley.

